



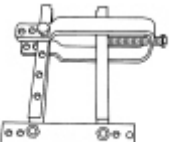
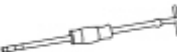
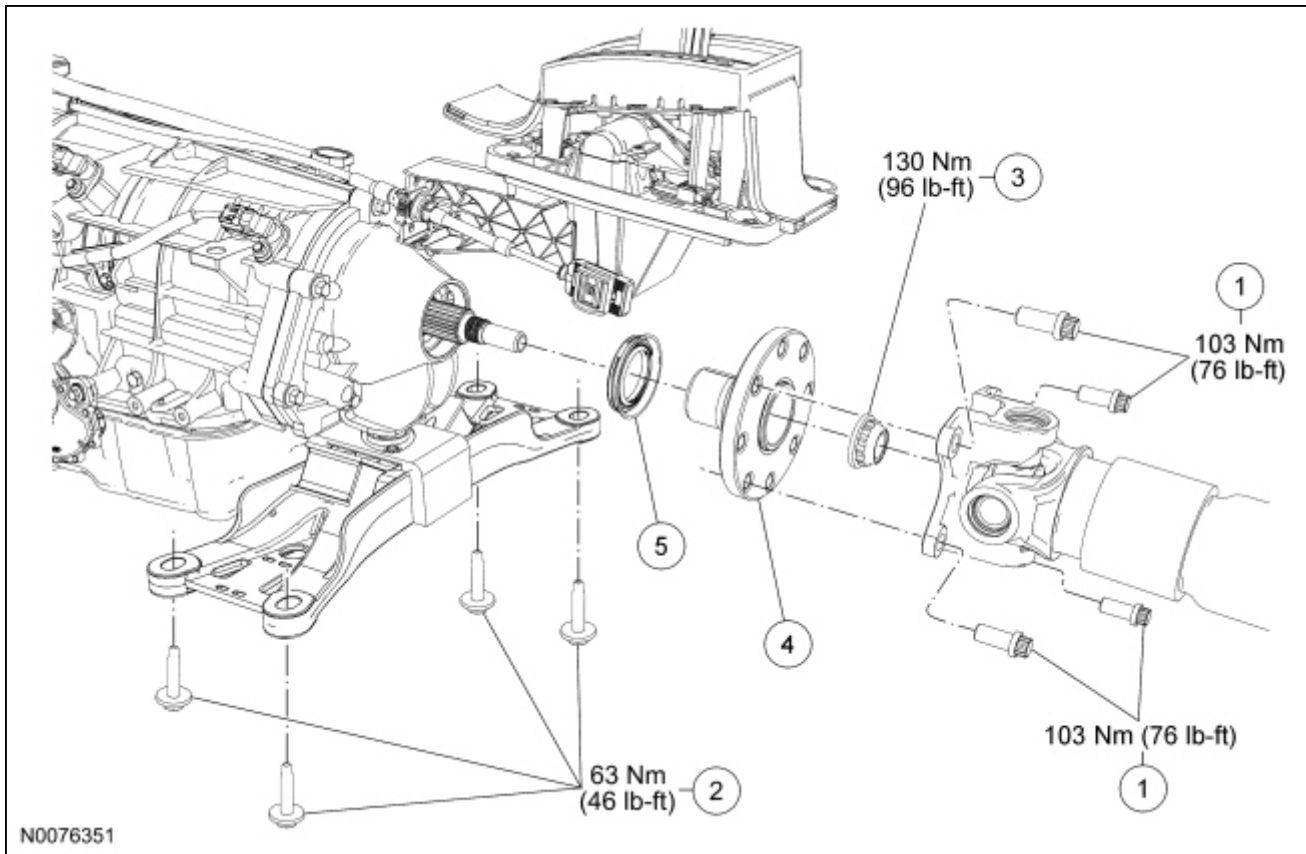


Extension Housing Seal

Special Tool(s)


 <p>ST2440-A</p>	Installer, Drive Pinion Flange 205-479
 <p>ST2498-A</p>	Installer, Drive Pinion Oil Seal 205-115
 <p>ST2416-A</p>	Installer, Output Shaft Flange 307-404
 <p>ST2937A</p>	Remover, Output Flange 307-523
 <p>ST1758-A</p>	Remover, Torque Converter Fluid Seal 307-309 (T94P-77001-BH)
 <p>ST1185-A</p>	Slide Hammer 100-001 (T50T-100-A)

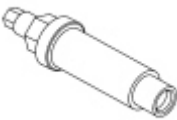


Item	Part Number	Description
1	W701357	Transmission output shaft flange coupler bolts (4 required)
2	W704971	Transmission crossmember-to-floor pan screws
3	W701357	Transmission output shaft flange nut
4	7089	Transmission output shaft flange
5	7052	Extension housing seal

Removal


1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to [Section 100-02](#).
2. Remove the driveshaft. For additional information, refer to [Section 205-01](#).
3. Using a suitable transmission jack, support the transmission.
4. Remove the 4 transmission crossmember-to-floor pan screws only and lower the transmission enough to gain access to the extension housing seal.

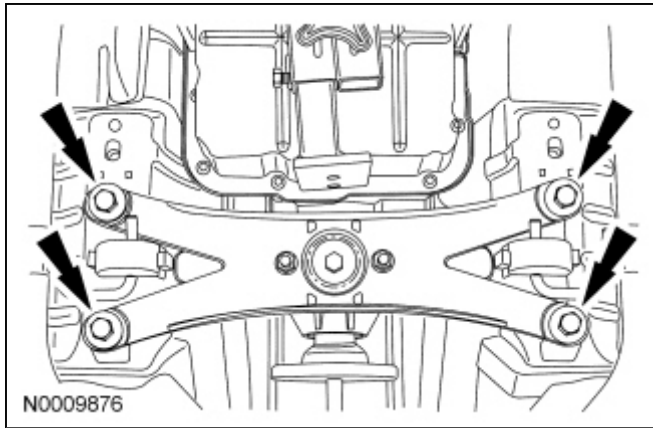


5. Remove and discard the transmission output shaft flange nut.

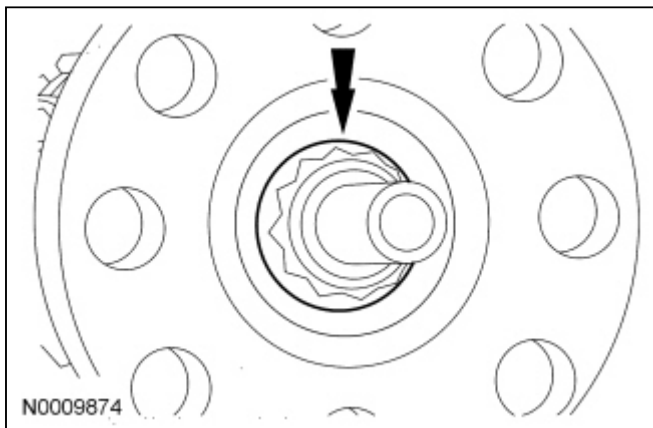

6. Using the Output Flange Remover, remove the output shaft flange.

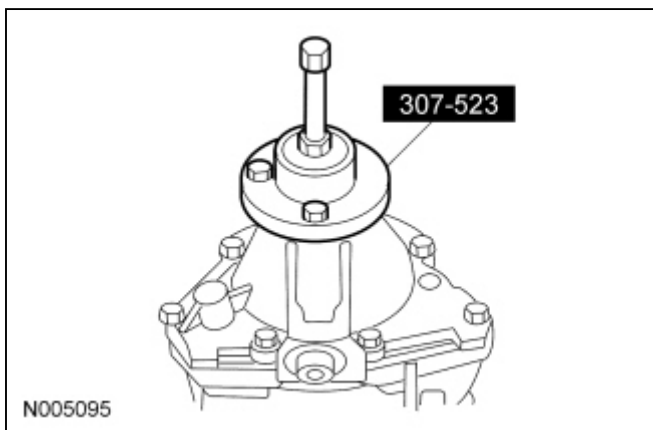


7. Using the Torque Converter Fluid Seal Remover and Slide Hammer, remove and discard the extension housing seal.

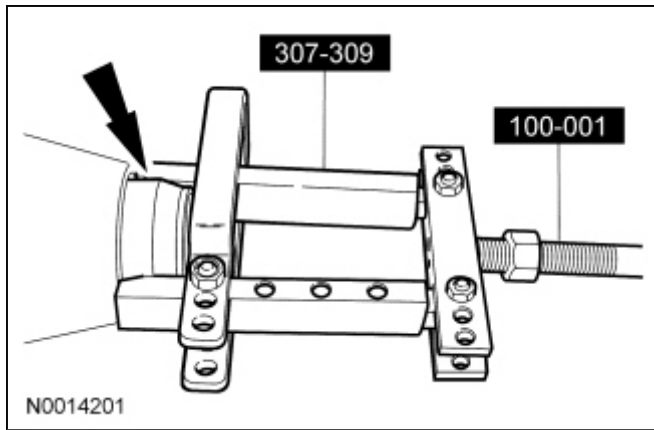


Installation

1. **NOTE:** Make sure the extension housing seal is correctly installed onto the Drive Pinion Oil Seal Installer and the garter spring is in the correct position.


Using the Drive Pinion Oil Seal Installer, install the new extension housing seal.

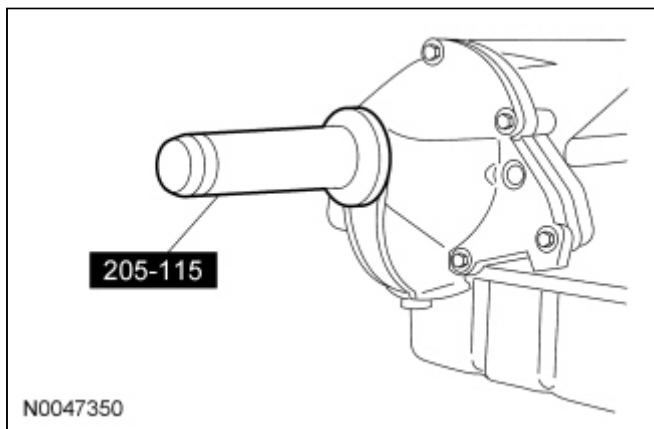


2. Using the Output Shaft Flange Installer and the Drive Pinion Flange Installer, install the output flange.

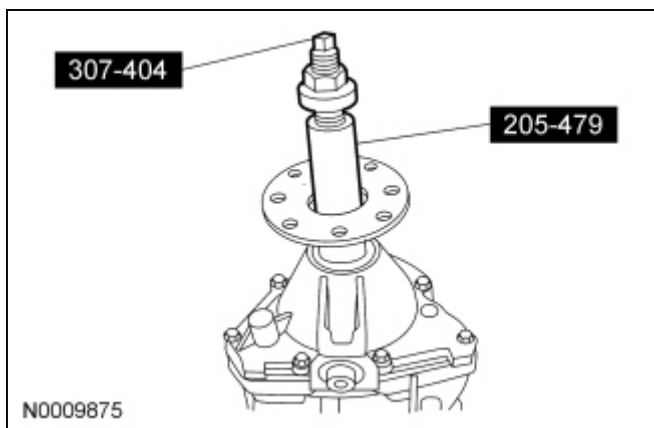

3. Install a new transmission output shaft flange nut.
 - Tighten to 130 Nm (96 lb-ft).

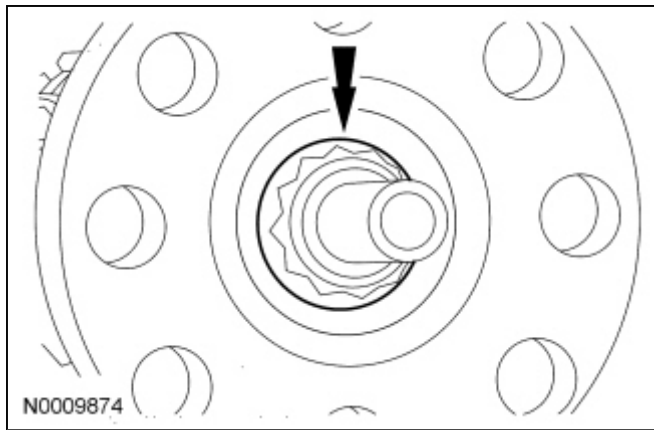

4. Install the 4 transmission crossmember-to-floor pan screws only.
 - Tighten to 63 Nm (46 lb-ft).

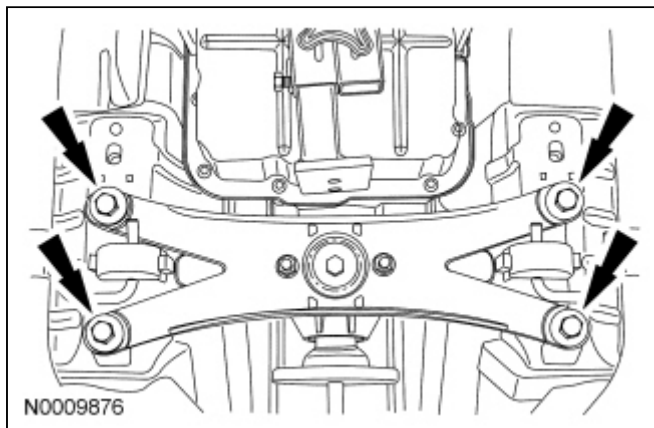

5. Install the driveshaft. For additional information, refer to [Section 205-01](#).
 6. Check the transmission fluid level. For additional information, refer to [Transmission Fluid Level Check](#) in this section.
-