


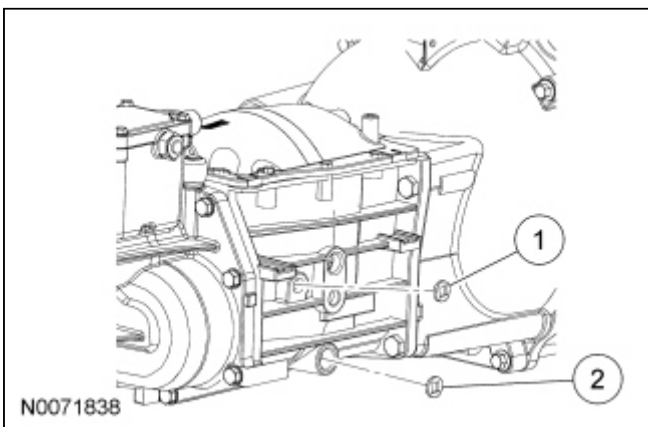
## Transmission Draining and Filling

### Special Tool(s)

	Oil Suction Gun 303-D104 (D94T-9000-A) or equivalent
---	--

### Material

Item	Specification
MERCON® V Automatic Transmission Fluid XT-5-QM (or XT-5-QMC) (US); CXT- 5-LM12 (Canada)	MERCON® V
Thread Sealant with PTFE TA-24	WSK-M2G350- A2




Item	Part Number	Description
1	7A010	Fill plug
2	7A010	Drain plug

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to [Section 100-02](#).
2. **NOTE:** Drain the transmission while the transmission fluid is warm.


**NOTE:** Position a drain pan under the transmission.

Remove the drain plug and drain the fluid.

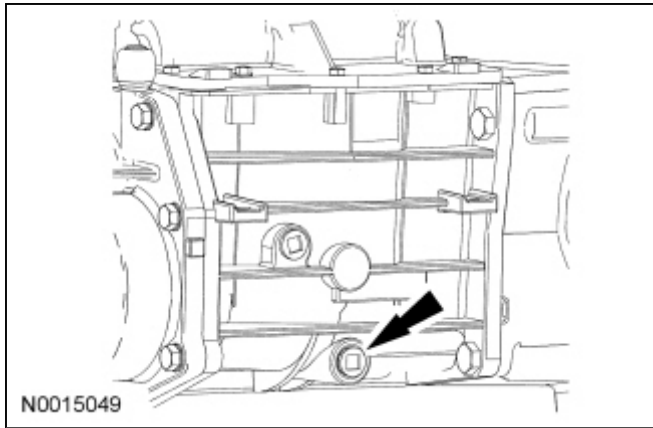

3. Clean the drain plug. Apply thread sealant and reinstall.
  - Tighten to 18 Nm (159 lb-in).
4. **NOTE:** Prior to removal, clean the area around the fill plug.


Remove the fill plug.

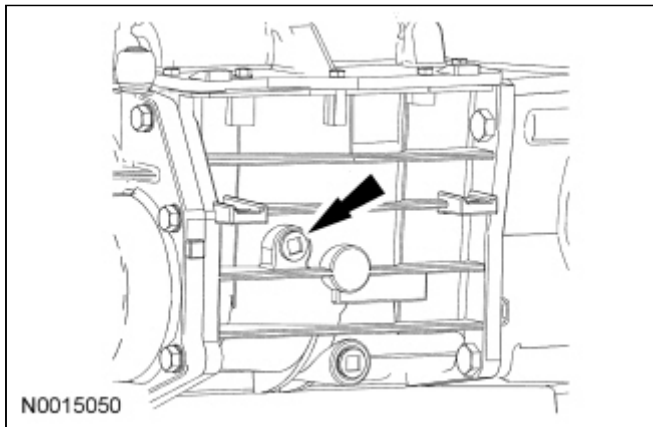

5. **NOTE:** Do not overfill the transmission. This will cause transmission fluid to be forced out of the case.

Using an Oil Suction Gun, fill the transmission with the recommended fluid.

- Transmission capacity is 2.6L (2.8 qt).

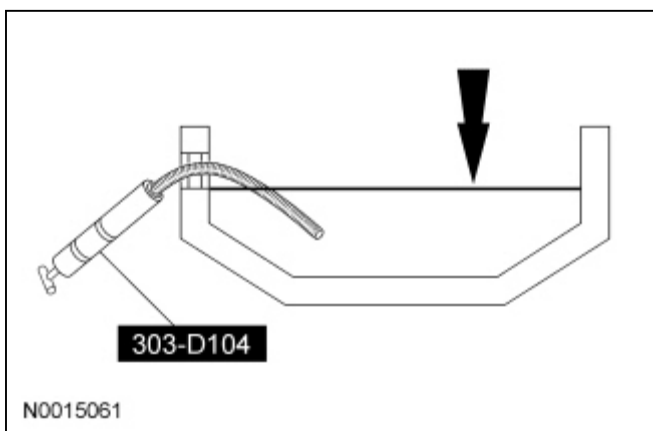

6. Clean the fill plug. Apply thread sealant and reinstall.
  - Tighten to 18 Nm (159 lb-in).

