 
 



Gearshift Rail Bushing

Special Tool(s)

 ST1085-B	Installer, Shift Rail Bushing 308-244 (T96P-7025-F)
 ST1185-A	Slide Hammer 100-001 (T50T-100-A)
 ST1144-A	Universal Puller Set 303-DS005 (D80L-100-A) or equivalent

Disassembly and Assembly

1. Using the Slide Hammer and Universal Puller Set, remove the gearshift rail bearing from the transmission case. Discard the bearing.

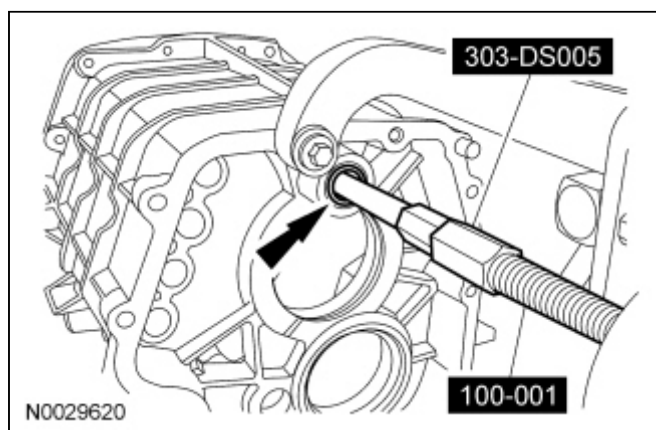

2. Using the Shift Rail Bushing Installer, install the main shift rail bearing.

