

## Piston Pin Diameter

**NOTE:** Refer to the appropriate Section 303-01 for the specification.

1. Measure the piston pin diameter in 2 directions at the points shown. Verify the diameter is within specification.

