

Powertrain/Drivetrain Mount Neutralizing

NOTE: Refer to the appropriate section and procedure for special instructions on loosening and tightening mount fasteners.

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to [Section 100-02](#).
2. Loosen, but do not remove, the powertrain/drivetrain mount fasteners.
3. Lower the vehicle.
4. **NOTICE: Do not twist or strain the powertrain/drivetrain mounts or damage to the mounts may occur.**

Start the vehicle and move it in forward 0.6-1.2 m (2-4 ft). Then move the vehicle in reverse the same distance.

5. Raise and support the vehicle.
 6. Tighten the powertrain/drivetrain mount fasteners.
 7. Lower the vehicle.
 8. Test the system for normal operation.
-