

Accessory Drive Belt Idler Pulley — 4.6L (3V)

Removal and Installation

Bullitt vehicles

1. Remove the air cleaner outlet tube. For additional information, refer to [Section 303-12](#).

All vehicles

2. Using a suitable belt tensioner release tool, rotate the accessory drive belt tensioner clockwise and remove the accessory drive belt from the accessory drive belt idler pulley.
 3. Remove the bolt and the accessory drive belt idler pulley.
 - To install, tighten to 25 Nm (18 lb-ft).
 4. To install, reverse the removal procedure.
-