


Inertia Fuel Shutoff (IFS) Switch

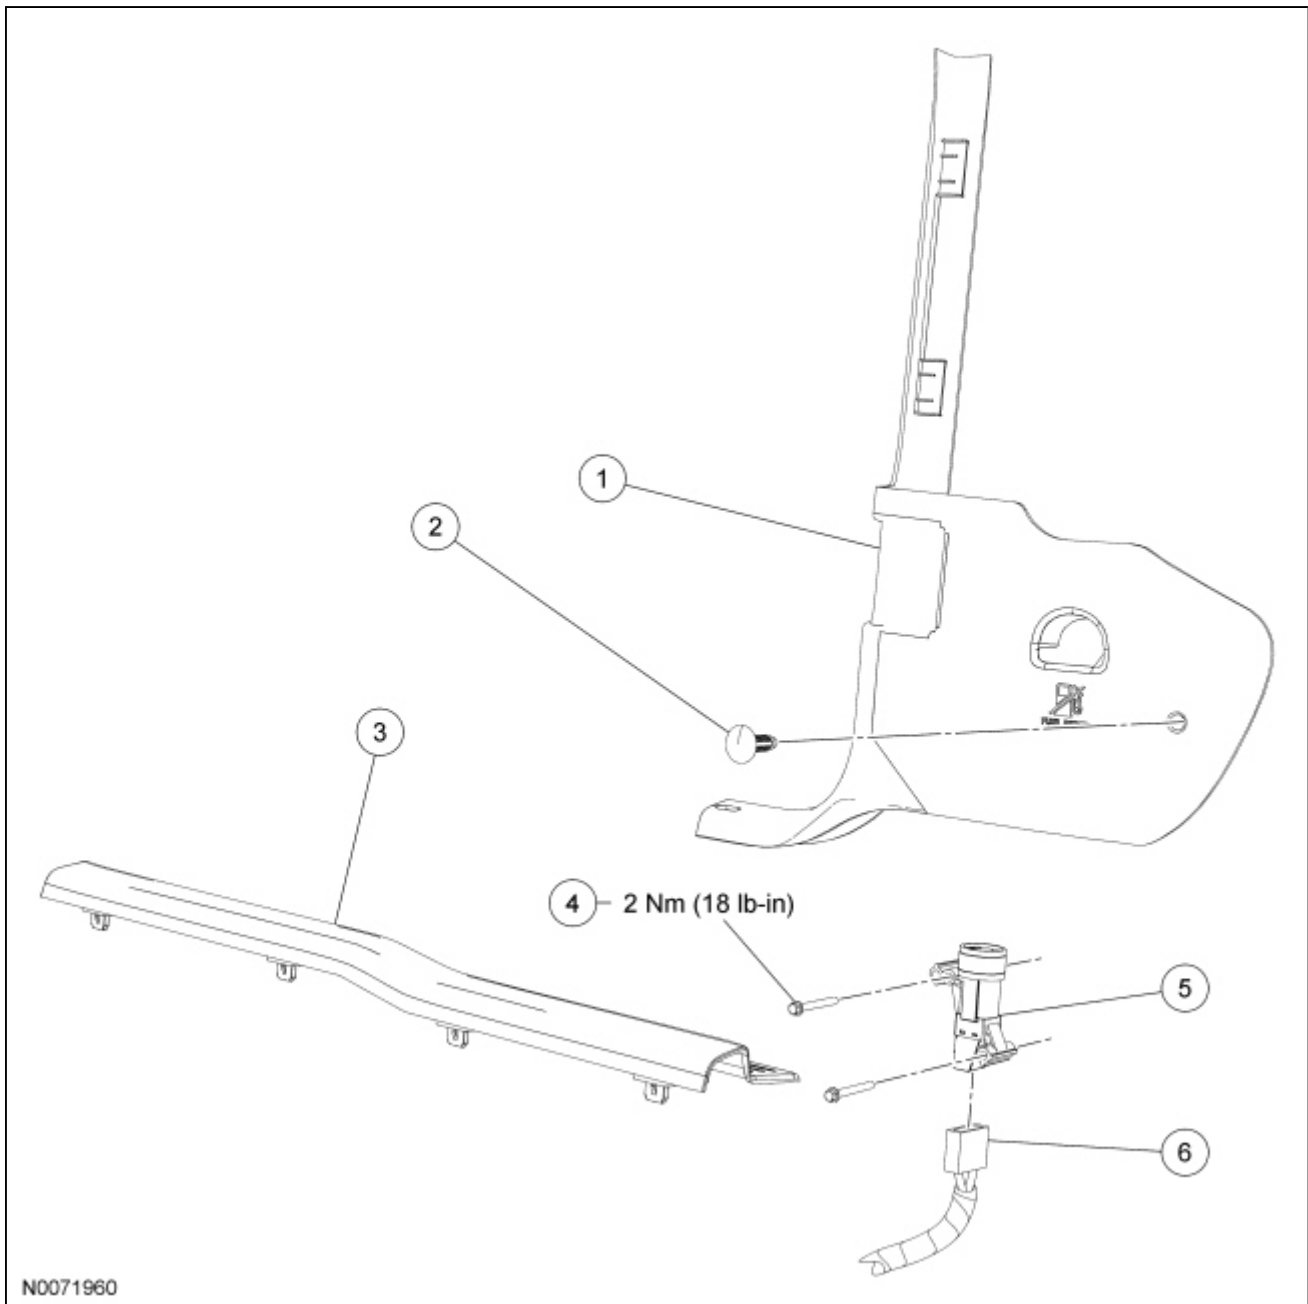

Item	Part Number	Description
1	02345	LH A-pillar lower trim panel
2	390018	A-pillar lower trim panel pin-type retainer
3	13209	LH door scuff plate
4	N611053	Inertia Fuel Shutoff (IFS) mounting bolt (2 required)
5	9341	IFS switch
6	14A464	IFS switch electrical connector

Removal and Installation

1. Remove the LH door scuff plate.

2. Remove the LH A-pillar lower trim panel.
 - Remove the pin-type retainer and the trim panel.
3. Disconnect the Inertia Fuel Shutoff (IFS) switch electrical connector.
4. **NOTICE: Do not overtighten the fasteners or damage to the switch will occur.**

Remove the 2 bolts and the [IFS](#) switch.

- To install, tighten to 2 Nm (18 lb-in).
5. To install, reverse the removal procedure.
 - If necessary, reset the [IFS](#) switch after the installation has been completed.
-