


Instrument Cluster (IC)

NOTE: Base 4.0L and 4.6L Instrument Cluster (IC) shown.

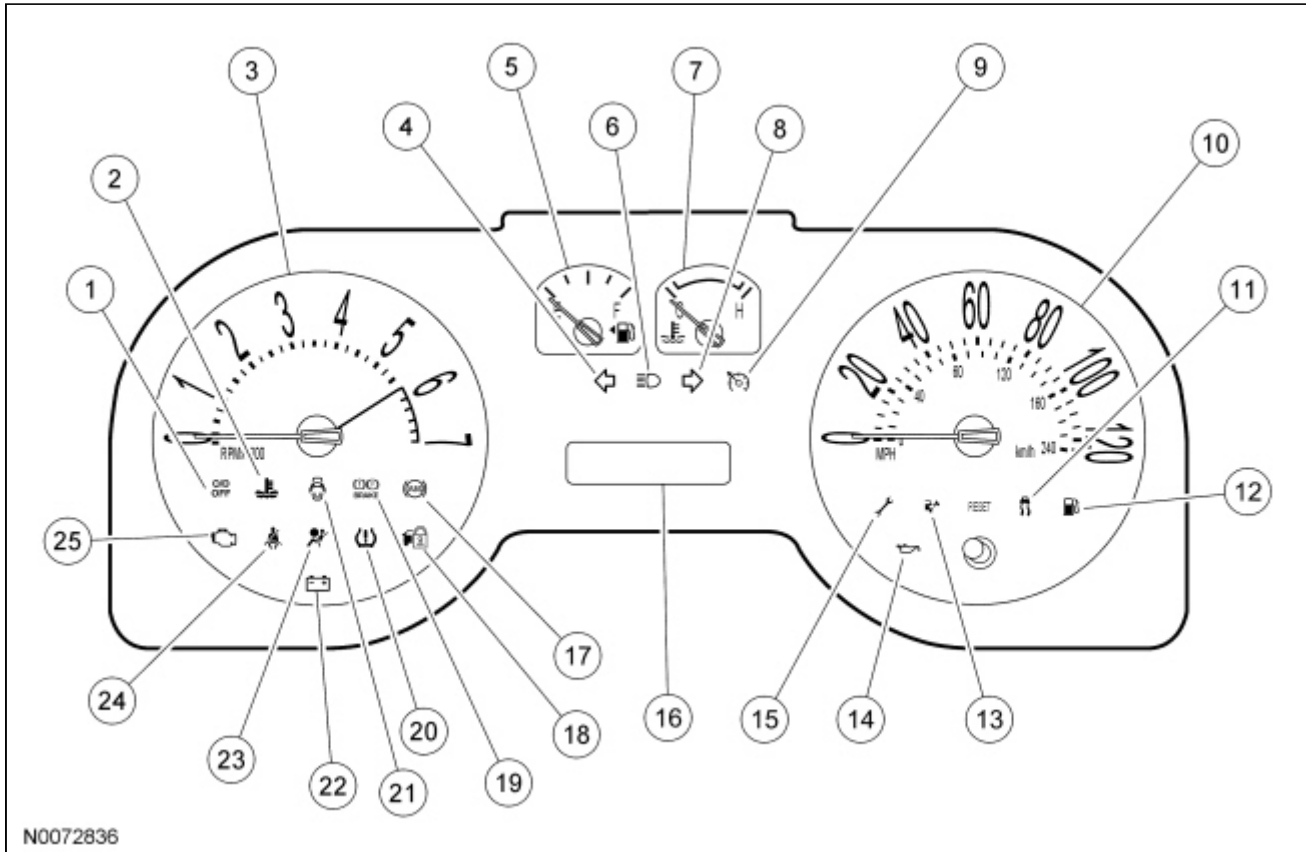


N0072836

| Item | Part Number | Description |
|------|-------------|---|
| 1 | — | Overdrive (O/D) off indicator |
| 2 | — | Engine over-temperature warning indicator |
| 3 | — | Tachometer |
| 4 | — | LH turn indicator |
| 5 | — | Fuel gauge |
| 6 | — | High beam indicator |
| 7 | — | Engine coolant temperature gauge |
| 8 | — | RH turn indicator |
| 9 | — | Speed control indicator |
| 10 | — | Speedometer |
| 11 | — | Traction control indicator |
| 12 | — | Low fuel warning indicator |
| 13 | — | Check fuel cap indicator |
| 14 | — | Low oil pressure warning indicator |
| 15 | — | Powertrain malfunction (wrench) indicator |
| 16 | — | Integrated circuit display |
| 17 | — | ABS warning indicator |
| | | |

| | | |
|----|---|--|
| 18 | — | Anti-theft indicator |
| 19 | — | Brake warning indicator |
| 20 | — | Tire Pressure Monitoring System (TPMS) warning indicator |
| 21 | — | Door ajar warning indicator |
| 22 | — | Charging system warning indicator |
| 23 | — | Air bag warning indicator |
| 24 | — | Safety belt warning indicator |
| 25 | — | Malfunction Indicator Lamp (MIL) |

NOTE: Shelby GT 500 (5.4L) and message center cluster shown, other message center clusters similar.

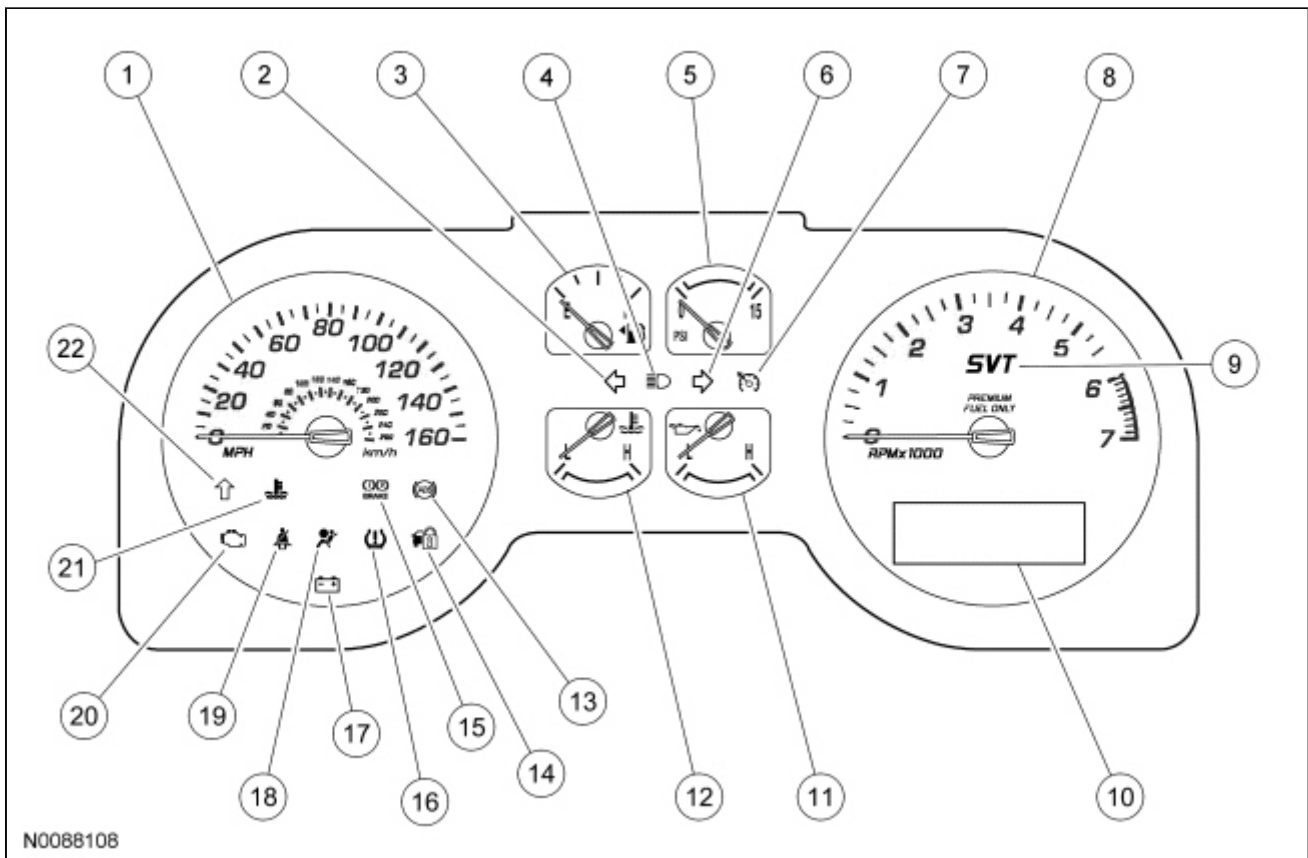

| Item | Part Number | Description |
|------|-------------|-----------------------------|
| 1 | — | Speedometer |
| 2 | — | LH turn indicator |
| 3 | — | Fuel gauge |
| 4 | — | High beam indicator |
| 5 | — | Boost gauge |
| 6 | — | RH turn indicator |
| 7 | — | Speed control indicator |
| 8 | — | Tachometer |
| 9 | — | Performance shift indicator |
| 10 | — | Message center display |
| 11 | — | Oil pressure gauge |
| | | |

| | | |
|----|---|--|
| 12 | — | Engine coolant temperature gauge |
| 13 | — | ABS warning indicator |
| 14 | — | Anti-theft indicator |
| 15 | — | Brake warning indicator |
| 16 | — | Tire Pressure Monitoring System (TPMS) warning indicator |
| 17 | — | Charging system warning indicator |
| 18 | — | Air bag warning indicator |
| 19 | — | Safety belt warning indicator |
| 20 | — | Malfunction Indicator Lamp (MIL) |
| 21 | — | Engine over temperature warning indicator |
| 22 | — | Upshift indicator |

The Instrument Cluster (IC) is available either with a message center or without a message center (base cluster). The **IC** contains gauges, indicator lamps, and warning lamps that are designed to provide the driver with system status, and to alert the driver that certain conditions exist in the vehicle.

Gauges

Gauges provide information to the driver indicating the status of systems. Examples of the gauges include: vehicle speed, fuel level, Engine Coolant Temperature (ECT), and engine rpm.

Informational Indicators

Informational indicator lamps provide information to the driver of conditions that exist in the vehicle. The informational indicator lamps include the: turn signal, high beam, and speed control.

Warning Indicators

Warning indicator lamps provide information to the driver of conditions that could potentially alter vehicle performance. Examples of the warning indicators include the: ABS, BRAKE, and low oil pressure. The **IC** lens is the only part that may be installed separately.
