

---

## Diagnostic Trouble Code (DTC) Chart

DTCs	Description	Source	Action
P0563	System Voltage High	PCM	<a href="#">GO to Pinpoint Test A.</a>
P0563	System Voltage High	Various Modules	<a href="#">GO to Pinpoint Test A</a>
P0620	Generator Control Circuit	PCM	<a href="#">GO to Pinpoint Test C.</a>
P0625	Generator Field Terminal Circuit Low	PCM	<a href="#">GO to Pinpoint Test D.</a>
P0626	Generator Field Terminal Circuit High	PCM	<a href="#">GO to Pinpoint Test D.</a>
P065B	Generator Control Circuit Range/Performance	PCM	<a href="#">GO to Pinpoint Test E.</a>
All other DTCs	—	Various Modules	REFER to the Master DTC Chart in <a href="#">Section 419-10</a> or the Powertrain Control/Emissions Diagnosis (PC/ED) manual. If directed to this section from another section, GO to <a href="#">Symptom Chart</a> in this section.

---