


## Generator — 4.0L SOHC

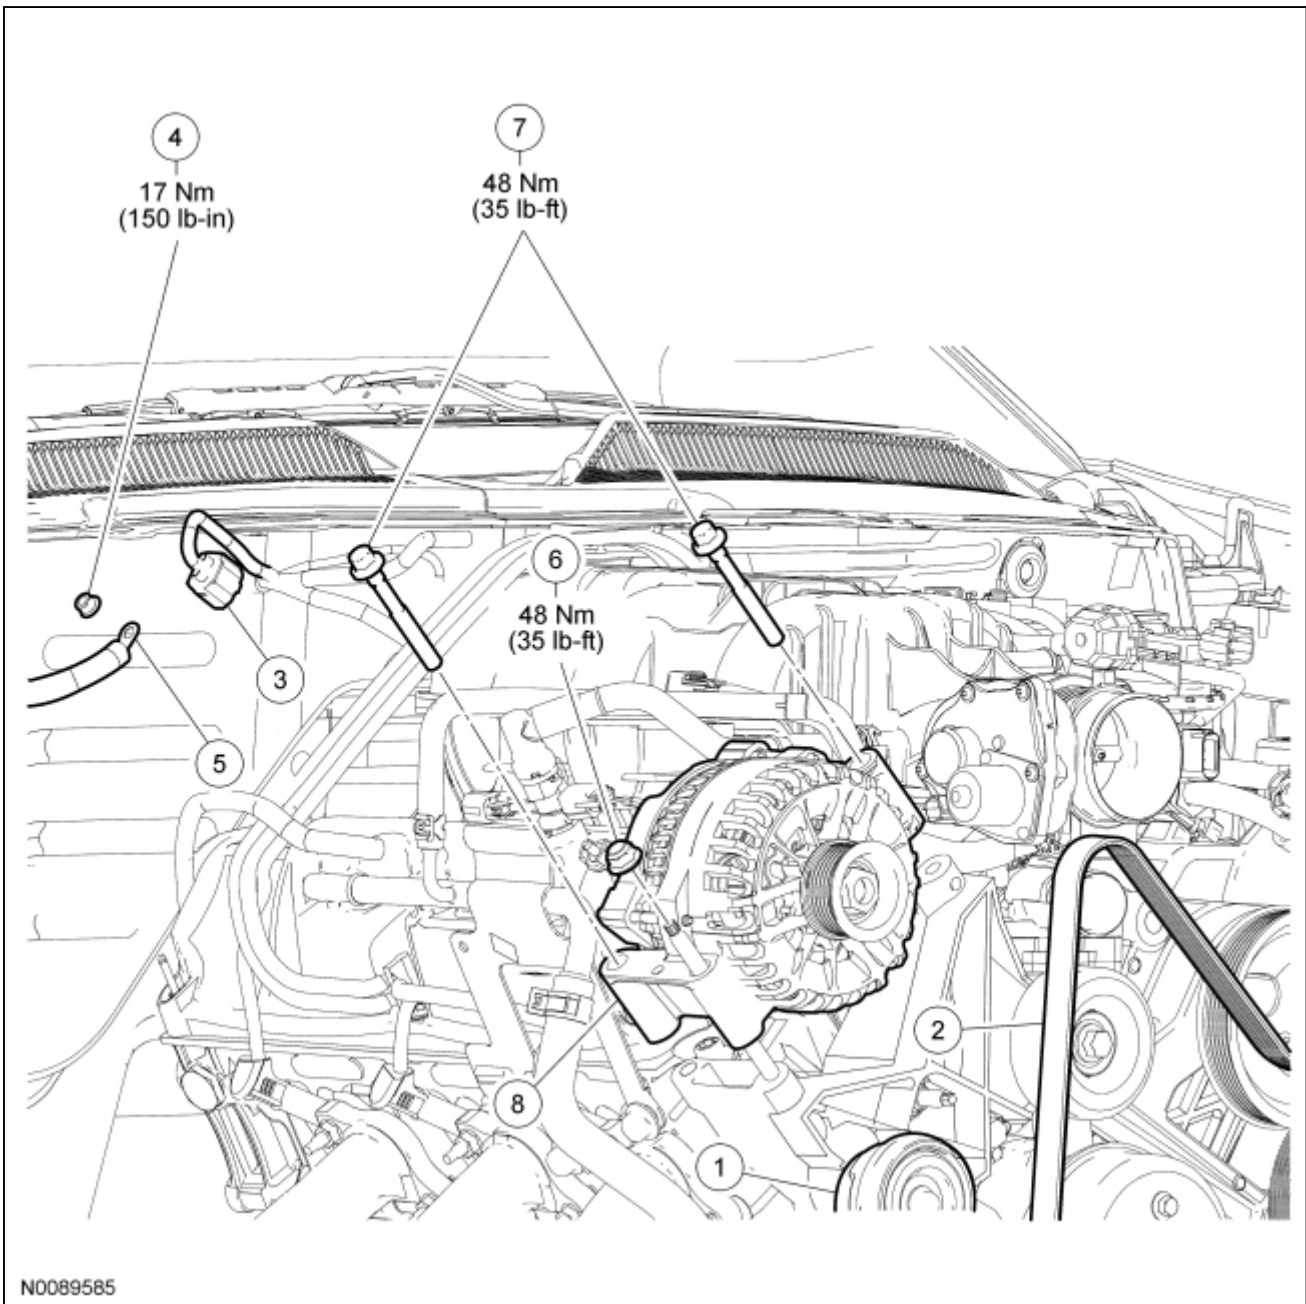

Item	Part Number	Description
1	6B209	Front End Accessory Drive (FEAD) belt tensioner
2	8620	<a href="#">FEAD</a> belt
3	—	Generator electrical connector (part of 12B637)
4	W711953	Generator B+ terminal nut
5	—	Generator B+ terminal (part of 14B060)
6	W520414	Generator stud nut
7	W606068	Generator bolts (2 required)
8	10300	Generator

### Removal and Installation

1. Disconnect the battery. For additional information, refer to [Section 414-01](#).
  2. Rotate the Front End Accessory Drive (FEAD) belt tensioner counterclockwise and position the [FEAD](#) belt aside.
  3. Disconnect the generator electrical connector.
  4. Position the generator B+ protective boot aside, remove the nut and position the generator B+ terminal aside.
    - To install, tighten to 17 Nm (150 lb-in).
  5. Remove the generator stud nut.
    - To install, tighten to 48 Nm (35 lb-ft).
  6. Remove the 2 bolts and the generator.
    - To install, tighten to 48 Nm (35 lb-ft).
  7. To install, reverse the removal procedure.
-