


Generator — 4.6L (3V)

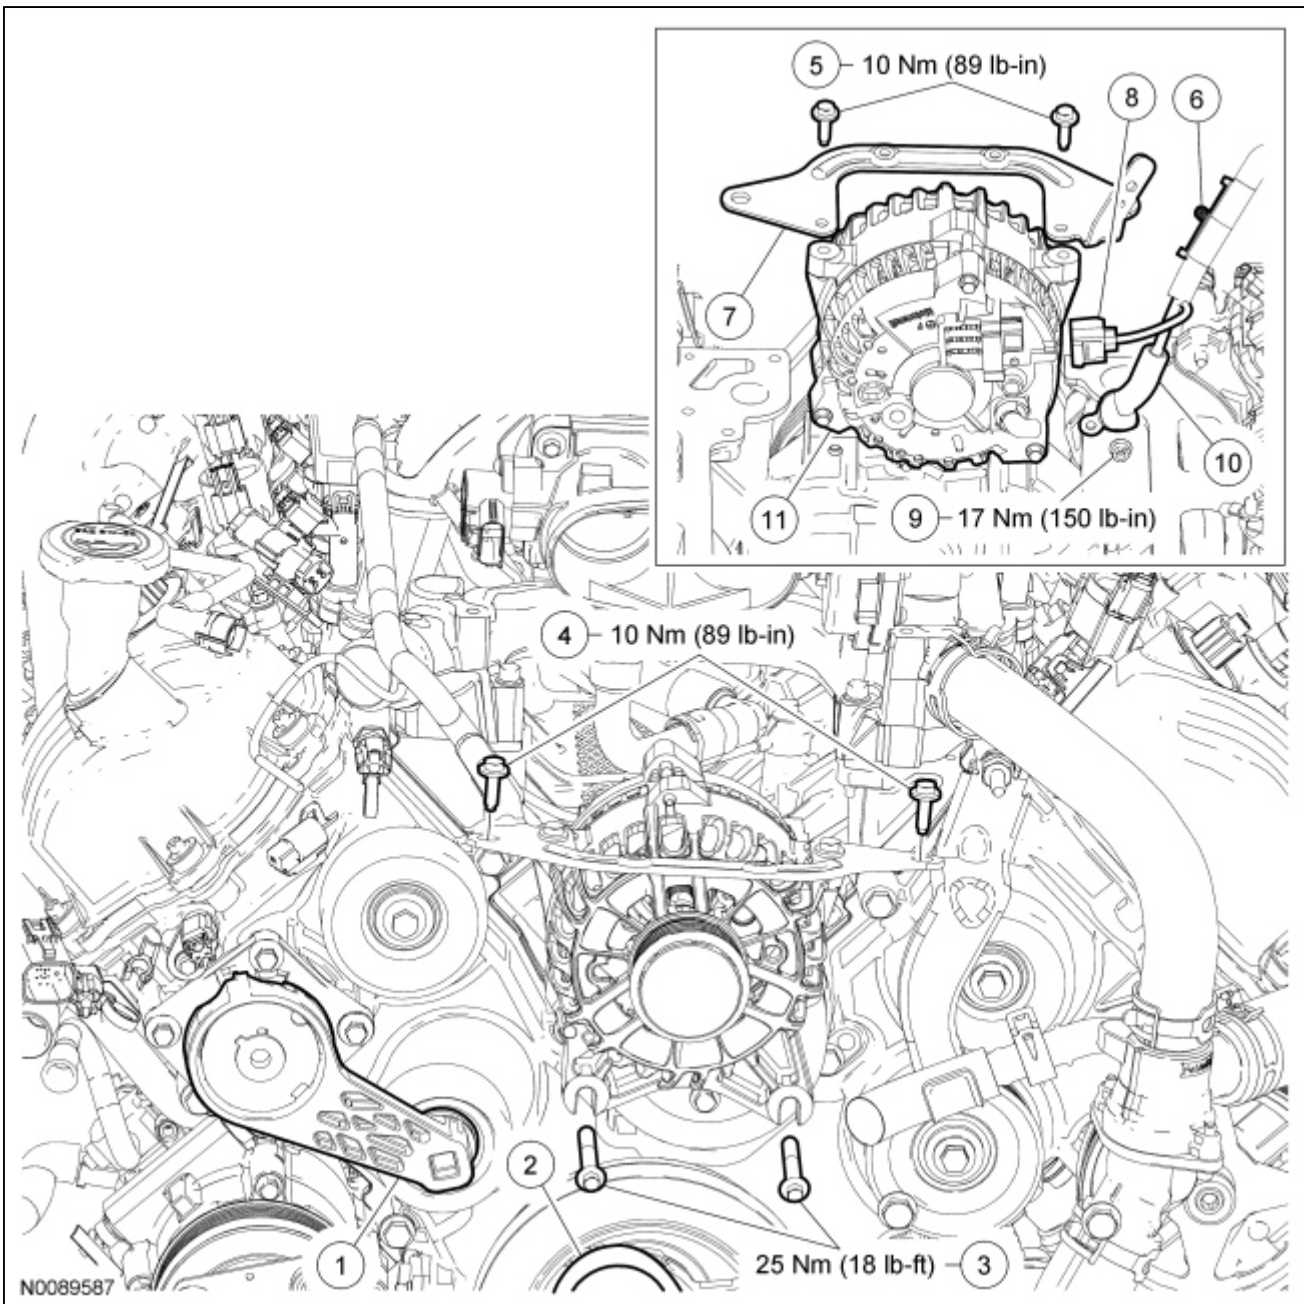

| Item | Part Number | Description |
|------|-------------|---|
| 1 | 6B209 | Front End Accessory Drive (FEAD) belt tensioner |
| 2 | 8620 | FEAD belt |
| 3 | — | Generator bolts (2 required) |
| 4 | N807309-S | Generator bracket bolts (outer) (2 required) |
| 5 | N807309-S | Generator bracket bolts (inner) (2 required) |
| 6 | — | Generator harness locator (part of 14305) |
| 7 | 10153 | Generator bracket |
| 8 | — | Generator electrical connector (part of 14305) |
| 9 | W711953 | Generator B+ terminal nut |
| | | |

| | | |
|----|-------|---------------------------------------|
| 10 | — | Generator B+ terminal (part of 14305) |
| 11 | 10300 | Generator |

Removal and Installation

1. Disconnect the battery. For additional information, refer to [Section 414-01](#).
 2. Press the lock tab, remove the crankcase vent tube from the Air Cleaner (ACL) outlet pipe and position it aside.
 3. Loosen the clamps, remove the [ACL](#) outlet pipe from the throttle body and remove it from the vehicle.
 4. Rotate the Front End Accessory Drive (FEAD) belt tensioner clockwise and position the [FEAD](#) belt aside.
 5. Remove the generator harness locator.
 6. Remove the 2 generator bolts.
 - To install, tighten to 25 Nm (18 lb-ft).
 7. Remove the 2 outer generator bracket bolts and position the generator aside.
 - To install, tighten to 10 Nm (89 lb-in).
 8. Loosen the 2 inner generator bracket bolts.
 - Pull the generator outward.
 - Remove the generator bracket.
 - To install, tighten to 10 Nm (89 lb-in).
 9. Disconnect the generator electrical connector.
 10. Position the generator B+ protective boot aside, remove the nut and position the generator B+ terminal aside.
 - To install, tighten to 17 Nm (150 lb-in).
 11. Remove the generator.
 12. To install, reverse the removal procedure.
-