


Generator — 5.4L (4V)

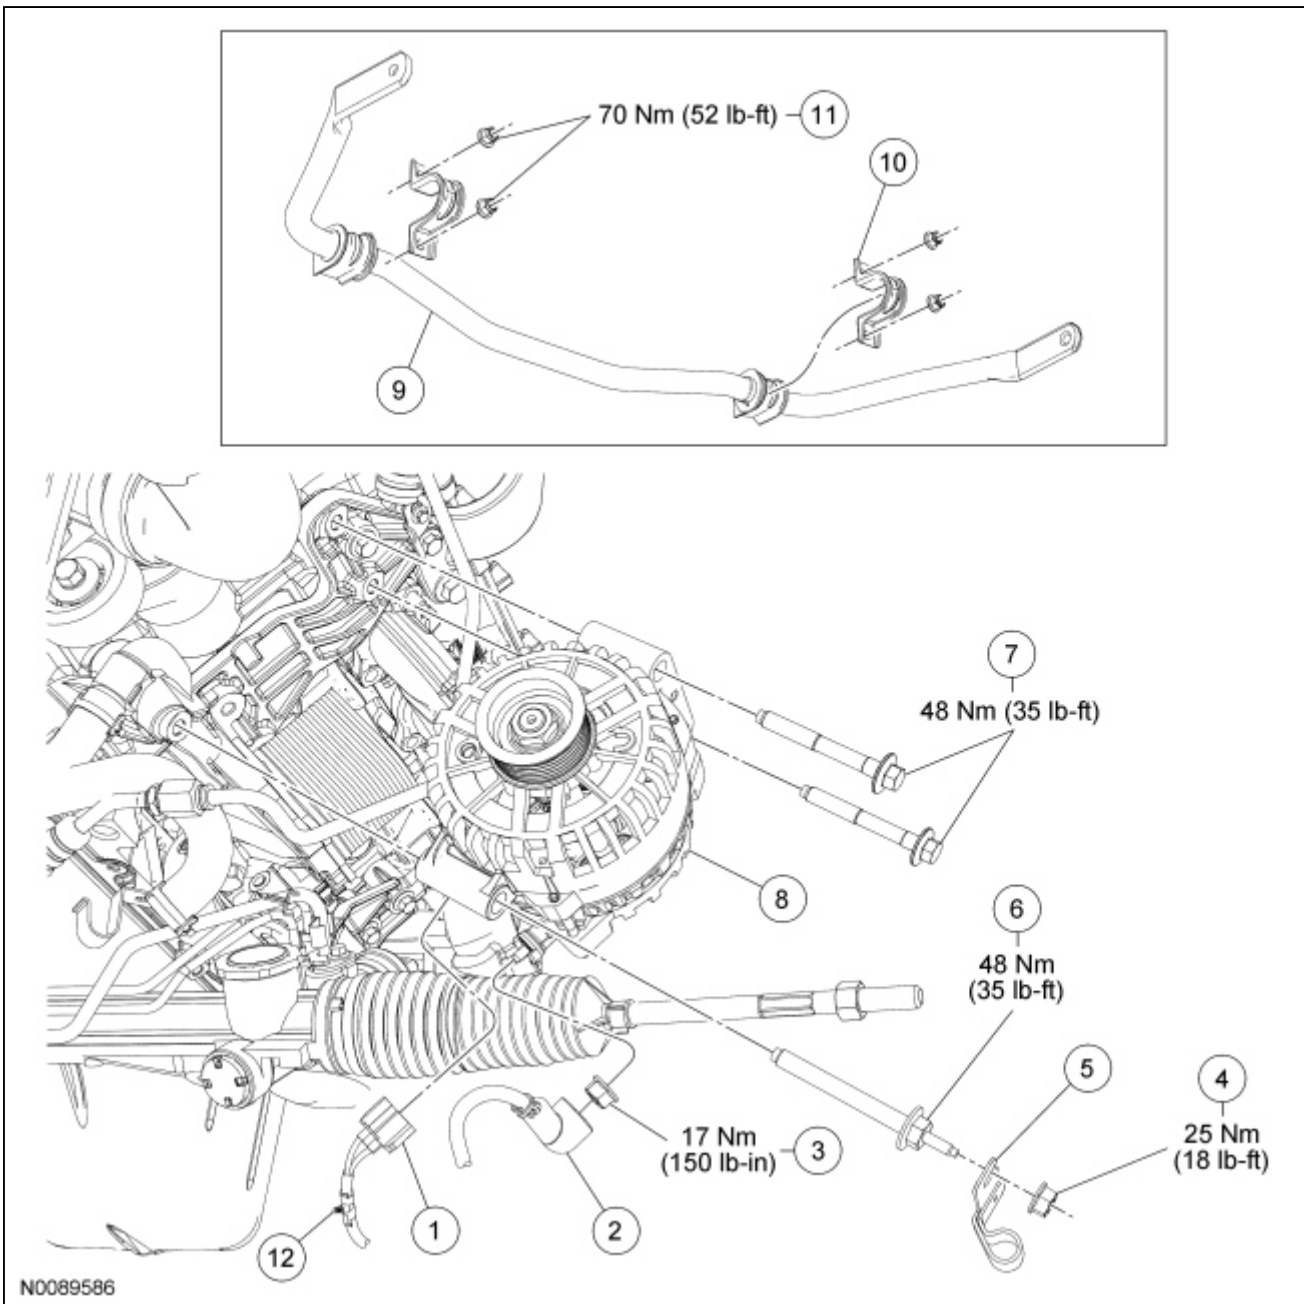

Item	Part Number	Description
1	—	Generator electrical connector (part of 12B637)
2	—	Generator B+ terminal (part of 14B060)
3	W711953	Generator B+ terminal nut
4	W520111	Generator stud nut
5	—	Power steering fluid line bracket
6	W704893	Lower generator bolt
7	N805424	Upper generator bolts (2 required)
8	10300	Generator
9	5482	Stabilizer bar

10	5486	Stabilizer bar bracket
11	W520213	Bracket nuts (4 required)
12	—	Wire harness retainer (part of 14305)

Removal and Installation

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to [Section 100-02](#).
 2. Disconnect the battery. For additional information, refer to [Section 414-01](#).
 3. Rotate the Front End Accessory Drive (FEAD) tensioner clockwise and position the [FEAD](#) belt aside.
 4. Remove the Air Cleaner (ACL) assembly. For additional information, refer to [Section 303-12](#).
 5. Remove the 2 upper generator bolts.
 - To install, tighten to 48 Nm (35 lb-ft).
 6. Remove the power steering tube bracket nut and position the bracket aside.
 - To install, tighten to 25 Nm (18 lb-ft).
 7. Remove and discard the 4 stabilizer bracket nuts, then remove the stabilizer bar brackets and position the sway bar aside.
 - To install, tighten to 70 Nm (52 lb-ft).
 8. Disconnect the generator electrical connector and remove the harness retainer pushpin from the rear of the generator.
 - Position the harness aside.
 9. Position the generator B+ protective boot aside, remove the nut and position the generator B+ terminal aside.
 - To install, tighten to 17 Nm (150 lb-in).
 10. Remove the lower generator bolt.
 - To install, tighten to 48 Nm (35 lb-ft).
 11. Remove the generator.
 12. To install, reverse the removal procedure.
-

