


Fog Lamp Bulb

4.0L and 4.6L Vehicles


NOTE: 4.0L fog lamp shown, 4.6L fog lamp similar.

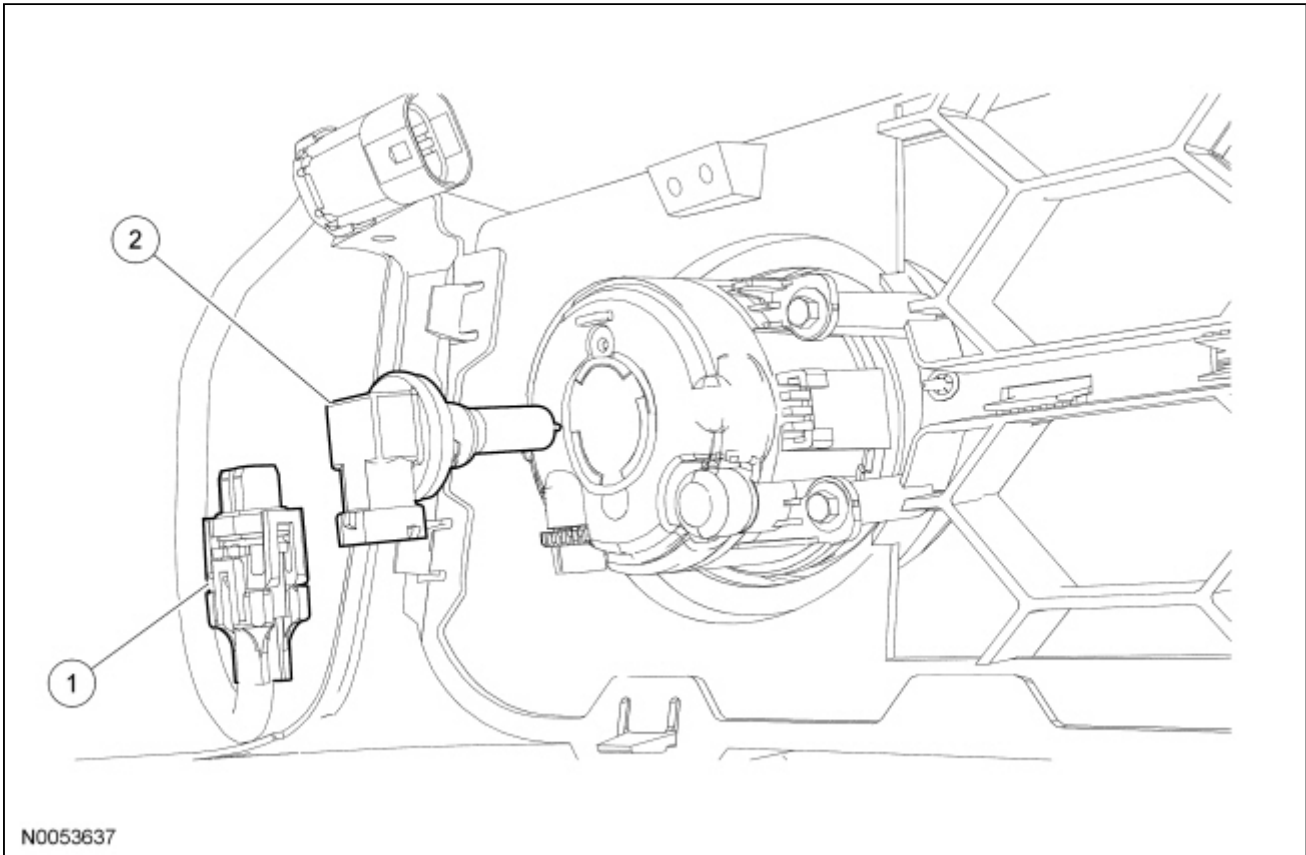

N0053637

Item	Part Number	Description
1	—	Fog lamp bulb electrical connector (part of 15A211)
2	13N021	Fog lamp bulb

5.4L Vehicles

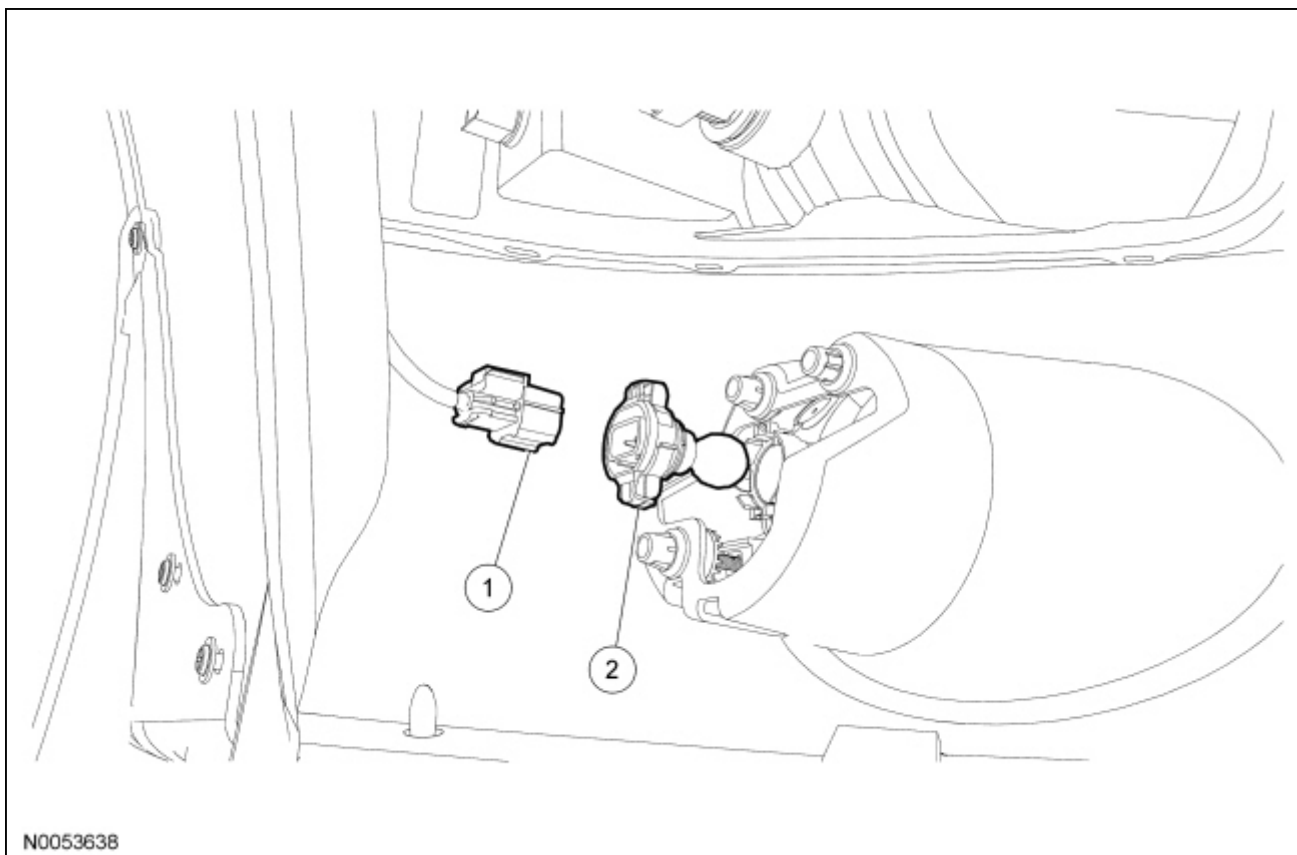

Item	Part Number	Description
1	—	Fog lamp bulb electrical connector (part of 14290)
2	13N021	Fog lamp bulb

Removal and Installation

⚠ WARNING: The bulb contains gas under pressure. The bulb may shatter if the glass envelope is scratched or if the bulb is dropped. Handle the bulb only by its base. Avoid touching the glass envelope. Failure to follow these instructions may result in personal injury.

NOTE: The fog lamp bulb should not be removed from the fog lamp until just before a new bulb is installed. Removing the bulb for an extended period of time may affect fog lamp bulb performance. Contaminants may enter the fog lamp where they can settle on the lens and reflector. Never turn on the fog lamps with the bulb removed.

NOTE: Make sure the headlamp switch and the ignition switch are in the OFF position.

4.0L and 4.6L vehicles

1. Remove the front bumper cover. For additional information, refer to [Section 501-19](#).
2. Disconnect the electrical connector and remove the fog lamp bulb.

5.4L vehicles

3. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to [Section 100-02](#).
4. Release (squeeze) the tabs and remove the fog lamp bulb.
 - Disconnect the electrical connector.

All vehicles

5. To install, reverse the removal procedure.

