
Anti-Theft Alarm Horn

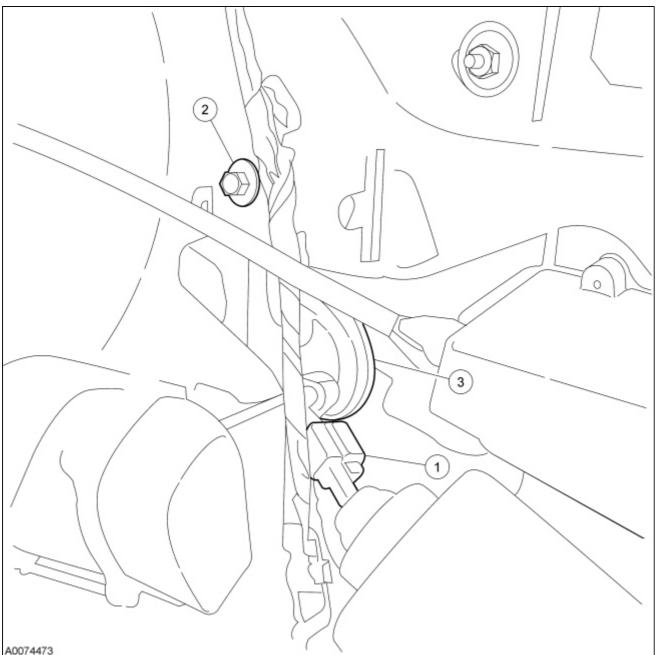

Item	Part Number	Description
1	_	Anti-theft alarm horn electrical connector (part of 14A464)
2	_	Anti-theft alarm horn screw
3	3A803	Anti-theft alarm horn

Removal and Installation

- 1. Remove the RH quarter trim panel. For additional information, refer to <u>Section 501-05</u>.
- 2. Disconnect the anti-theft alarm horn electrical connector.

- 3. Remove the screw and the anti-theft alarm horn.
- 4. To install, reverse the removal procedure.