


Intrusion and Inclination Sensor

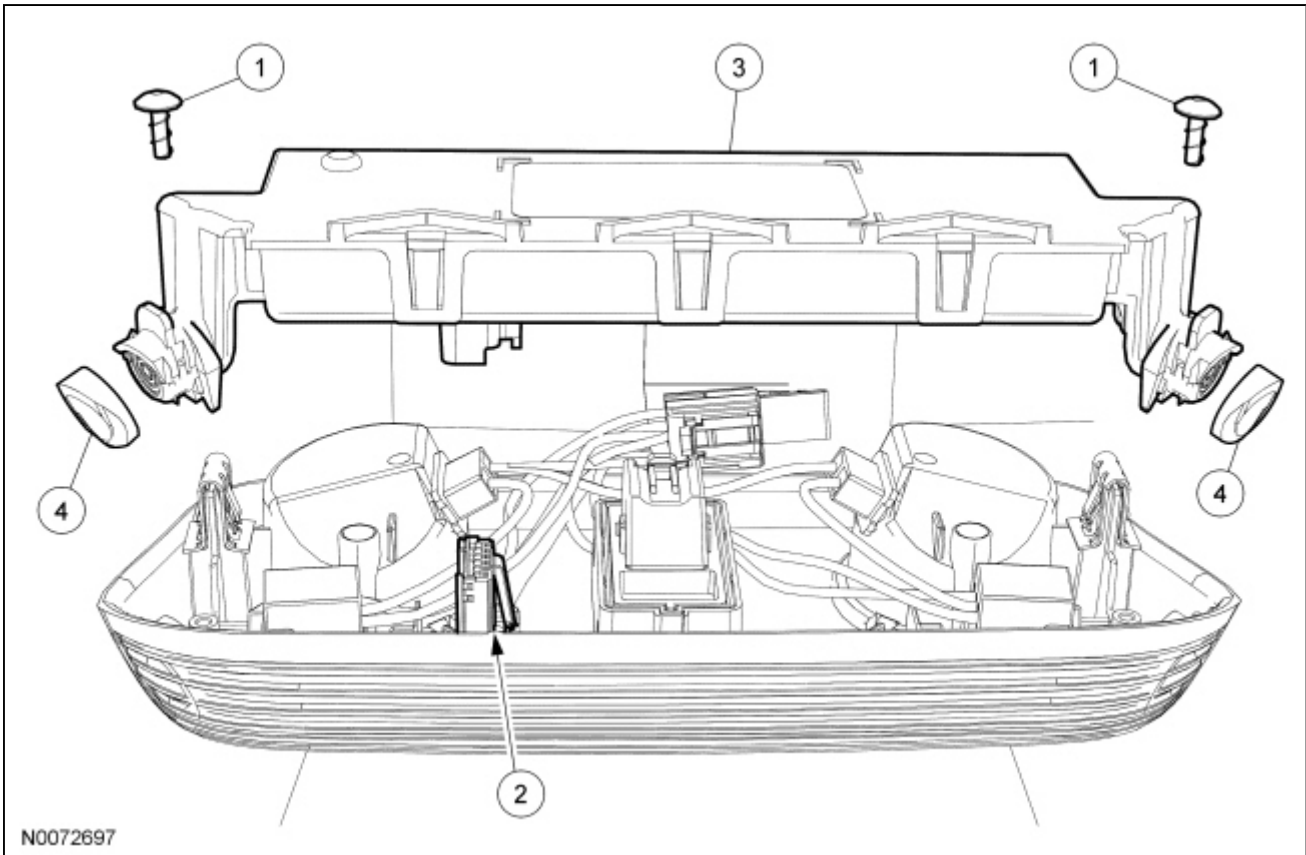

Item	Part Number	Description
1	—	Intrusion and inclination sensor screws (2 required)
2	—	Overhead console jumper harness electrical connector (part of 10503)
3	15K609	Intrusion and inclination sensor
4	76519A58	Intrusion and inclination sensor gaskets (2 required)

Removal and Installation

1. Remove the overhead console.
2. Remove the 2 screws and position the intrusion and inclination sensor aside.
3. Disconnect the overhead console jumper harness electrical connector.
4. Remove the intrusion and inclination sensor.
5. Remove the foam gaskets from the old intrusion and inclination sensor and install them on the new sensor.
6. To install, reverse the removal procedure.

