



Compass Zone Adjustment

1. Refer to the compass calibration zone map to select the correct compass zone setting for the geographic location of the vehicle.

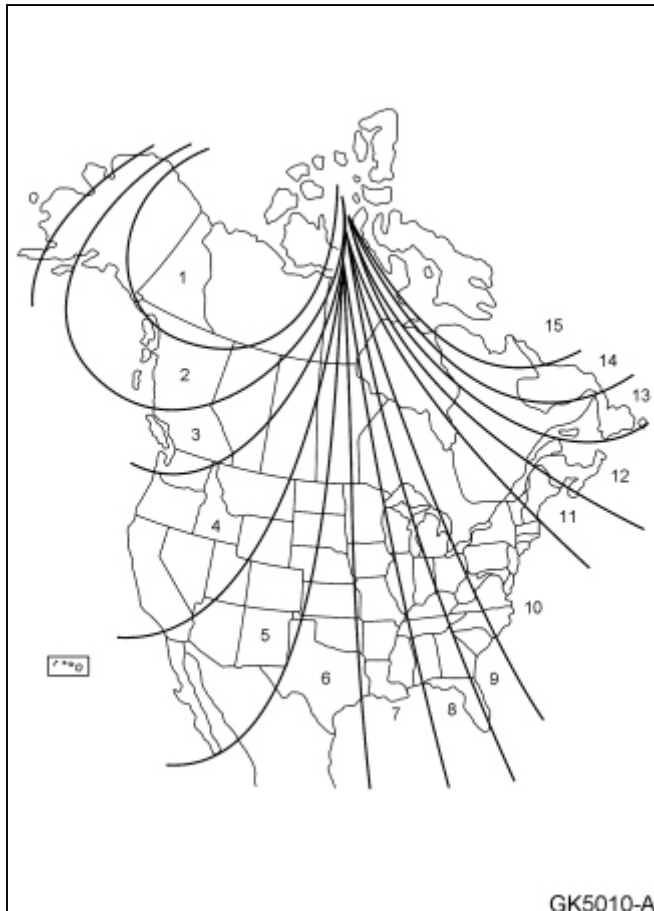

2. **NOTE:** The compass display can be turned on and off using the MODE button (shown). The key must be in the ON position.

With the compass display turned on, press and hold the MODE button (for 3 seconds) until the compass display shows the current zone setting.

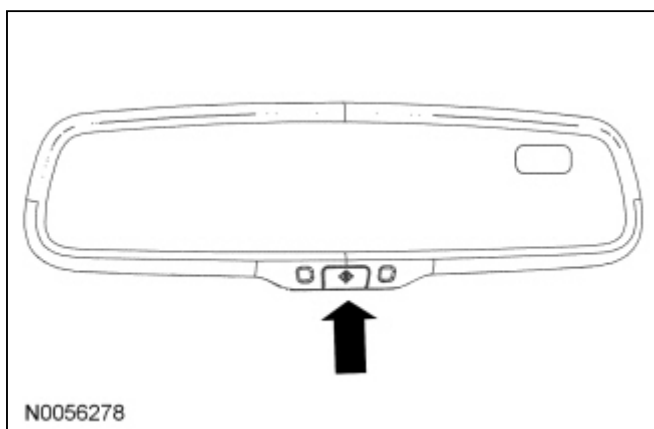

3. Momentarily press and release the MODE button to increase the zone increment by one. Set the zone display number to match the vehicle location that is shown on the compass calibration zone map.

4. Release the MODE button for 10 seconds to exit the zone setting mode.
