

Exterior Mirror

Removal and Installation

1. Remove the sail panel.
 - If equipped, disconnect the exterior mirror control switch electrical connector.
 2. Remove the 3 nuts and the exterior mirror.
 - To install, tighten to 9 Nm (80 lb-in).
 3. To install, reverse the removal procedure.
-