


Seat Backrest — Rear, Coupe

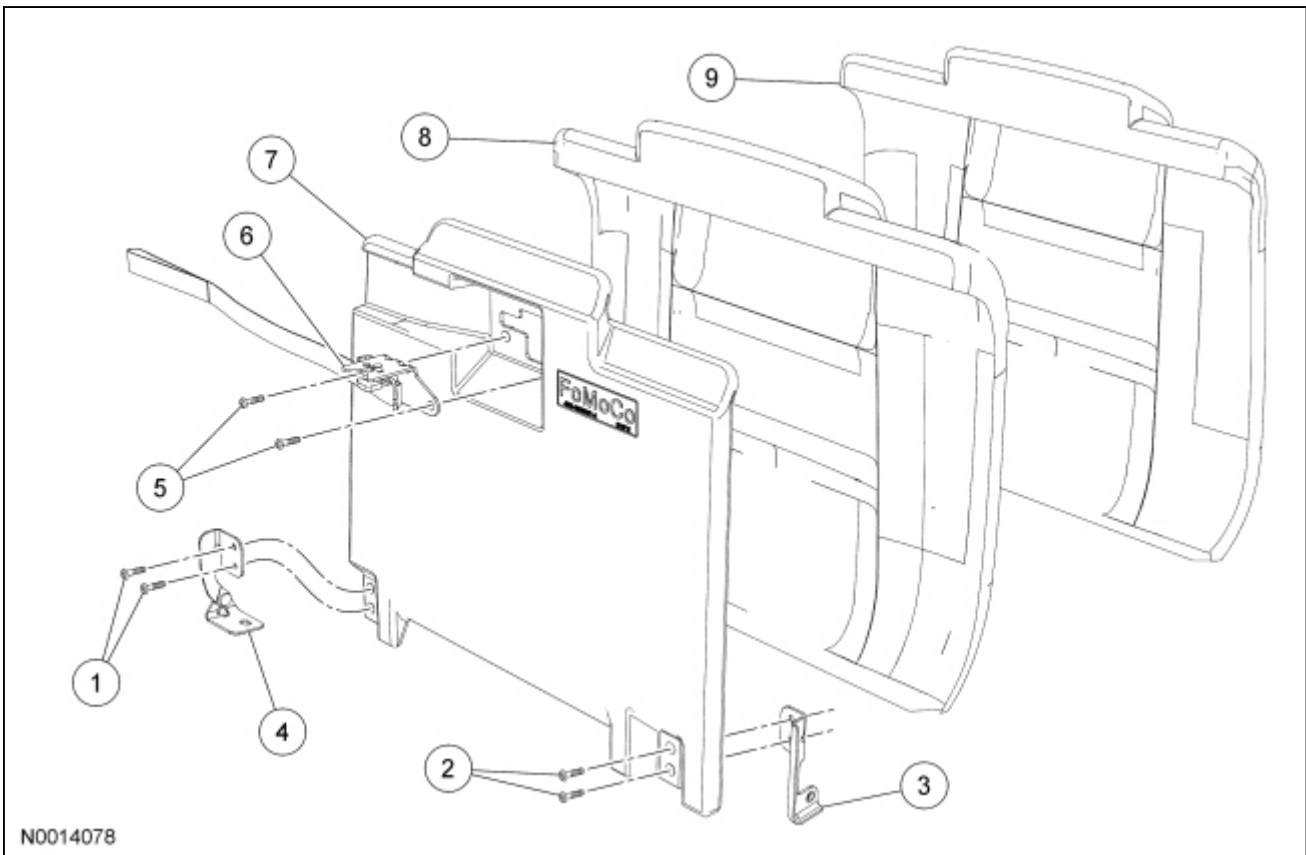

Item	Part Number	Description
1	—	Rivets
2	—	Rivets
3	—	Inboard pivot bracket
4	60515	Outboard pivot bracket
5	—	Rivets
6	—	Backrest latch assembly
7	60509	Backrest panel
8	—	Backrest foam pad
9	66601	Backrest trim cover

Disassembly

1. Remove the rear seat cushion. For additional information, refer to [Seat Cushion — Rear](#) in this section.
2. Remove the rear seat backrest. For additional information, refer to [Seat Backrest — Rear](#) in this section.
3. Release the backrest trim cover J-strip and remove the staples.
4. Pull the backrest panel out from the backrest foam pad and backrest trim cover.
 - During assembly, the latch release strap must come through the trim cover.
5. Remove the 4 rivets and pivot brackets.

6. Remove the rivets, separate the pin-type retainer from the cable end and remove the backrest latch assembly.
7. **NOTICE: Use care when separating the seat backrest trim cover from the hook-and-loop strip. The hook-and-loop strip can be torn from the seat backrest foam.**

Release the hook-and-loop strips and separate the backrest trim cover from the backrest foam pad.

8. To assemble, reverse the disassembly procedure.
-