


## Window Glass — Rear Quarter, Convertible

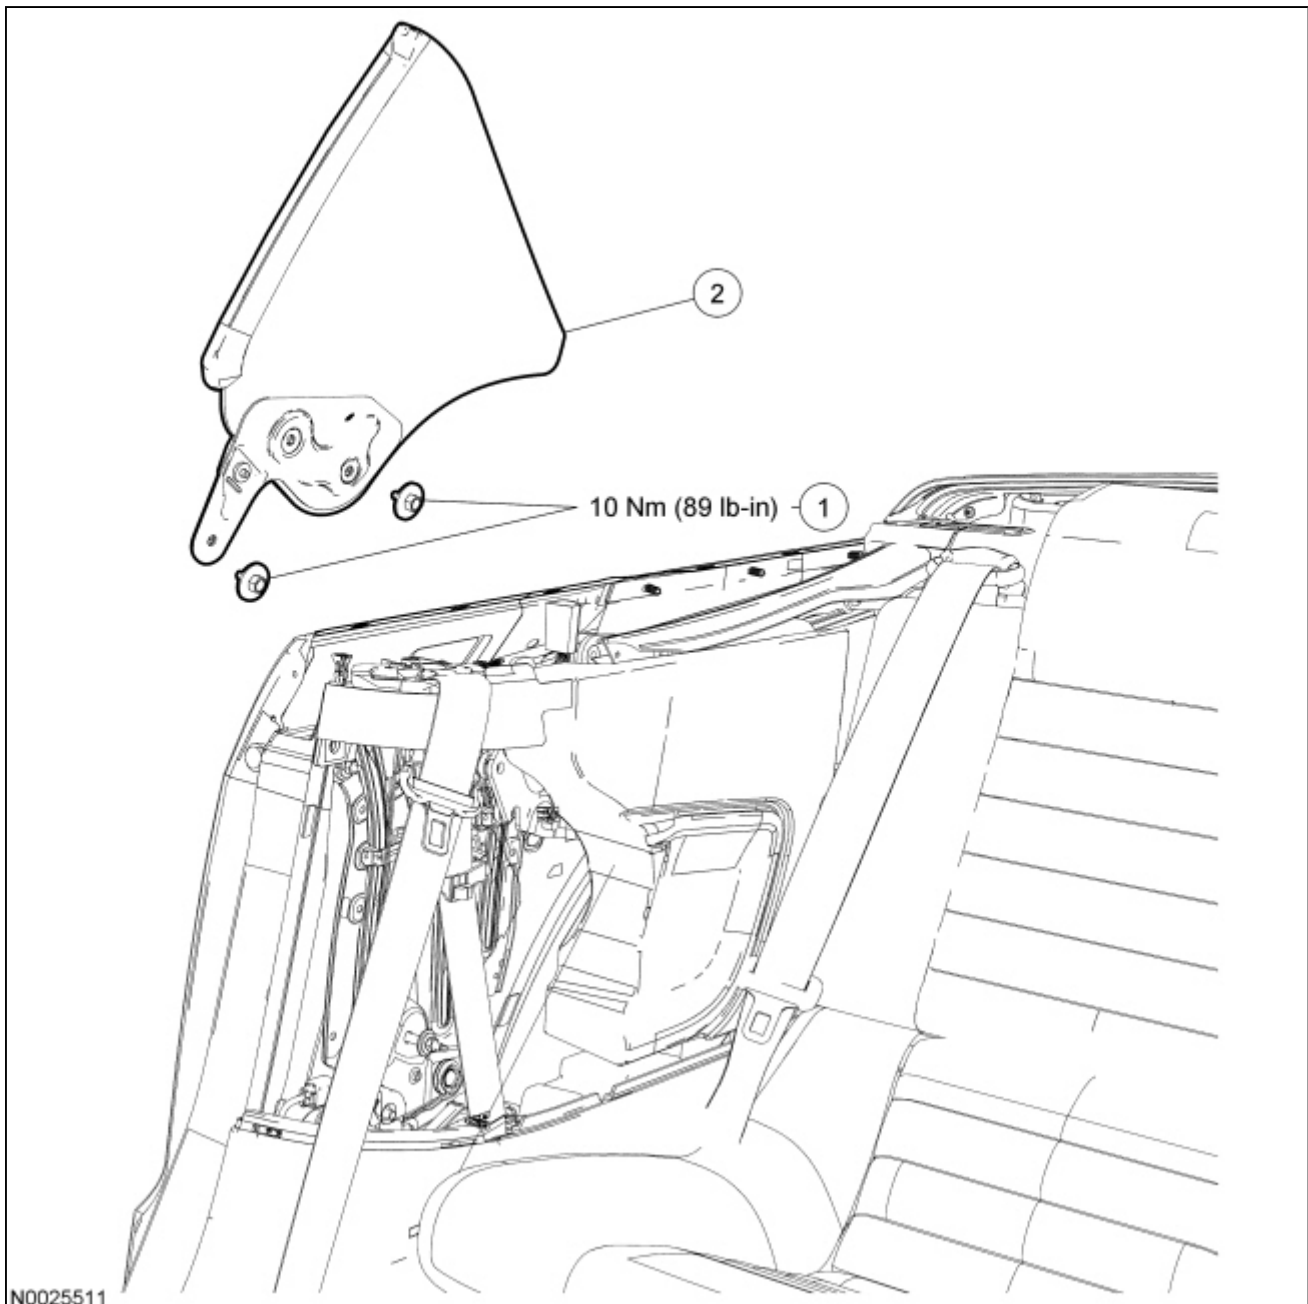

Item	Part Number	Description
1	W711156	Rear quarter window glass bolts (2 required)
2	7629710 RH/ 7629711 LH	Rear quarter window glass

### Removal

**NOTE:** The rear quarter glass seal (division bar) is bonded to the glass and cannot be serviced separately.

1. Remove the rear quarter trim panel. For additional information, refer to [Section 501-05](#).
2. Remove the 2 rear quarter glass bolts and the rear quarter window glass.

## Installation

1. Install the rear quarter window glass and finger-tighten the 2 bolts.
2. **NOTE:** If installing a new rear quarter glass due to a torn/separating quarter glass seal (division bar), make sure the front door glass is adjusted correctly. For additional information, refer to [Window Glass Adjustment — Front Door](#) in this section.

Adjust the rear quarter window glass. For additional information, refer to [Window Glass Adjustment — Rear Quarter, Convertible](#) in this section.

---