

## Perimeter Lighting Feature Programming

### Programming the Perimeter Lighting Feature Using the Door Lock Control Switch

**NOTE:** The following steps must be carried out within 30 seconds or the procedure will need to be repeated. If the procedure needs to be repeated, wait 30 seconds between programming sessions.

1. Turn the ignition switch from the OFF to the RUN position.
2. Press the unlock button on the door unlock control 3 times.
3. Turn the ignition switch from the RUN to the OFF position.
4. Press the unlock button on the door unlock control switch 3 times.
5. Turn the ignition switch to the RUN position. The horn chirps one time to indicate that programming mode is entered.
6. **NOTE:** The unlock button must be pressed twice within 5 seconds.

Within 30 seconds of entering the programming mode, press the unlock button on the door lock control switch twice to enable/disable the perimeter lighting feature. The horn chirps once if the perimeter lighting is disabled or a chirp followed by a honk if the perimeter lighting is enabled.

7. Programming ends when the ignition switch state changes or times out after 2 minutes.
-