

## Remote Keyless Entry (RKE) Transmitter Programming

**NOTICE: All Remote Keyless Entry (RKE) transmitters must be programmed at the same time.**

1. The vehicle must be electronically unlocked before entering program mode, via the **RKE** transmitter or the door lock control switch while the driver door is open.
  2. Turn the key from the OFF to the RUN position 8 times within 10 seconds, with the eighth turn ending in the RUN position. If the module has successfully entered program mode, it locks and then unlocks all the doors.
  3. Within 20 seconds, press any button on an **RKE** transmitter, and the doors lock and then unlock to confirm that the **RKE** transmitter has been programmed. Repeat this step for each **RKE** transmitter.
  4. If the door locks do not respond for any **RKE** transmitter, wait several seconds and press the button again. If the door locks still fail to respond, refer to Inspection and Verification. Make sure that no more than the maximum number of **RKE** transmitters are attempted to be programmed.
  5. Exiting the programming mode is accomplished if one of the following occurs:
    - Turning the key to the OFF position.
    - 20 seconds have passed since entering programming mode or since the last **RKE** transmitter was programmed.
    - The maximum number of **RKE** transmitters have been programmed.
-