

## Door Latch

### Material


Item	Specification
Multi-Purpose Grease Spray XL-5	ESB-M1C93B

### Removal


1. **NOTE:** LH side shown, RH side similar.

Remove the door trim panel. For additional information, refer to [Section 501-05](#).


2. Position the watershield aside.
3. Disconnect the exterior door handle actuating rod.

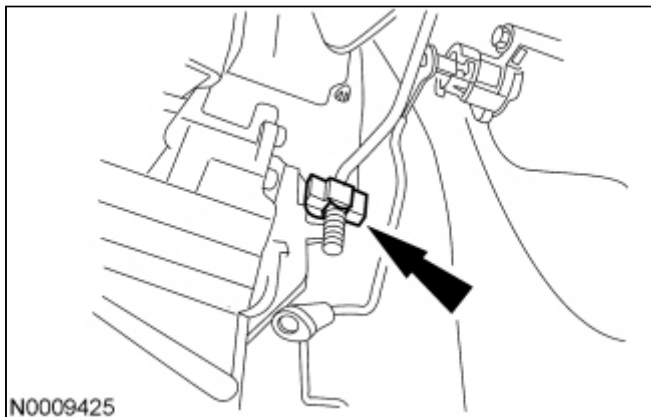


4. Remove the 3 door latch bolts.
5. Disconnect the manual lock rod.

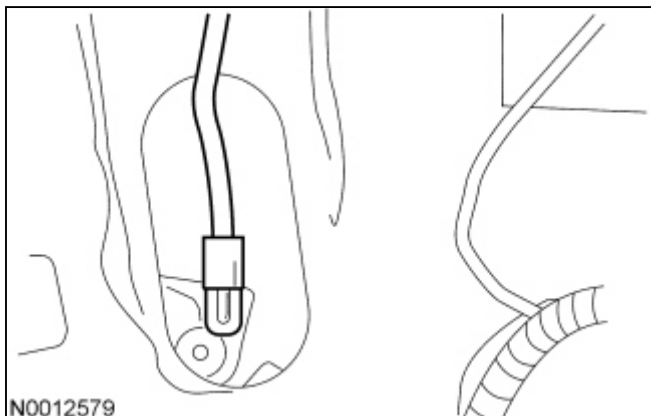

6. If equipped, disconnect the door lock cylinder actuating rod.

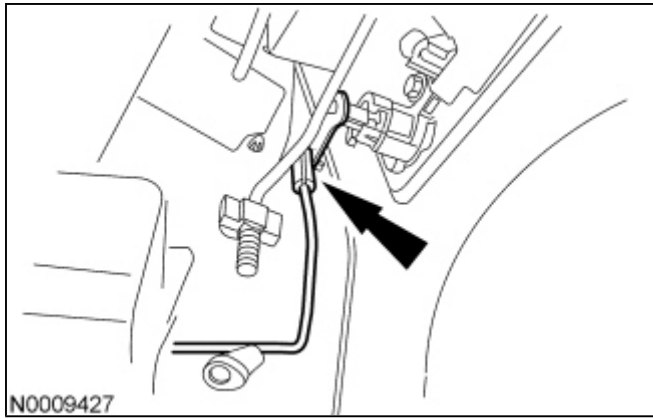


7. Disconnect the 2 wiring harness electrical connectors.

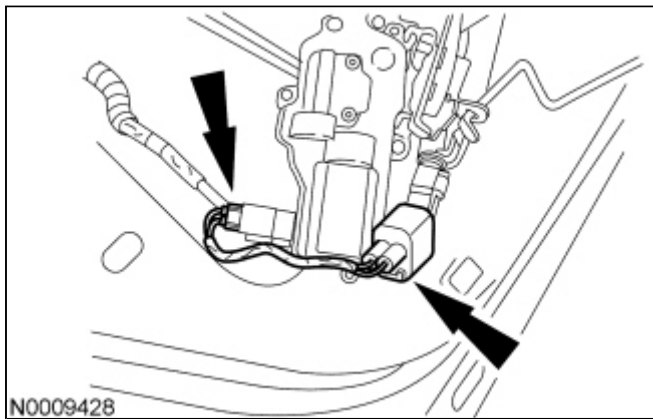

8. Remove the cable cover.
  - Release the clip.
  - Remove the pin-type retainer.
9. **NOTICE:** Make sure the interior door handle actuating cable does not kink or damage to the cable may occur.


Disconnect the interior door handle actuating cable.

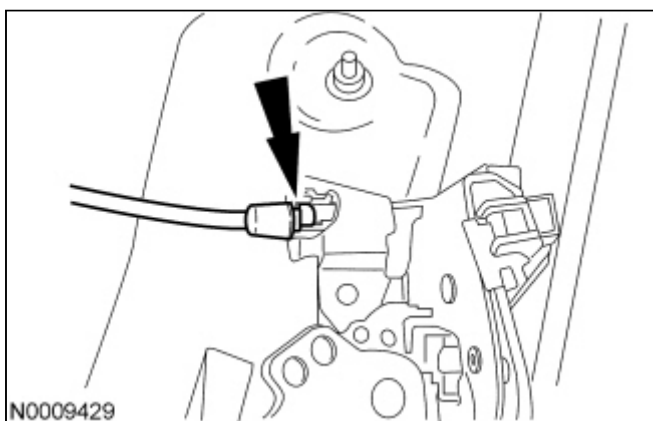


10. Remove the door latch.

## Installation


1. Position the door latch inside the door.
2. Connect the interior door handle actuating cable.

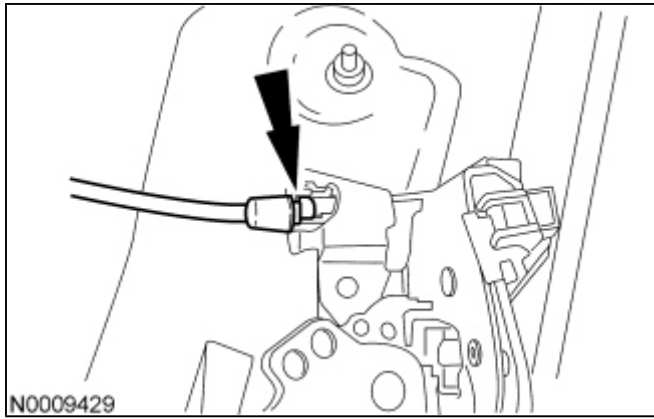


3. Connect the cable cover.
4. Connect the 2 wiring harness electrical connectors.

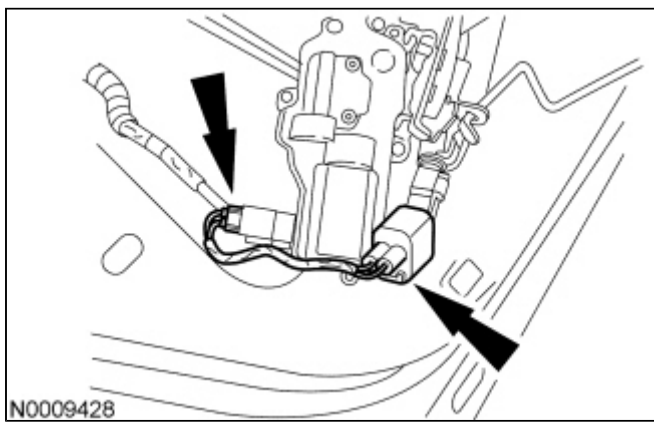

5. If equipped, connect the door lock cylinder actuating rod.

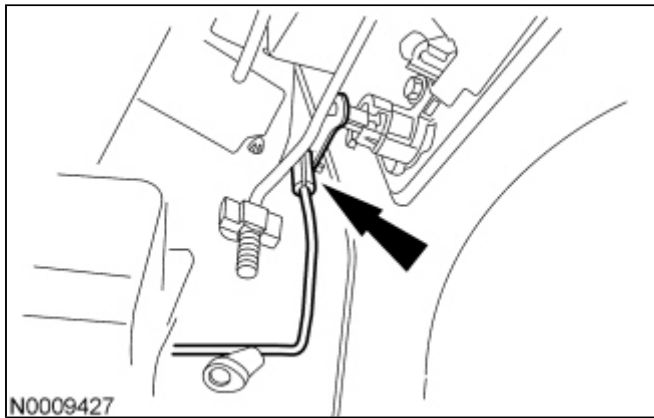


6. Connect the manual lock rod.

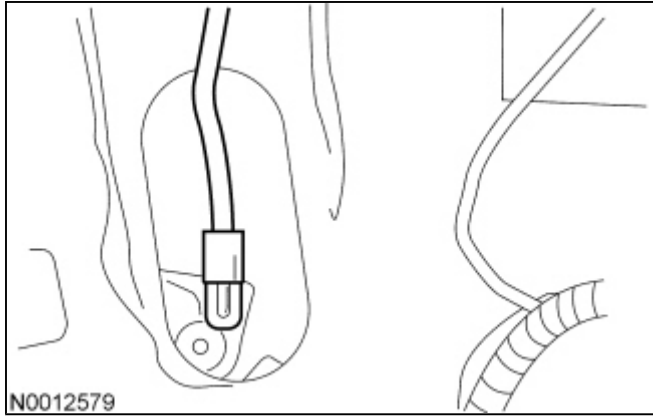

7. Install the 3 door latch bolts.
  - Tighten to 9 Nm (80 lb-in).
8. **NOTE:** Push upward on the exterior door handle actuating rod and make sure the door latch is in a neutral position when installing the rod into the retaining clip to make sure the exterior door handle is correctly positioned.

Connect the exterior door handle actuating rod into the clip.

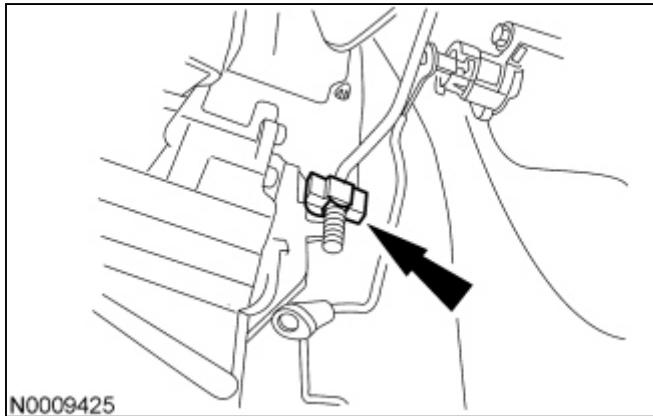

9. Reseal the watershield.
  10. Install the door trim panel. For additional information, refer to [Section 501-05](#).
-

