


Door Lock Cylinder

Material


Item	Specification
Penetrating and Lock Lubricant XL-1	—

Removal and Installation

1. Remove the door trim panel. For additional information, refer to [Section 501-05](#).
2. Position the watershield aside.
3. Disconnect the door lock cylinder actuating rod.

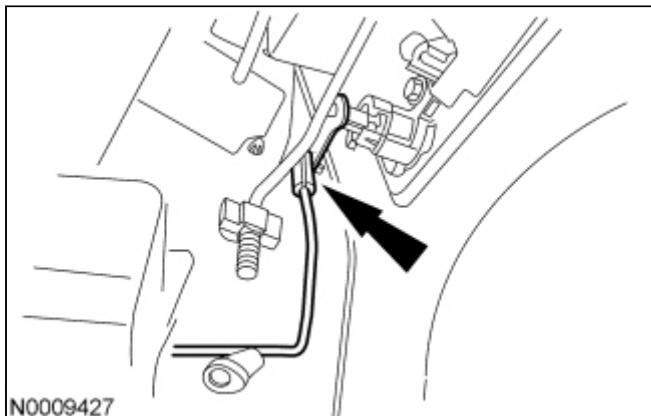

4. If equipped, disconnect the door disarm switch wiring harness electrical connector.
5. Remove the bolt and the door lock cylinder.
 - To install, tighten to 9 Nm (80 lb-in).

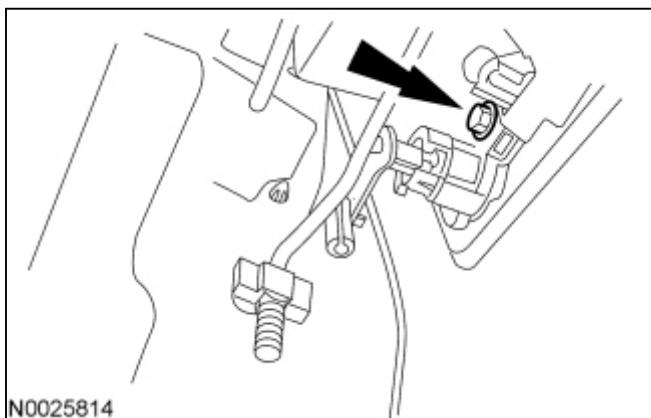

6. To install, reverse the removal procedure.
 - Lubricate the door lock cylinder after installation.

