

Hood Latch Release Handle

Removal and Installation

1. Remove the hood latch. For additional information, refer to [Hood Latch](#) in this section.
 2. Disconnect the hood latch release cable guides.
 3. Remove the LH scuff plate.
 4. Remove the LH A-pillar lower trim panel.
 5. Remove the 2 hood latch release handle screws.
 6. Remove the hood release latch handle and cable.
 - Release the grommet from the dash panel.
 7. To install, reverse the removal procedure.
-