

Hood Latch

Material

Item	Specification
Multi-Purpose Grease Spray XL-5	ESB-M1C93B

Removal and Installation

1. Remove the 6 pin-type retainers and the upper radiator sight shield.
2. Remove the front bumper cover. For additional information, refer to [Section 501-19](#).
3. **NOTE:** Mark the location of the hood latch to aid installation.

Remove the 2 hood latch bolts.

- To install, tighten to 12 Nm (106 lb-in).
4. Disconnect the hood latch release cable.
 5. Remove the hood latch.
 6. To install, reverse the removal procedure.
 - Adjust the hood latch for correct engagement after installation.
 - Lubricate the hood latch after installation.
-