


Ignition Lock Cylinder

Material

Item	Specification
Penetrating and Lock Lubricant XL-1	-

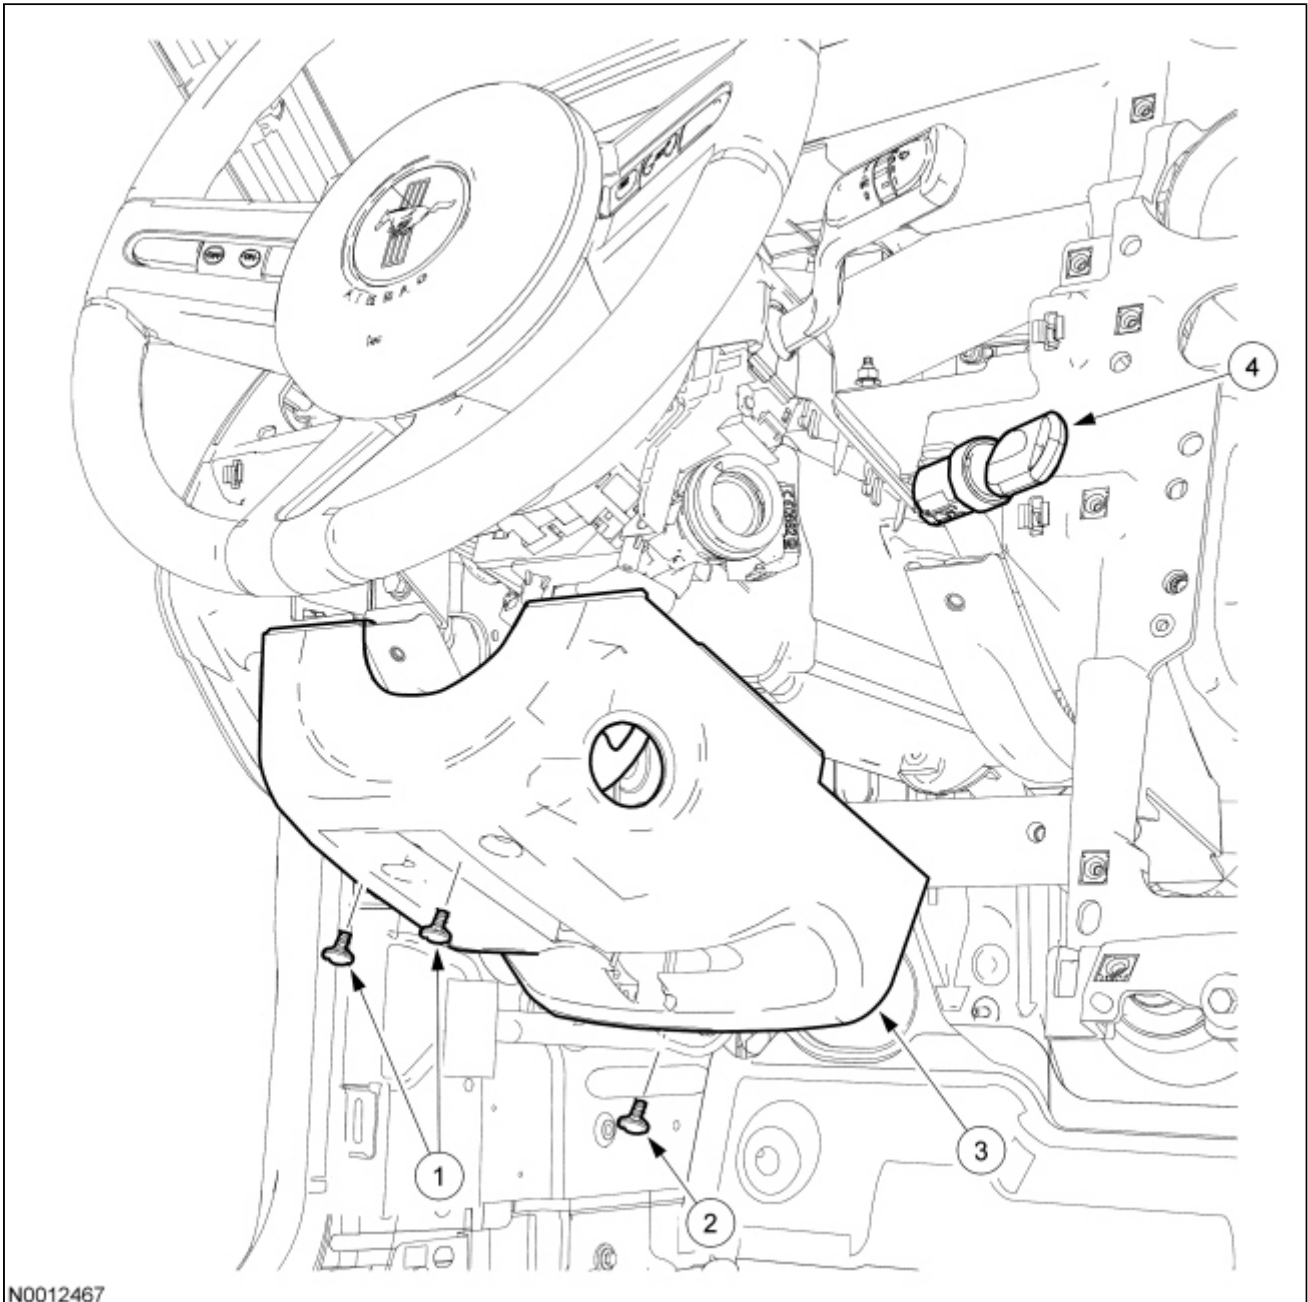


N0012467

Item	Part Number	Description
1	W702110	Lower steering column shroud screws (2 required)
2	W706731	Lower steering column shroud screw
3	3533	Lower steering column shroud
4	11582	Ignition lock cylinder

Removal and Installation

1. Remove the steering column cover.
2. Remove the 3 screws and the lower steering column shroud.
3. Turn the key to the RUN position.
4. Insert a small punch into the hole and remove the ignition lock cylinder.

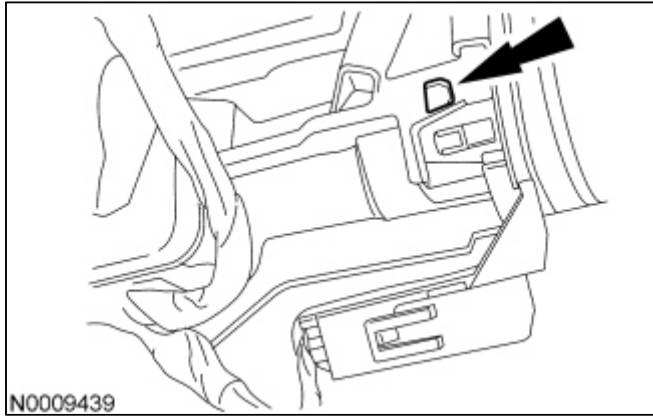

5. To install, reverse the removal procedure.
 - Lubricate the ignition lock cylinder after installation.
-