

---


## Luggage Compartment Lid Lock Cylinder

### Material

Item	Specification
Penetrating and Lock Lubricant XL-1	—

### Removal and Installation

1. Remove the luggage compartment lid trim panel.
2. Disconnect the luggage compartment lid latch actuator cable from the luggage compartment lid lock cylinder.
3. If equipped, disconnect the luggage compartment lid lock cylinder electrical connector.
4. Remove the 2 bolts and the luggage compartment lid lock cylinder.
  - To install, tighten to 9 Nm (80 lb-in).

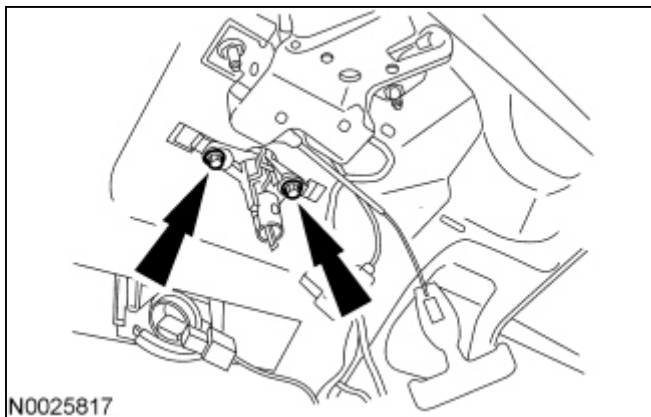

5. To install, reverse the removal procedure.
    - Lubricate the luggage compartment lid lock cylinder after installation.
-

