

Wiper Mounting Arm and Pivot Shaft

Removal and Installation

1. Remove the RH and LH cowl vent screens. For additional information, refer to [Section 501-02](#).
 2. Remove the 3 bolts and the windshield wiper mounting arm and pivot shaft.
 - To install, tighten to 7 Nm (62 lb-in).
 3. Disconnect the windshield wiper motor electrical connector.
 4. To install, reverse the removal procedure.
-