

Wiper Pivot Arm

Removal and Installation

1. **NOTE:** New wiper pivot arms need to be installed as an assembly.

Remove the 2 wiper pivot arm nut covers.

2. Remove the 2 wiper pivot arm nuts and the 2 wiper pivot arms.
 - Tighten to 28 Nm (21 lb-ft).
 3. To install, reverse the removal procedure.
 - Adjust the wiper pivot arms. For additional information, refer to [Wiper Blade and Pivot Arm Adjustment](#) in this section.
-