

Convertible Top Ajar Switch

Removal and Installation

1. Remove the RH rear quarter trim panel. For additional information, refer to [Section 501-05](#).
 2. Remove the RH rear window inner belt moulding.
 3. Remove the screw and the convertible top ajar switch.
 - To install, tighten to 9 Nm (80 lb-in).
 4. To install, reverse the removal procedure.
-