

## Bumper — Rear

### Removal and Installation

1. Remove the rear bumper cover. For additional information, refer to [Bumper Cover — Rear](#) in this section.
  2. Remove the 2 pin-type retainers and the 2 rear bumper isolators.
  3. Remove the 6 rear bumper bolts and the rear bumper.
    - To install, tighten to 25 Nm (18 lb-ft).
  4. To install, reverse the removal procedure.
-