


Air Bag and Safety Belt Pretensioner Supplemental Restraint System (SRS)

The air bag Supplemental Restraint System (SRS) is designed to provide increased collision protection for front seat occupants, in addition to that provided by the 3-point safety belt system. Safety belt use is necessary to obtain the best occupant protection and to receive the full advantage of the [SRS](#).

The serviceable air bag and safety belt pretensioner [SRS](#) components are shown in the following illustrations.


Air Bag and Safety Belt Pretensioner Supplemental Restraint System (SRS) Components (Illustration 1 of 2)

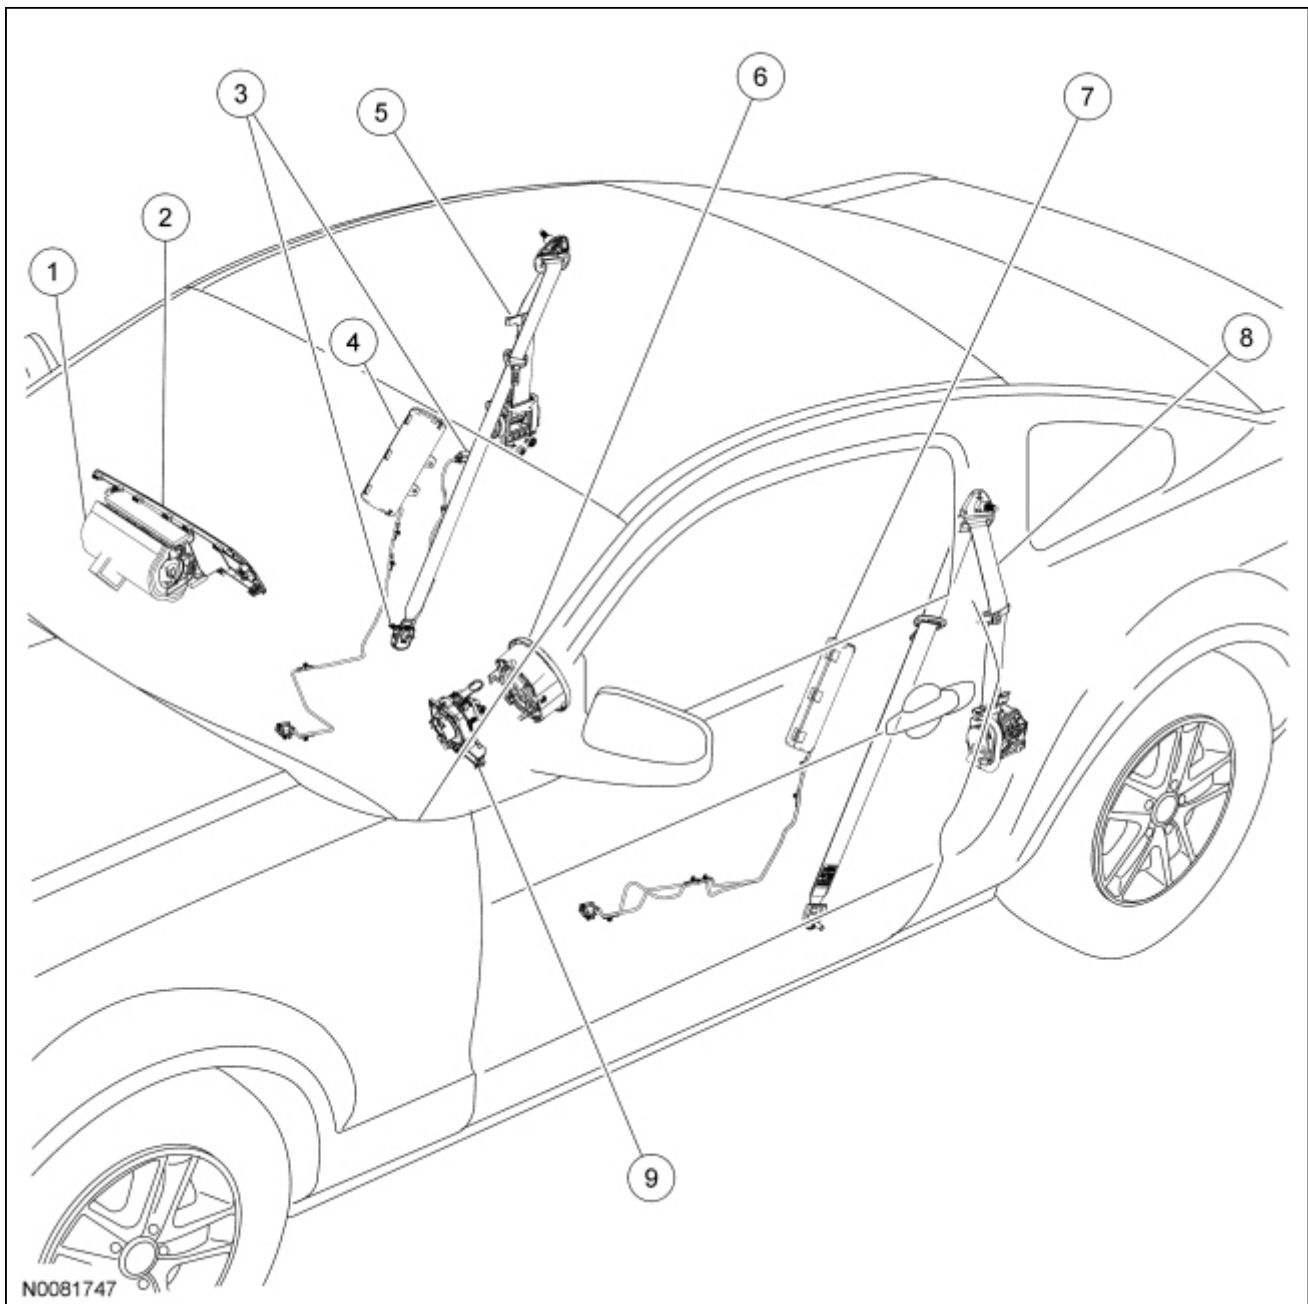

Item	Part Number	Description
1	044A74	Passenger air bag module assembly

2	04338	Passenger air bag cover
3	—	Belt Tension Sensor (BTS) (part of 611B08)
4	611D10	Passenger seat side air bag module
5	611B08	Passenger safety belt retractor and pretensioner (includes BTS)
6	043B13	Driver air bag module
7	611D11	Driver seat side air bag module
8	611B09	Driver safety belt retractor and pretensioner
9	14A664	Clockspring

Air Bag and Safety Belt Pretensioner Supplemental Restraint System (SRS) Components (Illustration 2 of 2)

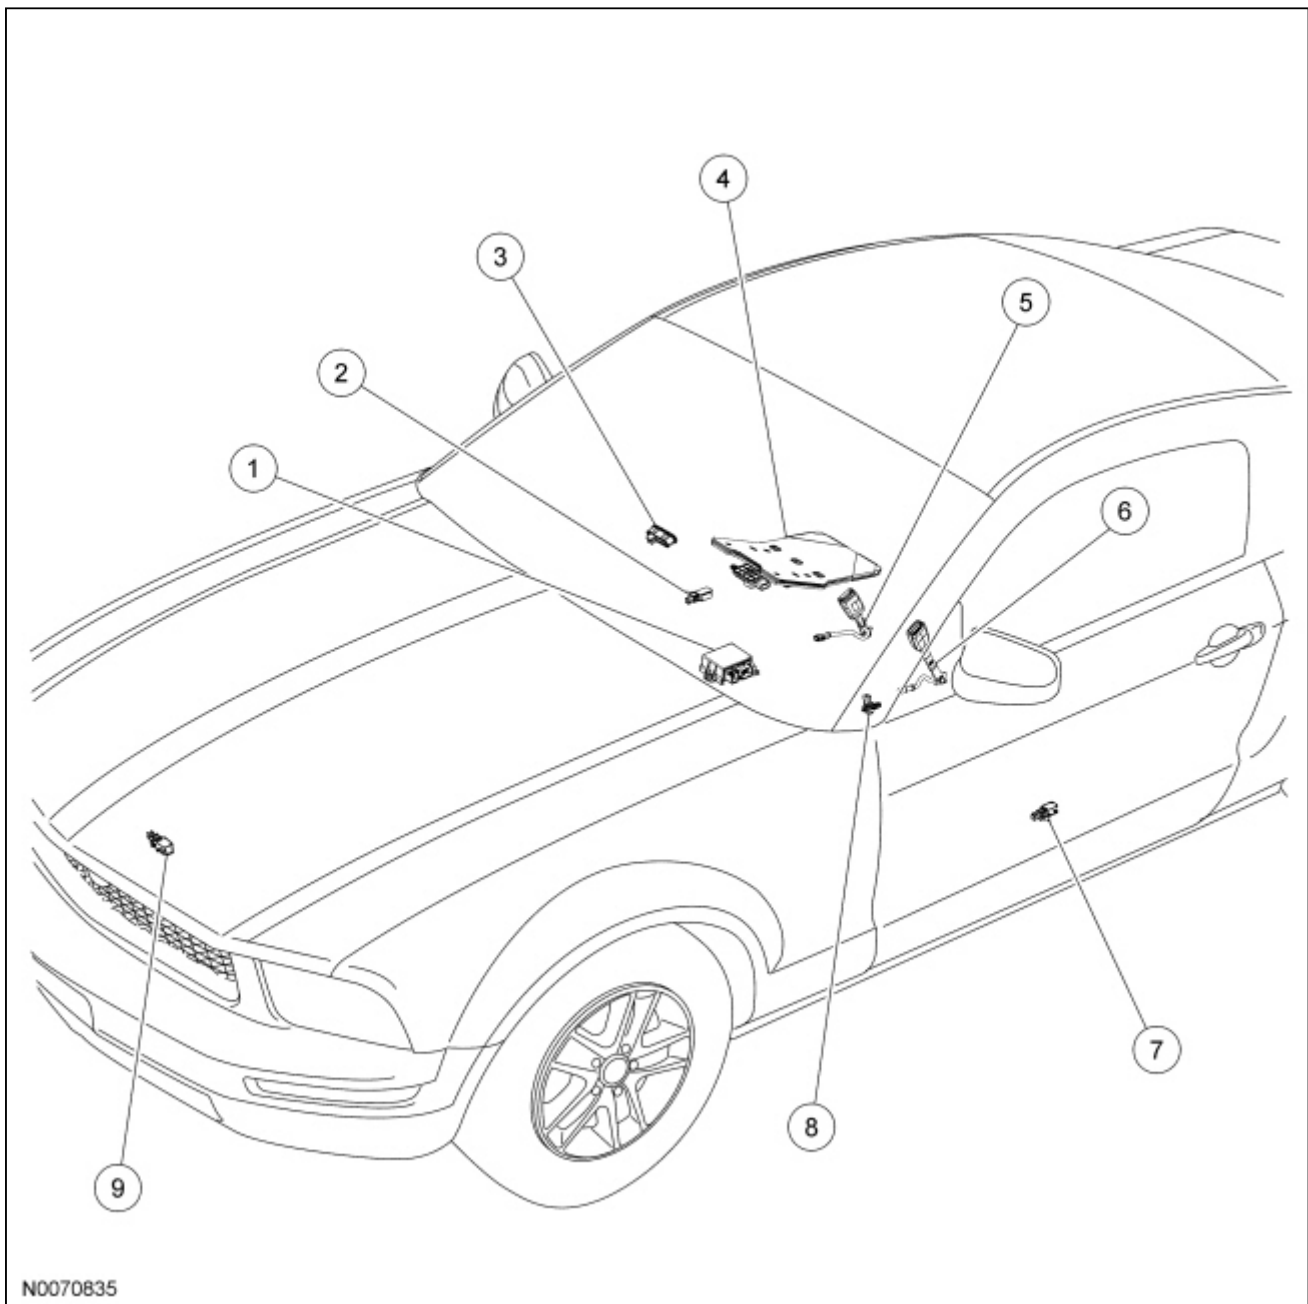

N0070835

Item	Part Number	Description
------	-------------	-------------

1	14B321	Restraints Control Module (RCM)
2	14B345	Passenger side impact sensor
3	—	Passenger Air Bag Deactivation (PAD) indicator
4	603B02	Occupant Classification Sensor (OCS) system
5	61202	Passenger safety belt buckle (includes safety belt switch)
6	61203	Driver safety belt buckle (includes safety belt switch)
7	14B345	Driver side impact sensor
8	14B416	Seat position sensor
9	14B345	Front impact severity sensor (Driver/Center front crash sensor)
