


Passenger Air Bag Deactivation (PAD) Indicator

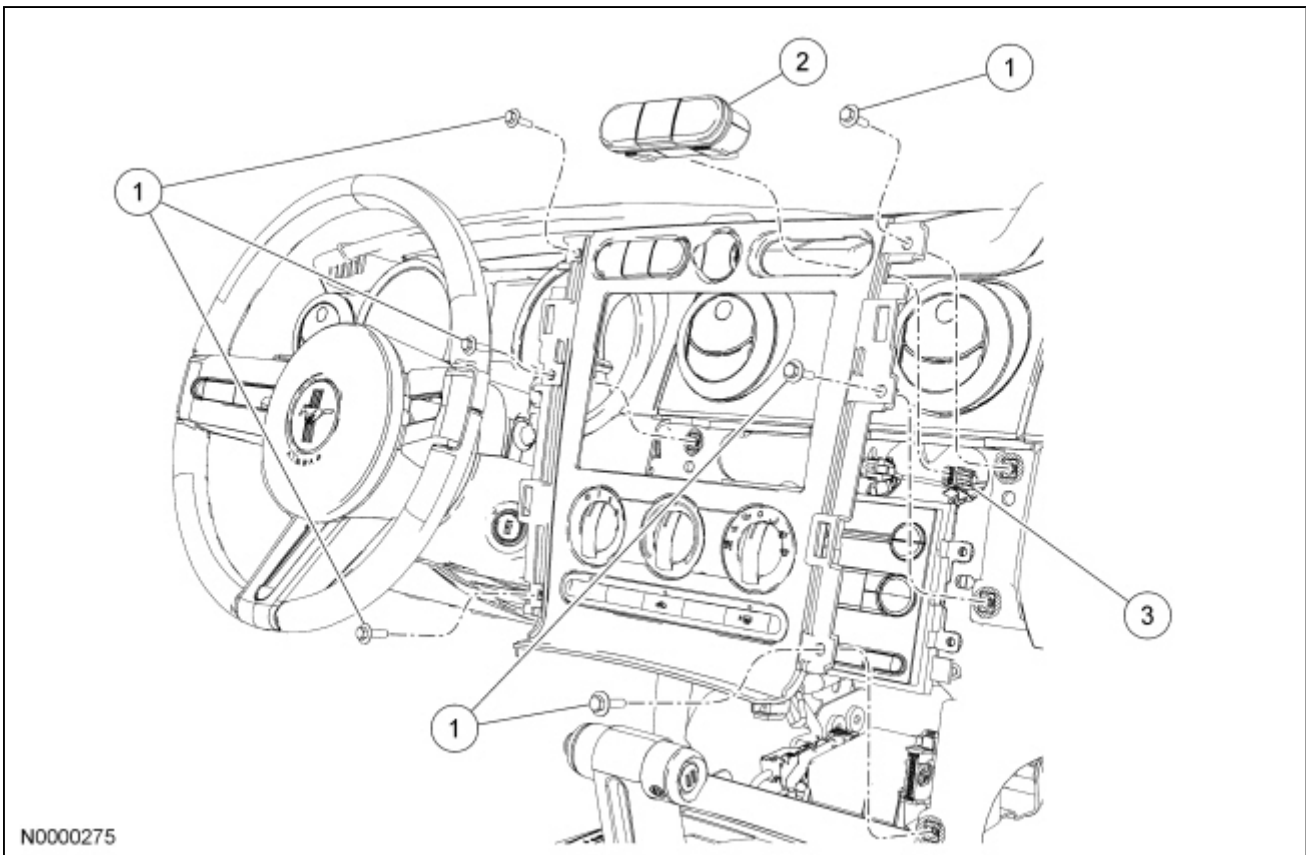

Item	Part Number	Description
1	—	Center instrument panel finish panel screws
2	13D734	Passenger Air Bag Deactivation (PAD) indicator
3	—	PAD indicator electrical connector (part of 14401)

NOTE: The Passenger Air Bag Deactivation (PAD) indicator is part of the Hazard/Traction control switch assembly.

- NOTE:** The Ignition must be in OFF position if disconnecting the [PAD](#) indicator electrical connector. Otherwise, a DTC will be set in the Restraints Control Module (RCM) memory and must be cleared before releasing the vehicle.

Turn the ignition the OFF and wait at least one minute.

- Remove the instrument panel center finish panel. For additional information, refer to the appropriate procedure in [Section 501-12](#).
- Release the 4 tabs (2 upper and 2 lower) on the [PAD](#) indicator and remove it from the instrument panel center finish panel.
- To install, reverse the removal procedure.
- Repower the [SRS](#). For additional information, refer to [Supplemental Restraint System \(SRS\) Depowering and Repowering](#) in the General Procedures portion of this section.

