


## Passenger Air Bag Module

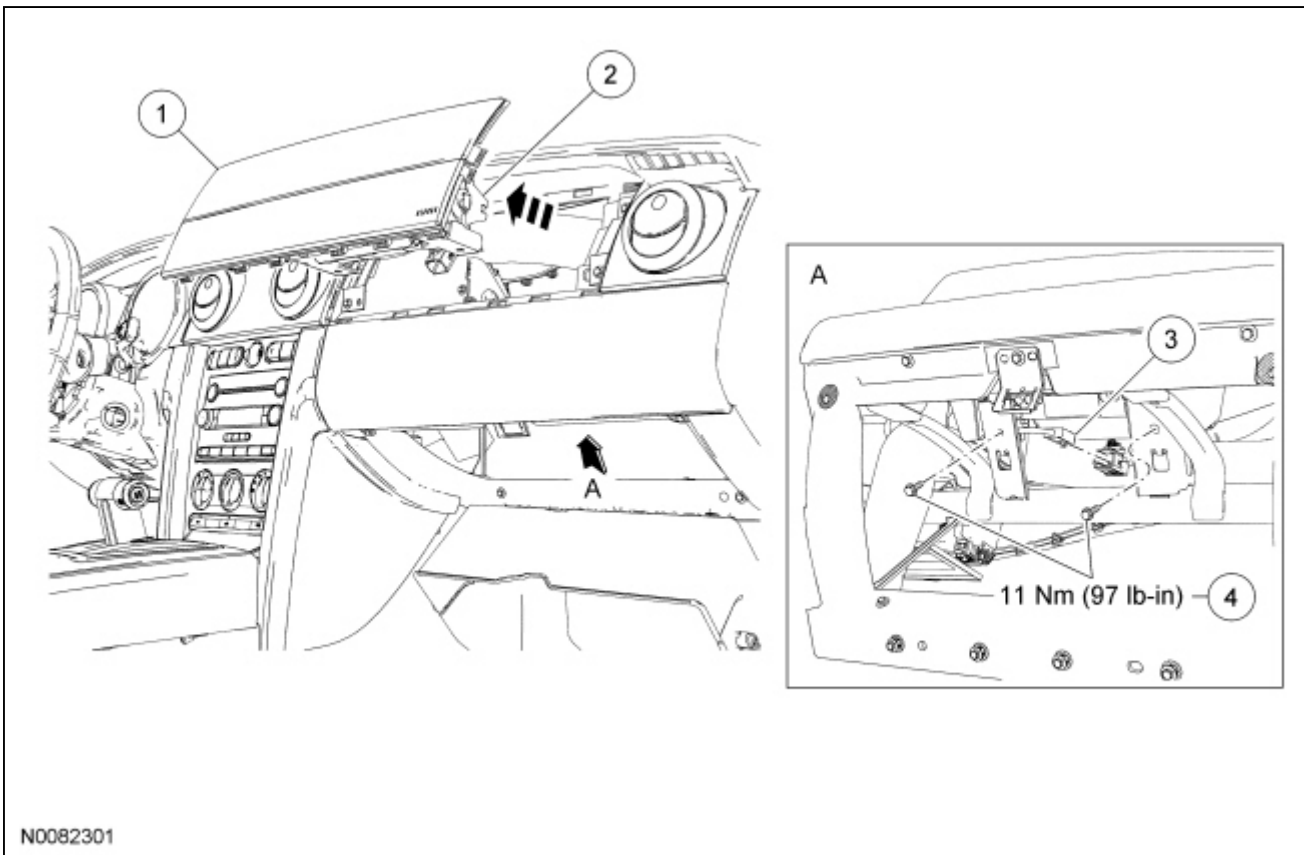

Item	Part Number	Description
1	04338	Passenger air bag cover
2	044A74	Passenger air bag module assembly
3	—	Passenger air bag module electrical connector (part of 14401)
4	W505252	Passenger air bag module bolts (2 required)

### Removal and Installation

**WARNING:** Always carry or place a live air bag module with the air bag and deployment door/trim cover/tear seam pointed away from the body. Do not set a live air bag module down with the deployment door/trim cover/tear seam face down. Failure to follow these instructions may result in serious personal injury in the event of an accidental deployment.

**WARNING:** Never probe the electrical connectors on air bag, Safety Canopy® or side air curtain modules. Failure to follow this instruction may result in the accidental deployment of these modules, which increases the risk of serious personal injury or death.

**NOTICE:** Do not install a new passenger air bag module assembly due to a damaged or discolored passenger air bag cover. The passenger air bag cover can be serviced separately from the passenger air bag module assembly. For additional information, refer to [Air Bag Trim Cover — Passenger](#) in this section.

**NOTE:** The air bag warning indicator illuminates when the correct Restraints Control Module (RCM) fuse is removed and the ignition is ON.

**NOTE:** The Supplemental Restraint System (SRS) must be fully operational and free of faults before releasing the vehicle to the customer.

1. Depower the [SRS](#). For additional information, refer to [Supplemental Restraint System \(SRS\) Depowering and Repowering](#) in the General Procedures portion of this section.
  2. Lower the glove compartment door and disconnect the passenger air bag module electrical connector.
  3. Remove the 2 air bag module bolts.
    - To install, tighten to 11 Nm (97 lb-in).
  4. Through the glove box opening, release the passenger air bag cover clips (6 upper, 6 lower and 2 on each side) from the instrument panel and then remove the passenger air bag module.
  5. To install, reverse the removal procedure.
  6. Repower the [SRS](#). For additional information, refer to [Supplemental Restraint System \(SRS\) Depowering and Repowering](#) in the General Procedures portion of this section.
-