


## Seat Position Sensor

**NOTE:** Power seat track shown, manual seat track similar.

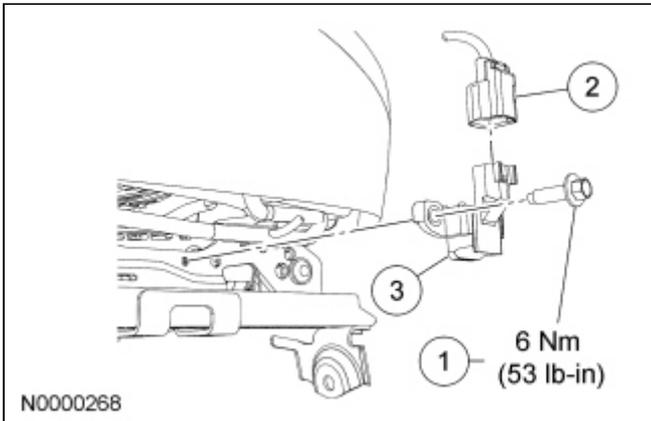

Item	Part Number	Description
1	—	Seat position sensor bolt
2	—	Seat position sensor electrical connector (part of 14A699)
3	14B416	Seat position sensor

**NOTE:** The air bag warning indicator illuminates when the correct Restraints Control Module (RCM) fuse is removed and the ignition switch is ON.

**NOTE:** The Supplemental Restraint System (SRS) must be fully operational and free of faults before releasing the vehicle to the customer.

1. Position the front seat to the rearmost and upward position.
2. Depower the [SRS](#). For additional information, refer to [Supplemental Restraint System \(SRS\) Depowering and Repowering](#) in the General Procedures portion of this section.
3. Disconnect the seat position sensor electrical connector.
4.  **WARNING:** Always tighten the seat position sensor retaining bolt to specified torque. Failure to do so may result in incorrect restraint system operation, which increases the risk of personal injury or death in a crash.

**NOTE:** Note the position of the seat position sensor locating tab for installation.

Remove the bolt and seat position sensor.

- To install, tighten to 6 Nm (53 lb-in).

5. To install, reverse the removal procedure.
6. Repower the [SRS](#). For additional information, refer to [Supplemental Restraint System \(SRS\) Depowering and Repowering](#) in the General Procedures portion of this section.

