


Base Part #:
10849

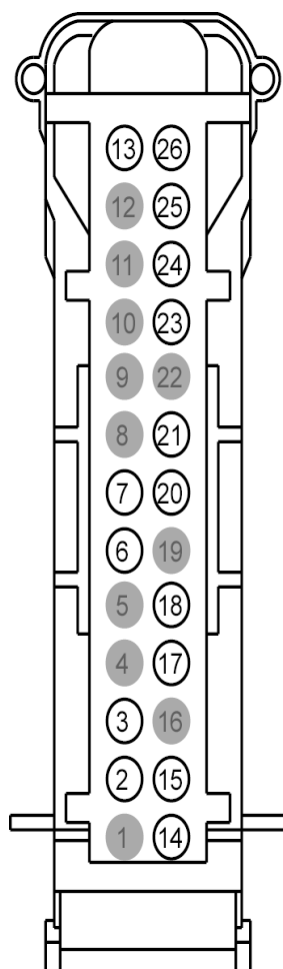

Pin	Circuit	Gauge	Circuit Function	Qualifier
1	*	*	not used	
2	1205 (BK)	22	Ground	
3	1001 (LG-RD)	22	Voltage supplied at all times (overload protected)	
4	*	*	not used	
5	*	*	not used	
6	1411 (GY-OG)	22	Message center switch signal	
7	1410 (TN-OG)	22	Message center switch return	
8	*	*	not used	
9	*	*	not used	
10	*	*	not used	
11	*	*	not used	
12	*	*	not used	
13	1414 (LG-VT)	18	Key warning switch signal	
14	1848 (PK-OG)	22	Medium speed CAN -	
15	1847 (WH-OG)	22	Medium speed CAN +	
16	*	*	not used	
17	1828 (PK-LG)	22	High speed CAN -	
18	1827 (WH-LG)	22	High speed CAN +	
19	*	*	not used	
20	1412 (WH-PK)	22	Traction control switch signal	
21	939 (VT)	22	Traction control indicator	
22	*	*	not used	
23	1083 (LB-PK)	20	Air bag/safety belt status tone control	
24	608 (BK-YE)	20	Air bag indicator control	
25	1266 (RD-YE)	22	Voltage supplied in Start and Run	
26	489 (PK-BK)	22	Voltage supplied in Start and Run	