


Connector: C1035A

Description:
 BUSSED ELECTRICAL
 CENTER (BEC)

Harness:
 14A005

Base Part #:
 14K001

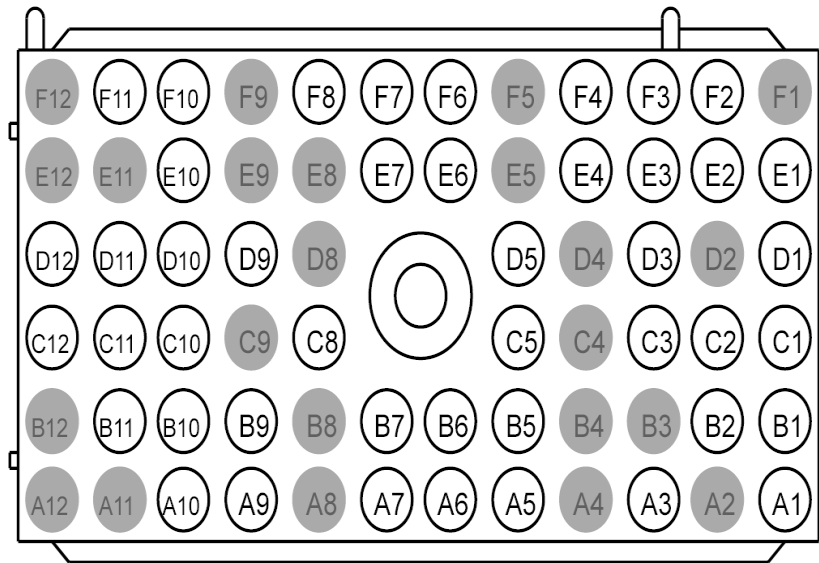

Pin	Circuit	Gauge	Circuit Function	Qualifier
A1	1323 (OG-RD)	22	Horn relay, control	
A2	*	*	not used	
A3	1347 (DB-WH)	22	Fog lamp relay, control	
A4	*	*	not used	
A5	1052 (TN-BK)	14	Voltage supplied at all times (overload protected)	
A6	667 (WH-RD)	22	Side lamp, left front, feed	
A7	1050 (LG-VT)	18	Voltage supplied at all times (overload protected)	
A8	*	*	not used	
A9	32 (RD-LB)	20	Voltage supplied in Start (overload protected)	
A10	1174 (WH-RD)	22	Convertible top lower relay, control	
A11	*	*	not used	
A12	*	*	not used	
B1	364 (BK-LG)	22	Blower motor relay control	
B2	294 (WH-LB)	20	Voltage supplied at all times (overload protected)	
B3	*	*	not used	
B4	*	*	not used	
B5	601 (LB-PK)	14	Voltage supplied at all times (overload protected)	
B6	1856 (GY-OG)	20	Voltage supplied in Start and Run (overload protected)	5.4L
B6	1856 (GY-OG)	20	Voltage supplied in Start and Run (overload protected)	5.4L
B6	1118 (RD)	20	Voltage supplied in Start and Run (overload protected)	
B7	2024 (VT-OG)	20	Fog lamp relay, output	
B8	*	*	not used	
B9	3258 (RD-YE)	12	Voltage supplied at all times (overload protected)	5.4L
B9	1048 (LB-WH)	12	Voltage supplied at all times (overload protected)	
B10	902 (YE)	12	Convertible top motor, to, Convertible top lower relay +/-	
B11	1708 (LG-BK)	22	High beam relay, control	
B12	*	*	not used	
C1	371 (PK-WH)	12	Blower motor relay output	
C2	391 (RD-YE)	18	Voltage supplied in Start and Run (overload protected)	
C3	1322 (BN-WH)	22	Voltage supplied in Run or Accessory (overload protected)	
C4	*	*	not used	
C5	1523 (DG)	12	Voltage supplied at all times (overload protected)	
C8	1521 (LG)	16	Voltage supplied at all times (overload protected)	
C9	*	*	not used	
C10	33 (WH-PK)	20	Switched power to starter relay	
C11	1862 (VT-WH)	22	Transmission overdrive cancel switch signal	
C12	238 (DG-YE)	18	Fuel pump relay, output	

D1	1339 (BK-PK)	22	Power, Exterior lamps
D2	*	*	not used
D3	1340 (DG)	22	Power, Exterior lamps
D4	*	*	not used
D5	40 (LB-WH)	16	Voltage supplied at all times (overload protected)
D8	*	*	not used
D9	1679 (WH-YE)	16	Voltage supplied at all times (overload protected)
D10	14 (BN)	22	Side lamp, right front feed
D11	1683 (DG)	20	Voltage supplied at all times (overload protected)
D12	1419 (LG-YE)	22	Starter relay, control
E1	1342 (GY-BK)	22	Turn lamps, feed, left front
E2	321 (GY-WH)	22	A/C clutch relay control
E3	1389 (WH)	22	Rear window defrost relay control
E4	1769 (BN-PK)	20	PCM relay control
E5	*	*	not used
E6	1341 (DB-OG)	22	Turn lamps, feed, right front
E7	1092 (PK-OG)	16	Luggage compartment lid release relay, output
E8	*	*	not used
E9	*	*	not used
E10	588 (VT)	22	Convertible top raise relay, control
E11	*	*	not used
E12	*	*	not used
F1	*	*	not used
F2	1336 (LG-WH)	20	Low beam lamp, right front, feed
F3	186 (BN-LB)	14	Rear window defrost relay, switched power
F4	1140 (VT)	NS	Voltage supplied in Start and Run (overload protected)
F5	*	*	not used
F6	1338 (WH)	20	Low beam lamp, left front, feed
F7	26 (WH-VT)	22	Trailer tow relay, parking lamp control
F8	905 (GY-LB)	12	Voltage supplied at all times (overload protected)
F9	*	*	not used
F10	903 (RD)	12	Convertible top raise relay, output
F11	729 (RD-WH)	18	Voltage supplied at all times (overload protected)
F12	*	*	not used