


Connector: C2280C **Description:** SMART JUNCTION BOX (SJB) **Harness:** 14A005 **Base Part #:** 15604

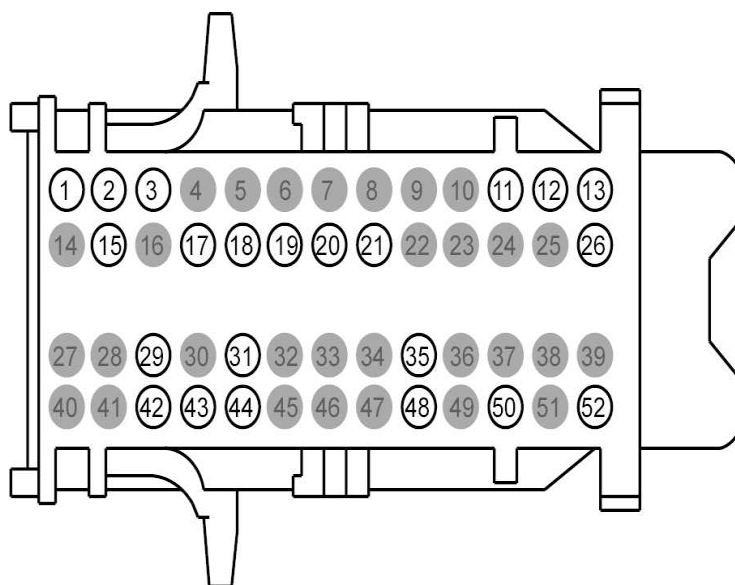

Pin	Circuit	Gauge	Circuit Function	Qualifier
1	1708 (LG-BK)	22	High beam relay, control	
2	1347 (DB-WH)	22	Fog lamp relay, control	
3	2016 (WH-LG)	22	Electrochromatic mirror reverse	
4	*	*	not used	
5	*	*	not used	
6	*	*	not used	
7	*	*	not used	
8	*	*	not used	
9	*	*	not used	
10	*	*	not used	
11	588 (VT)	22	Convertible top raise relay, control	
12	1389 (WH)	22	Rear window defrost relay, control	
13	26 (WH-VT)	22	Luggage compartment lid release relay, control	
14	*	*	not used	
15	707 (WH-YE)	22	Luggage compartment lamp, feed	
15	1711 (VT-OG)	22	Anti-theft hood switch, switch sense	
16	*	*	not used	
17	1351 (TN)	22	Luggage compartment lid ajar switch, signal	
18	1558 (TN-BK)	22	Convertible Top, Up	
19	700 (WH-VT)	22	Convertible Top, Down	
20	2012 (RD-BK)	22	Rear window, Down	
21	1350 (WH-PK)	22	Anti-theft luggage compartment switch, disarm	
22	*	*	not used	
23	*	*	not used	
24	*	*	not used	
25	*	*	not used	
26	1174 (WH-RD)	22	Convertible top lower relay, control	
27	*	*	not used	
28	*	*	not used	
29	1323 (OG-RD)	22	Horn relay, control	
30	*	*	not used	
31	1357 (LB-YE)	18	Fuel sender level return	
32	*	*	not used	
33	*	*	not used	
34	*	*	not used	
35	512 (TN-LG)	22	Signal return	
36	*	*	not used	

37	*	*	not used
38	*	*	not used
39	*	*	not used
40	*	*	not used
41	*	*	not used
42	208 (GY)	20	Oil pressure switch signal
43	29 (YE-WH)	18	Fuel sender level 2 signal
44	1356 (LG-VT)	18	Fuel sender level 1 signal
45	*	*	not used
46	*	*	not used
47	*	*	not used
48	547 (LG-YE)	22	Brake fluid level switch, signal
49	*	*	not used
50	1309 (RD-YE)	22	Parking brake switch signal
51	*	*	not used
52	2014 (YE-LB)	22	Rear window, Down