

**2009 Mustang Connector List**
 Sort by Title     Sort by Connector Number

<a href="#">C100</a> A/C CLUTCH FIELD COIL	<a href="#">C101</a> CRANKSHAFT POSITION SENSOR	<a href="#">C102A</a> GENERATOR	<a href="#">C102B</a> GENERATOR	<a href="#">C103</a> OIL PRESSURE SWITCH	<a href="#">C106</a> FUEL RAIL PRESSURE AND TEMPERATURE SENSOR
<a href="#">C107</a> CYLINDER HEAD TEMPERATURE SENSOR	<a href="#">C108</a> KNOCK SENSOR	<a href="#">C109</a> KNOCK SENSOR	<a href="#">C110</a> Inline	<a href="#">C111</a> COIL ON PLUG (COP) 1	<a href="#">C112</a> COIL ON PLUG (COP) 2
<a href="#">C113</a> COIL ON PLUG (COP) 3	<a href="#">C114</a> COIL ON PLUG (COP) 4	<a href="#">C115</a> COIL ON PLUG (COP) 5	<a href="#">C116</a> COIL ON PLUG (COP) 6	<a href="#">C117</a> COIL ON PLUG (COP) 7	<a href="#">C118</a> COIL ON PLUG (COP) 8
<a href="#">C121</a> POWER STEERING PRESSURE SWITCH	<a href="#">C123</a> EVAP CANISTER PURGE VALVE	<a href="#">C124</a> BRAKE FLUID LEVEL SWITCH	<a href="#">C125</a> WINDSHIELD WIPER MOTOR	<a href="#">C127</a> HOOD SWITCH	<a href="#">C128</a> MASS AIR FLOW/INTAKE AIR TEMPERATURE (MAF/IAT) SENSOR
<a href="#">C130</a> A/C CYCLING SWITCH	<a href="#">C131</a> HORN	<a href="#">C133</a> Inline	<a href="#">C134</a> Inline	<a href="#">C135</a> ANTI-LOCK BRAKE SYSTEM (ABS) MODULE	<a href="#">C137</a> WINDSHIELD WASHER PUMP MOTOR
<a href="#">C139</a> Inline	<a href="#">C140</a> Inline	<a href="#">C141</a> HEATED OXYGEN SENSOR (HO2S) #22	<a href="#">C142</a> HEATED OXYGEN SENSOR (HO2S) #12	<a href="#">C143</a> TURBINE SHAFT SPEED (TSS) SENSOR	<a href="#">C144</a> Inline
<a href="#">C146</a> Inline	<a href="#">C150</a> WHEEL SPEED SENSOR, LEFT FRONT	<a href="#">C151</a> SIDE LAMP, LEFT	<a href="#">C152</a> FOG LAMP, LEFT FRONT	<a href="#">C160</a> WHEEL SPEED SENSOR, RIGHT FRONT	<a href="#">C161</a> SIDE LAMP, RIGHT
<a href="#">C162</a> FOG LAMP, RIGHT FRONT	<a href="#">C164</a> INTERMEDIATE SHAFT SPEED (ISS) SENSOR	<a href="#">C167</a> DIGITAL TRANSMISSION RANGE (DTR) SENSOR	<a href="#">C169</a> REVERSING LAMPS SWITCH	<a href="#">C171</a> HEATED OXYGEN SENSOR (HO2S) #11	<a href="#">C172</a> HEATED OXYGEN SENSOR (HO2S) #21
<a href="#">C174</a> IGNITION TRANSFORMER CAPACITOR 1	<a href="#">C175B</a> POWERTRAIN CONTROL MODULE (PCM)	<a href="#">C175E</a> POWERTRAIN CONTROL MODULE (PCM)	<a href="#">C175T</a> POWERTRAIN CONTROL MODULE (PCM)	<a href="#">C177</a> FRONT IMPACT SEVERITY SENSOR	<a href="#">C180</a> CAMSHAFT POSITION SENSOR
<a href="#">C189</a> THROTTLE POSITION (TP) SENSOR	<a href="#">C190</a> HEATED POSITIVE CRANKCASE VENTILATION (PCV) VALVE	<a href="#">C191</a> INTAKE MANIFOLD RUNNING CONTROL (IMRC)	<a href="#">C193</a> OUTPUT SHAFT SPEED (OSS) SENSOR	<a href="#">C194</a> IGNITION TRANSFORMER CAPACITOR 2	<a href="#">C197A</a> STARTER MOTOR
<a href="#">C197B</a> STARTER MOTOR	<a href="#">C199</a> AUTOMATIC TRANSMISSION	<a href="#">C202</a> MULTIFUNCTION SWITCH	<a href="#">C205</a> HEADLAMP SWITCH	<a href="#">C210</a> Inline	<a href="#">C211</a> Inline
<a href="#">C212</a> Inline	<a href="#">C213</a> Inline	<a href="#">C214</a> Inline	<a href="#">C215</a> Inline	<a href="#">C219</a> Inline	<a href="#">C220</a> INSTRUMENT CLUSTER (IC)
<a href="#">C232</a> DEFROST MODE DOOR ACTUATOR	<a href="#">C234</a> FLOOR/PANEL MODE DOOR ACTUATOR	<a href="#">C238</a> Inline	<a href="#">C248</a> Inline	<a href="#">C250</a> IGNITION SWITCH	<a href="#">C251</a> DATA LINK CONNECTOR (DLC)
<a href="#">C253</a> MESSAGE CENTER SWITCH	<a href="#">C256</a> PASSENGER AIR BAG MODULE	<a href="#">C257</a> CLUTCH PEDAL POSITION SWITCH	<a href="#">C277</a> DEACTIVATOR SWITCH	<a href="#">C278</a> SPEED CONTROL DEACTIVATION SWITCH	<a href="#">C282</a> INERTIA FUEL SHUTOFF (IFS) SWITCH
<a href="#">C289</a>	<a href="#">C290A</a>	<a href="#">C290B</a>	<a href="#">C290D</a>	<a href="#">C294A</a>	<a href="#">C294B</a>

TEMPERATURE BLEND DOOR ACTUATOR <a href="#">C300</a> Inline	AUDIO CONTROL MODULE (ACM) <a href="#">C306</a> PARKING BRAKE SWITCH	AUDIO CONTROL MODULE (ACM) <a href="#">C307</a> TRANSMISSION SHIFT SELECTOR	AUDIO CONTROL MODULE (ACM) <a href="#">C311</a> Inline	HVAC MODULE <a href="#">C312</a> Inline	BLOWER MOTOR SWITCH <a href="#">C313</a> Inline
<a href="#">C314</a> Inline	<a href="#">C323</a> SAFETY BELT BUCKLE SWITCH, DRIVER	<a href="#">C334</a> SEAT CUSHION HEATER, RIGHT FRONT	<a href="#">C335</a> SEAT BACK REST HEATER, RIGHT FRONT	<a href="#">C337</a> SIDE AIR BAG MODULE, RIGHT	<a href="#">C339</a> Inline
<a href="#">C353</a> POWER SEAT MOTOR ASSEMBLY, LEFT	<a href="#">C356</a> SEAT POSITION SENSOR, DRIVER	<a href="#">C360</a> SEAT CONTROL SWITCH, DRIVER SIDE FRONT	<a href="#">C361</a> LUMBAR CONTROL SWITCH, LEFT FRONT	<a href="#">C366</a> POWER LUMBAR MOTOR (driver seat)	<a href="#">C367</a> SIDE AIR BAG MODULE, LEFT
<a href="#">C380</a> POWER POINT	<a href="#">C395</a> SPEAKER, LEFT QUARTER PANEL	<a href="#">C396</a> SPEAKER, RIGHT QUARTER PANEL	<a href="#">C402</a> REAR WINDOW DEFROST GRID	<a href="#">C402A</a> REAR WINDOW DEFROST GRID	<a href="#">C402B</a> REAR WINDOW DEFROST GRID
<a href="#">C405</a> Inline	<a href="#">C410</a> Inline	<a href="#">C411</a> Inline	<a href="#">C412</a> TAIL LAMP, LEFT	<a href="#">C415</a> TAIL LAMP, RIGHT	<a href="#">C421</a> Inline
<a href="#">C422</a> Inline	<a href="#">C423</a> Inline	<a href="#">C428</a> LUGGAGE COMPARTMENT LAMP	<a href="#">C430</a> LUGGAGE COMPARTMENT LID RELEASE SOLENOID	<a href="#">C433</a> FUEL TANK UNIT	<a href="#">C434</a> FUEL SENDER
<a href="#">C435</a> FUEL TANK PRESSURE (FTP) SENSOR	<a href="#">C451</a> REVERSING LAMP, LEFT	<a href="#">C461</a> REVERSING LAMP, RIGHT	<a href="#">C475</a> HIGH MOUNTED STOPLAMP	<a href="#">C481</a> SIDE LAMP, LEFT REAR	<a href="#">C482</a> SIDE LAMP, RIGHT REAR
<a href="#">C483</a> ANTI-THEFT LUGGAGE COMPARTMENT SWITCH	<a href="#">C484</a> SPEAKER, LEFT QUARTER PANEL	<a href="#">C485</a> SPEAKER, RIGHT QUARTER PANEL	<a href="#">C504</a> MASTER WINDOW ADJUST SWITCH	<a href="#">C505</a> DOOR LOCK SWITCH, DRIVER SIDE	<a href="#">C509</a> ANTI-THEFT INHIBIT SWITCH
<a href="#">C516</a> EXTERIOR REAR VIEW MIRROR, LEFT	<a href="#">C518</a> POWER WINDOW MOTOR, LEFT FRONT	<a href="#">C523</a> SPEAKER, LEFT DOOR	<a href="#">C525</a> DOOR LOCK ACTUATOR, LEFT FRONT	<a href="#">C526</a> DOOR AJAR SWITCH, LEFT FRONT	<a href="#">C527</a> EXTERIOR REAR VIEW MIRROR SWITCH
<a href="#">C536</a> SUBWOOFER, LEFT FRONT	<a href="#">C566</a> REAR WINDOW ADJUST SWITCH	<a href="#">C602</a> DOOR AJAR SWITCH, RIGHT FRONT	<a href="#">C603</a> DOOR LOCK ACTUATOR, RIGHT FRONT	<a href="#">C604</a> WINDOW ADJUST SWITCH, PASSENGER SIDE	<a href="#">C605</a> DOOR LOCK SWITCH, PASSENGER SIDE
<a href="#">C612</a> SPEAKER, RIGHT DOOR	<a href="#">C622</a> EXTERIOR REAR VIEW MIRROR, RIGHT	<a href="#">C623</a> POWER WINDOW MOTOR, RIGHT FRONT	<a href="#">C628</a> SUBWOOFER, RIGHT FRONT	<a href="#">C911</a> ELECTROCHROMATIC INSIDE MIRROR UNIT	<a href="#">C913</a> Inline
<a href="#">C919</a> Inline	<a href="#">C930</a> OVERHEAD CONSOLE	<a href="#">C1021</a> HEADLAMP, LEFT	<a href="#">C1023</a> PARK/TURN LAMP, LEFT FRONT	<a href="#">C1035A</a> BUSSED ELECTRICAL CENTER (BEC)	<a href="#">C1035B</a> BUSSED ELECTRICAL CENTER (BEC)
<a href="#">C1035C</a> BUSSED ELECTRICAL CENTER (BEC)	<a href="#">C1035D</a> BUSSED ELECTRICAL CENTER (BEC)	<a href="#">C1035E</a> BUSSED ELECTRICAL CENTER (BEC)	<a href="#">C1041</a> HEADLAMP, RIGHT	<a href="#">C1043</a> PARK/TURN LAMP, RIGHT FRONT	<a href="#">C1048</a> ENGINE COOLING FAN MOTOR
<a href="#">C1064</a> ENGINE COOLANT TEMPERATURE (ECT) SENSOR	<a href="#">C1065</a> IGNITION COIL	<a href="#">C1078</a> DUAL PRESSURE SWITCH	<a href="#">C1100A</a> BATTERY	<a href="#">C1100B</a> BATTERY	<a href="#">C1100C</a> BATTERY
<a href="#">C1107</a> OUTPUT SHAFT SPEED (OSS) SENSOR	<a href="#">C1120</a> CRANKSHAFT POSITION SENSOR	<a href="#">C1164</a> CYLINDER HEAD TEMPERATURE SENSOR	<a href="#">C1181</a> FUEL INJECTOR 1	<a href="#">C1182</a> FUEL INJECTOR 2	<a href="#">C1183</a> FUEL INJECTOR 3

<a href="#">C1184</a> FUEL INJECTOR 4	<a href="#">C1185</a> FUEL INJECTOR 5	<a href="#">C1186</a> FUEL INJECTOR 6	<a href="#">C1196</a> IGNITION TRANSFORMER CAPACITOR	<a href="#">C1217</a> CHARGE AIR COOLER (CAC) PUMP	<a href="#">C1236</a> INTAKE AIR TEMPERATURE 2 (IAT2) SENSOR
<a href="#">C1260</a> A/C PRESSURE TRANSDUCER SENSOR	<a href="#">C1284</a> HEADLAMP, LEFT	<a href="#">C1285</a> HEADLAMP, RIGHT	<a href="#">C1312</a> FUEL INJECTOR 7	<a href="#">C1313</a> FUEL INJECTOR 8	<a href="#">C1322</a> FOG LAMP, LEFT FRONT
<a href="#">C1323</a> FOG LAMP, RIGHT FRONT	<a href="#">C1358</a> REVERSE LOCKOUT SOLENOID	<a href="#">C1366</a> CAMSHAFT POSITION SENSOR 1	<a href="#">C1367</a> CAMSHAFT POSITION SENSOR 2	<a href="#">C1368</a> ELECTRONIC THROTTLE CONTROL (ETC) MOTOR	<a href="#">C1369</a> VARIABLE CAMSHAFT TIMING (VCT) SOLENOID 1
<a href="#">C1370</a> VARIABLE CAMSHAFT TIMING (VCT) SOLENOID 2	<a href="#">C1450</a> EGR SYSTEM MODULE	<a href="#">C1544</a> IGNITION TRANSFORMER CAPACITOR 1	<a href="#">C1545</a> IGNITION TRANSFORMER CAPACITOR 2	<a href="#">C2007</a> PASSIVE ANTI-THEFT TRANSCIEVER	<a href="#">C2031</a> CIGAR LIGHTER, FRONT
<a href="#">C2039</a> HAZARD FLASHER SWITCH	<a href="#">C2040</a> ACCELERATOR PEDAL POSITION SENSOR	<a href="#">C2041A</a> RESTRAINTS CONTROL MODULE (RCM)	<a href="#">C2041B</a> RESTRAINTS CONTROL MODULE (RCM)	<a href="#">C2066</a> BLOWER MOTOR	<a href="#">C2137</a> WIPER/WASHER SWITCH
<a href="#">C2185</a> BLOWER MOTOR RESISTOR	<a href="#">C2274</a> CLOCK SPRING	<a href="#">C2280A</a> SMART JUNCTION BOX (SJB)	<a href="#">C2280B</a> SMART JUNCTION BOX (SJB)	<a href="#">C2280C</a> SMART JUNCTION BOX (SJB)	<a href="#">C2280D</a> SMART JUNCTION BOX (SJB)
<a href="#">C2280E</a> SMART JUNCTION BOX (SJB)	<a href="#">C2280F</a> SMART JUNCTION BOX (SJB)	<a href="#">C2280G</a> SMART JUNCTION BOX (SJB)	<a href="#">C2280H</a> SMART JUNCTION BOX (SJB)	<a href="#">C2298</a> ILLUMINATION DIMMER SWITCH	<a href="#">C2314</a> STOPLAMP SWITCH
<a href="#">C2325</a> AIR INLET MODE DOOR ACTUATOR	<a href="#">C2993A</a> SUBWOOFER AMPLIFIER, LEFT FRONT	<a href="#">C2993B</a> SUBWOOFER AMPLIFIER, LEFT FRONT	<a href="#">C2994A</a> SUBWOOFER AMPLIFIER, RIGHT FRONT	<a href="#">C2994B</a> SUBWOOFER AMPLIFIER, RIGHT FRONT	<a href="#">C3015</a> POWER SEAT MOTOR ASSEMBLY, RIGHT
<a href="#">C3043</a> OCCUPANT CLASSIFICATION SENSOR MODULE (OCSM)	<a href="#">C3066</a> SAFETY BELT BUCKLE SWITCH, PASSENGER	<a href="#">C3069</a> ANTI-THEFT HORN	<a href="#">C3116</a> WHEEL SPEED SENSOR, LEFT REAR	<a href="#">C3117</a> WHEEL SPEED SENSOR, RIGHT REAR	<a href="#">C3118</a> POWER WINDOW MOTOR, LEFT REAR
<a href="#">C3119</a> POWER WINDOW MOTOR, RIGHT REAR	<a href="#">C3159</a> OCCUPANT CLASSIFICATION SENSOR (OCS)	<a href="#">C3190</a> SEAT CONTROL SWITCH, PASSENGER SIDE FRONT	<a href="#">C3209</a> SIDE IMPACT SENSOR, DRIVER 1	<a href="#">C3211</a> SIDE IMPACT SENSOR, PASSENGER 1	<a href="#">C3238</a> SAFETY BELT TENSION SENSOR, PASSENGER
<a href="#">C3266</a> CONVERTIBLE TOP AJAR SWITCH	<a href="#">C3300</a> SEAT CUSHION HEATER, LEFT FRONT	<a href="#">C3310</a> SEAT BACK REST HEATER, LEFT FRONT	<a href="#">C3312</a> AUDIO INPUT JACK	<a href="#">C3336</a> PASSENGER SAFETY BELT RETRACTOR PRETENSIONER	<a href="#">C3338</a> DRIVER SAFETY BELT RETRACTOR PRETENSIONER
<a href="#">C3347</a> AMBIENT LIGHTING MODULE	<a href="#">C3348</a> AMBIENT LIGHTING SWITCH	<a href="#">C4033</a> FUEL PUMP DRIVER MODULE	<a href="#">C4046</a> LICENSE PLATE LAMP	<a href="#">C4062</a> CONVERTIBLE TOP MOTOR	<a href="#">C4112</a> PARK/STOP/TURN LAMP 1, LEFT REAR
<a href="#">C4113</a> PARK/STOP/TURN LAMP 2, LEFT REAR	<a href="#">C4114</a> PARK/STOP/TURN LAMP 1, RIGHT REAR	<a href="#">C4115</a> PARK/STOP/TURN LAMP 2, RIGHT REAR	<a href="#">C4116</a> EVAP CANISTER VENT CONTROL SOLENOID	<a href="#">C4157A</a> SUBWOOFER AMPLIFIER, LUGGAGE COMPARTMENT LEFT OUTBOARD	<a href="#">C4157B</a> SUBWOOFER AMPLIFIER, LUGGAGE COMPARTMENT LEFT OUTBOARD
<a href="#">C4158A</a> SUBWOOFER AMPLIFIER, LUGGAGE COMPARTMENT LEFT INBOARD	<a href="#">C4158B</a> SUBWOOFER AMPLIFIER, LUGGAGE COMPARTMENT LEFT INBOARD	<a href="#">C4159A</a> SUBWOOFER AMPLIFIER, LUGGAGE COMPARTMENT RIGHT INBOARD	<a href="#">C4159B</a> SUBWOOFER AMPLIFIER, LUGGAGE COMPARTMENT RIGHT INBOARD	<a href="#">C4160A</a> SUBWOOFER AMPLIFIER, LUGGAGE COMPARTMENT RIGHT OUTBOARD	<a href="#">C4160B</a> SUBWOOFER AMPLIFIER, LUGGAGE COMPARTMENT RIGHT OUTBOARD

**C4161**  
SUBWOOFER,  
LUGGAGE  
COMPARTMENT  
LEFT

**C4162**  
SUBWOOFER,  
LUGGAGE  
COMPARTMENT  
RIGHT

**C4331**  
FUEL PUMP  
MODULE

**C4335**  
PRIMARY FUEL  
PUMP DRIVER  
MODULE

**C4336**  
SECONDARY FUEL  
PUMP DRIVER  
MODULE

**C4344**  
SATELLITE  
DIGITAL AUDIO  
RECEIVER  
SYSTEM (SDARS)  
MODULE

**C9013**  
OVERHEAD  
CONSOLE