






Warning
Do not attempt to diagnose or troubleshoot Supplemental Restraint System circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the supplemental restraints to deploy inadvertently, causing injury.







Hot in Start or Run

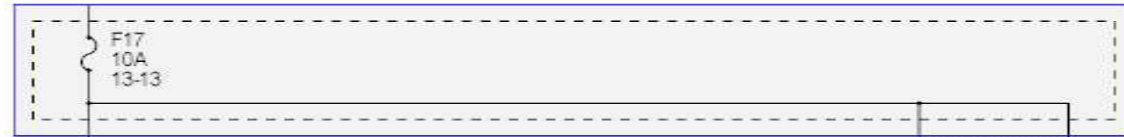


SMART JUNCTION BOX (SJB)
11-3
11-4
11-5

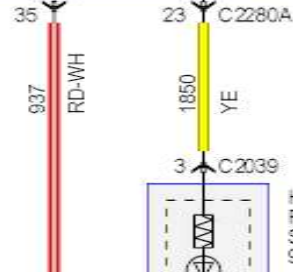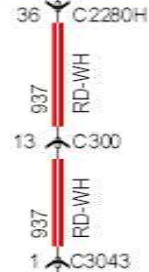

HAZARD FLASHER SWITCH 90-1

 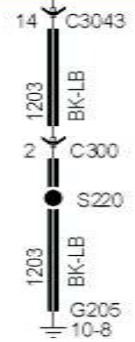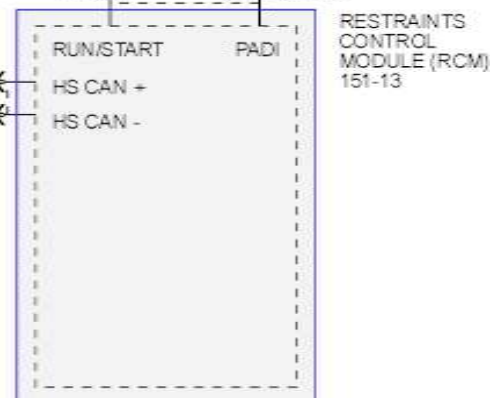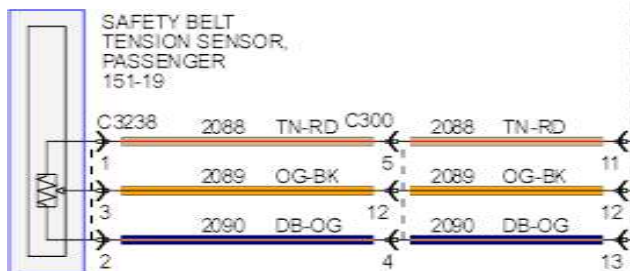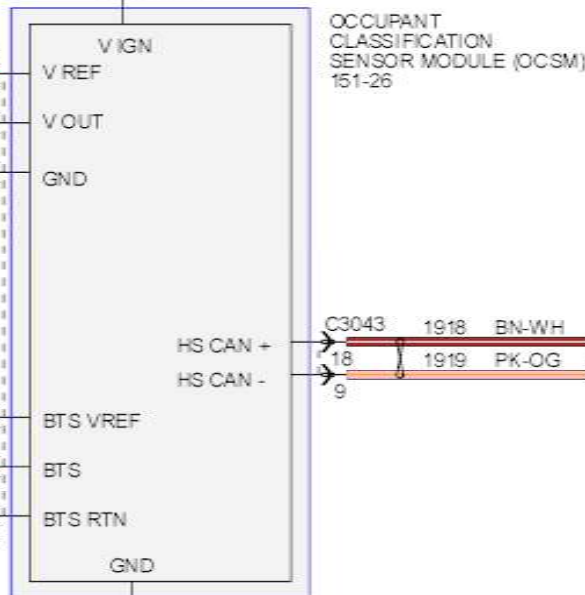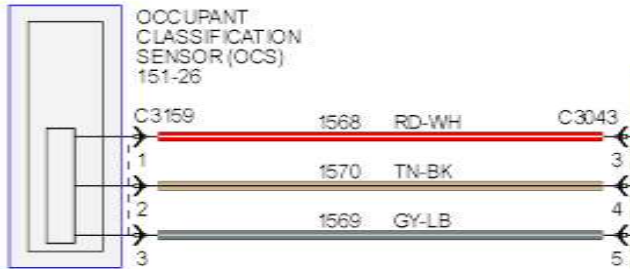


SAFETY BELT
BUCKLE SWITCH,
PASSENGER
151-26

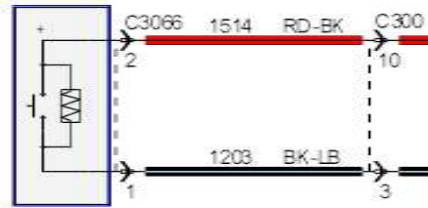


Warning
Do not attempt to diagnose or troubleshoot Supplemental Restraint System circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the supplemental restraints to deploy inadvertently, causing injury.


SAFETY BELT
BUCKLE SWITCH,
DRIVER
151-25

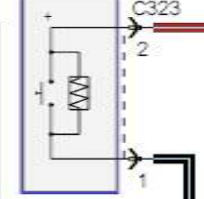


SEAT POSITION
SENSOR,
DRIVER
151-25

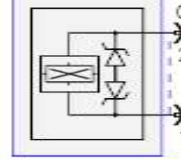



SIDE IMPACT
SENSOR,
DRIVER 1
151-18

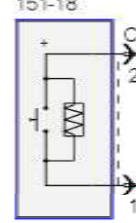


SIDE IMPACT
SENSOR,
PASSENGER 1
151-19

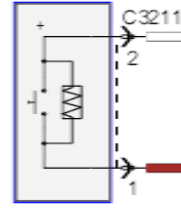

FRONT IMPACT
SEVERITY
SENSOR
151-1

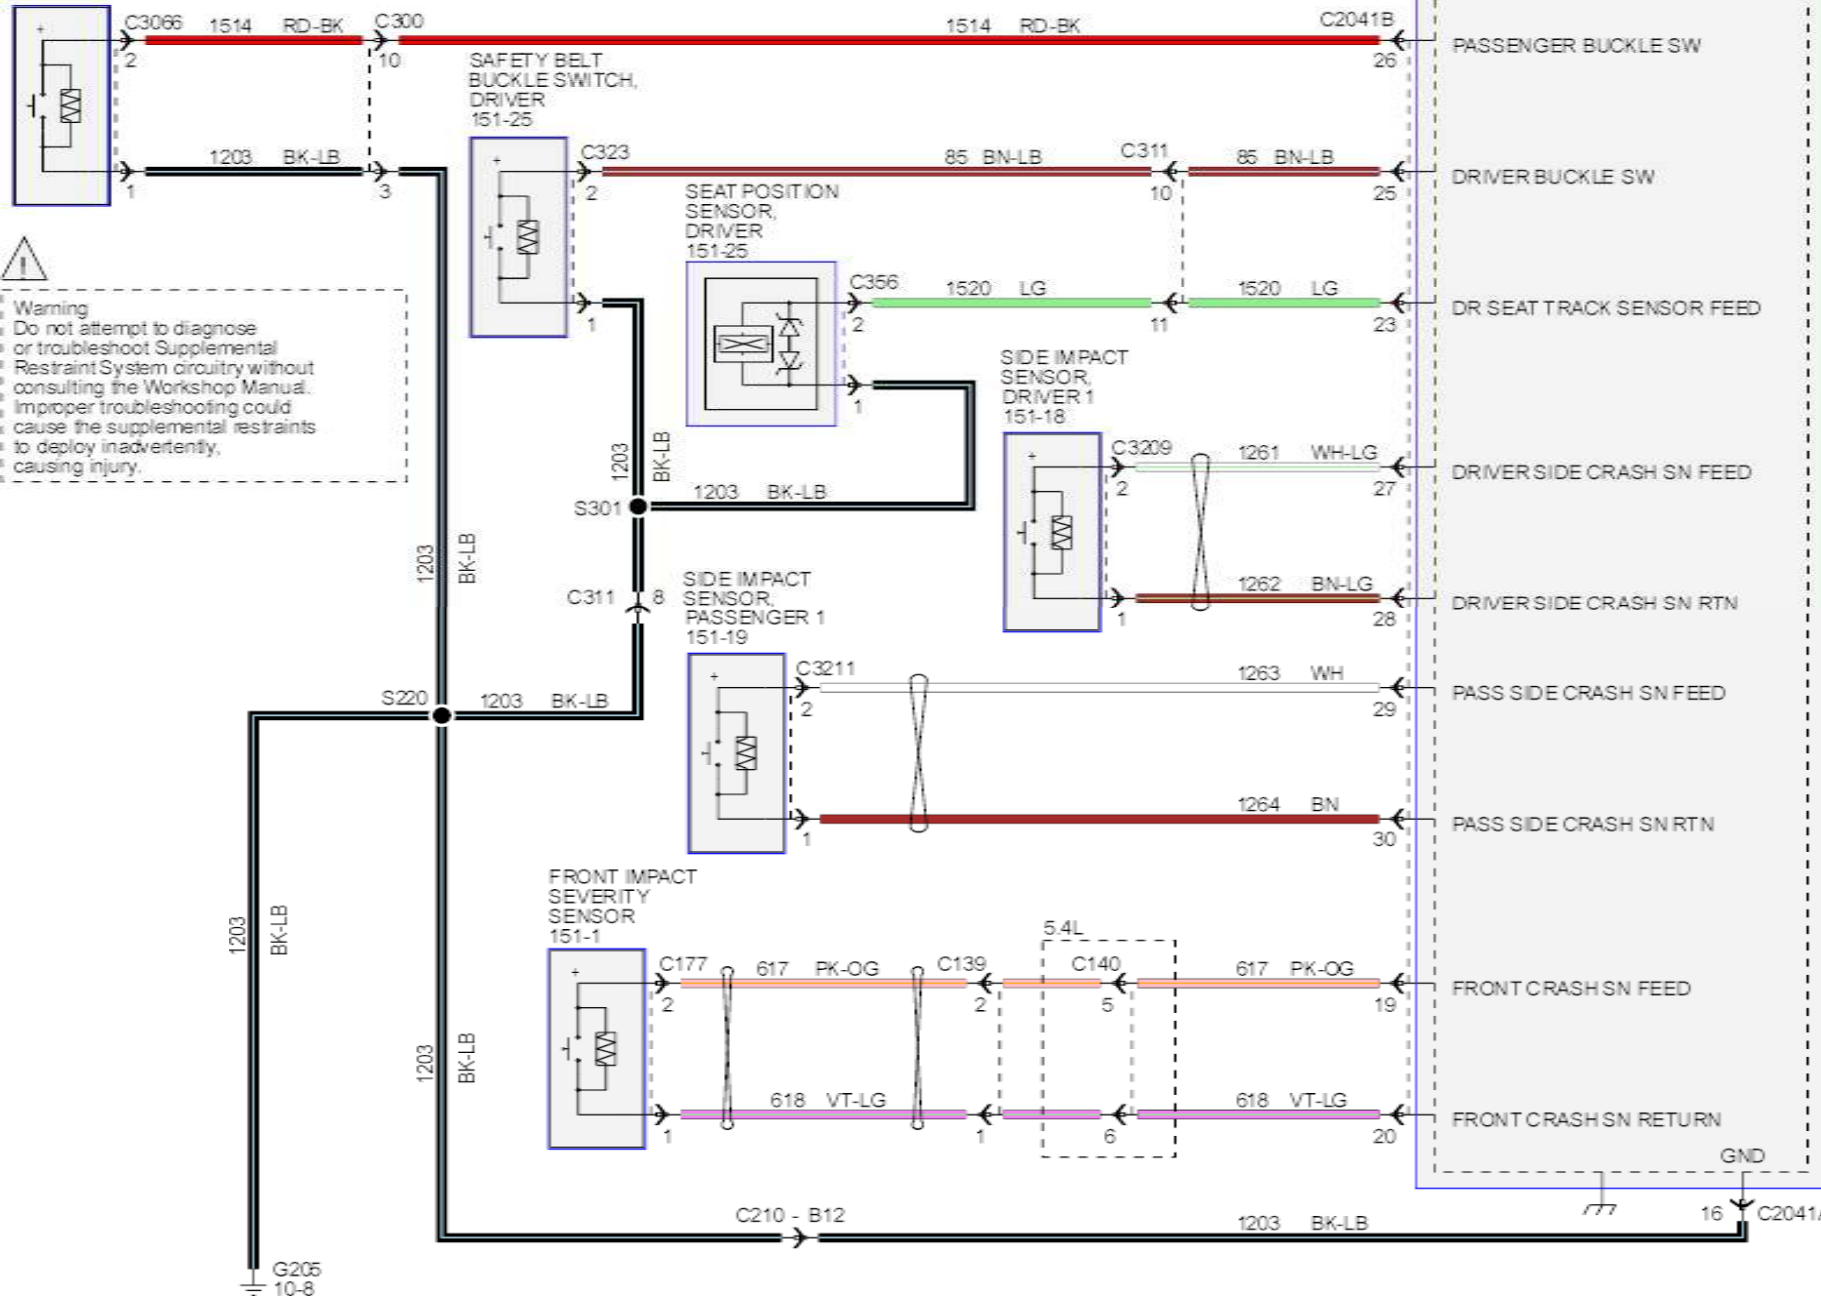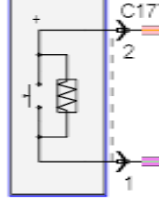

RESTRAINTS
CONTROL
MODULE (RCM)
151-13
151-17

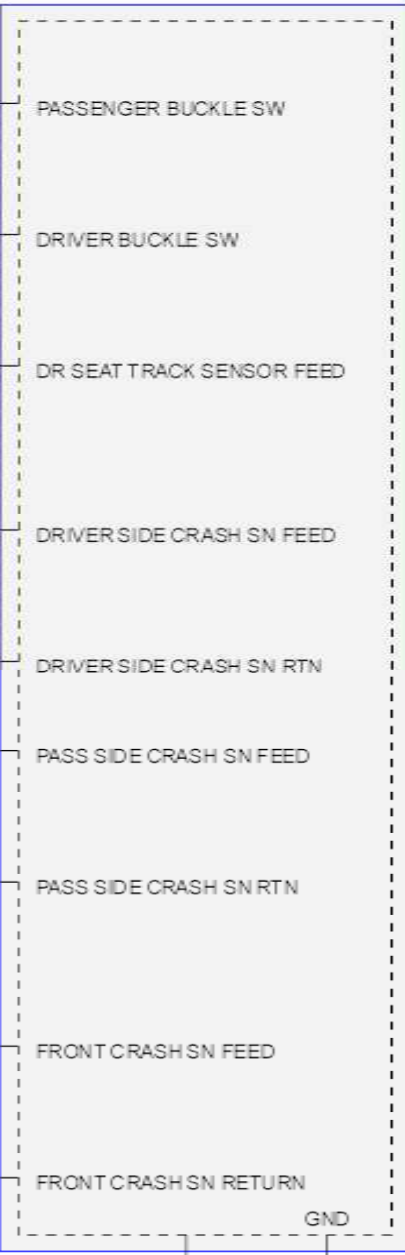

G205
10-8

C210 - B12

1203 BK-LB

GND

C2041A



Warning
Do not attempt to diagnose or troubleshoot Supplemental Restraint System circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the supplemental restraints to deploy inadvertently, causing injury.

