

This Quick Reference Guide is not intended to replace your vehicle Owner's Guide which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Guide carefully as you begin learning about your new vehicle and refer to the appropriate sections when questions arise.

All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Guide.

Ford Motor Company | Customer Relationship Center | P.O. Box 6248 | Dearborn, MI 48121
1-800-392-3673 (FORD) | (TDD for the hearing impaired: 1-800-232-5952)



9R3J19G217AA

FUSES

If your electrical components are not working properly, a fuse may have blown. For more detailed information, please refer to your Owner's Guide.

FUEL PUMP SHUT-OFF SWITCH

This device stops the electric fuel pump from sending fuel to the engine when your vehicle has had a substantial jolt. After an accident, if the engine cranks but does not start, this switch may have been activated. The fuel pump shut-off switch is located in the driver's footwell.

CHANGING THE TIRES

Your vehicle is equipped with either a temporary spare tire (with jack and tools) or a temporary mobility kit, which is located under the carpeted floor panel in the trunk. The temporary mobility kit contains a sealing compound (seals most punctures caused by nails or similar objects) and an air compressor to re-inflate the tire. Do not attempt to use this kit to repair large punctures or damage to the tire's sidewall and/or wheel. The mobility kit provides temporary sealing that will allow you to drive up to 120 miles at a maximum speed of 50 mph. After sealant use, the Tire Pressure Monitor System sensor and valve stem on the affected wheel must be replaced by an authorized Ford dealer. **NOTE** The sealant canister repairs only one tire. See your authorized dealer for replacement canisters. For complete details on how to change your tire or how to use the temporary mobility kit, please refer to the Roadside Emergencies chapter in your Owner's Guide.

TIRE PRESSURE

Your tire pressure is properly set at the dealership according to the recommended specifications found on the Safety Compliance Certification Label or Tire Label located on the edge of the driver's door. Check your tire pressure at least once a month and before long trips (including spare, if equipped). As an added safety feature, your vehicle has been equipped with a **TIRE PRESSURE MONITORING SYSTEM (TPMS)** that illuminates a low tire pressure warning light when one or more of your tires is significantly under-inflated. **WARNING** Improperly inflated tires can affect vehicle handling and can fail suddenly, possibly resulting in loss of vehicle control.

FUEL TANK CAPACITY
Your tank holds 16 gallons (60.6L) of fuel. For optimum performance use "Regular" unleaded fuel with a (R+M)/2 octane rating of at least 87. Do not use E85 fuels because your vehicle was not designed to run on fuels with more than 10% ethanol.

ROADSIDE ASSISTANCE
Your new Ford Mustang comes with the assurance and support of 24-hour emergency roadside assistance. Roadside assistance includes such services as: lockout assistance, limited fuel delivery, battery jump starts, changing a flat tire, towing and winch out. To receive roadside assistance in the United States, call 1 (800) 241-3673. In Canada, call 1 (800) 665-2006. For more information on coverage period and details of service, refer to your Roadside Assistance information card.

FORD MUSTANG
APRIL 2008
FIRST PRINTING
QUICK REFERENCE GUIDE

ESSENTIAL INFORMATION

AUDIO SYSTEM

CONVERTIBLE TOP

ADDITIONAL FEATURES

CLIMATE CONTROL



1 POWER / VOLUME

Press to turn ON or OFF. Turn the knob to increase or decrease volume.

2 LOAD BUTTON

To load a CD, press LOAD, and, when prompted, use the presets to select the desired slot. Press and hold LOAD to autobaud up to six CDs. Load CDs one at a time when prompted, label side up.

3 SEEK BUTTONS

Press to access the previous or next strong station or track. In satellite radio mode (if equipped), press to seek to the previous/next channel.

4 TEXT / SCAN BUTTON

In radio or CD/MP3 mode, press and hold for a brief sampling of stations or tracks. In CD/MP3 mode, press and release to display track, title, artist name, disc title and file name (if available). In satellite radio mode (if equipped), press and release to display the current song title.

5 TUNE / DISC SELECTOR

Press to manually move up or down the radio frequency or to the desired disc. Press and hold for fast advance.

6 MENU BUTTON

Use the MENU button to cycle through the possible modes (Bass, Treble, Fade, and Balance, among others). Then use SEEK or ▲/▼ to adjust the setting. Fade adjusts audio between the front and rear speakers and Balance adjusts between left and right speakers.

AUDIO SYSTEM

SETTING THE CLOCK

Press MENU until SELECT HOUR or SELECT MINS is displayed. Press SEEK or ▲/▼ to adjust hours/minutes.

SATELLITE RADIO CONTROLS (IF EQUIPPED)

7 AUX
Press AUX repeatedly to cycle through SAT1, SAT2 or SAT3 (satellite radio modes, if equipped) or LINE IN (auxiliary audio mode). Once satellite radio mode is active, you may then press MENU. When SATELLITE RADIO MENU appears in the display, press OK to enter the satellite radio menu.

SEEK

Press to access the previous or next strong station or track. In satellite radio mode (if equipped), press to seek to the previous/next channel.

TEXT / SCAN

In radio or CD/MP3 mode, press and hold for a brief sampling of stations or tracks. In CD/MP3 mode, press and release to display track, title, artist name, disc title and file name (if available). In satellite radio mode (if equipped), press and release to display the current song title.

MP3 TRACK / FOLDER MODE

Available only on MP3 discs in CD mode. Press to access previous/next folder.

NAVIGATION SYSTEM (IF EQUIPPED)

Your vehicle may be equipped with a navigation system. Before loading the map DVD, ensure that the vehicle is in neutral, with the parking brake applied and your hands are off the gearshift lever. For further information, refer to your Navigation Supplement.

CONVERTIBLE TOP

CONVERTIBLE (IF EQUIPPED)

Do not store articles behind rear seat. Articles stored in the convertible top stowage compartment may break

the rear glass window when the top is lowered. The convertible top can be lowered with the windows down. The windows automatically lower when lowering or raising the top. Do not lower the top when the top material is wet. **NOTE** The convertible top will not operate unless the vehicle is traveling under 3 mph (5 km/h).

REMOTE ENTRY SYSTEM

This feature allows you to lock or unlock the vehicle's doors without a key. It also allows you to release the trunk lid, activate a personal alarm, and arm or disarm the active anti-theft alarm system (if equipped). **NOTE** The Panic function will only operate when the ignition is turned off and the trunk lid release function only operates when the vehicle speed is less than 3 mph (5 km/h). Up to six remote transmitters can be programmed to your vehicle.

TO LOWER THE CONVERTIBLE TOP

1 Stop the vehicle completely. Turn the key to the ON position. Recommended: Run the vehicle's engine when lowering or raising the top to prevent draining the battery. 2 Ensure the convertible top stowage compartment behind the rear seat is empty and ready to receive the top. Ensure the convertible top outer surface is free of leaves and debris. 3 Unclamp the top from the windshield header at both the right and left sides by pulling each handle down and rearward until the handle clears the windshield header. **NOTE** If the top has not been lowered for a while and sticks to the windshield header, push the front of the top up slightly with your hand to loosen it. 4 Push the convertible top switch on the overhead console and hold until the windows are completely down and the top is completely stored.

TO RAISE THE CONVERTIBLE TOP

1 Stop the vehicle completely. Turn the key to the ON position. Recommended: Run the vehicle's engine when raising or lowering the top to prevent draining the battery. 2 Push and hold the convertible top switch until the windows lower completely and the top unfolds and moves forward toward the windshield header. 3 Open both handles before the top meets the windshield header. 4 Continue to use the convertible top switch to raise the top until it has reached the fully closed position flush to the header. The two pins under the forward edge of the top should seat in the matching holes in the header. 5 To fasten both handles securely, rotate the handles into the header on the top until they reach the full forward position and push up on the handle to the stowed position. Pulling down on the header at the center grip while closing the handles may assist in fastening the top. 6 Raise the rear windows first and then raise the front windows.

COMBINATION LAP AND SHOULDER BELTS

For easier access to the front safety belt for the front seat occupant, rotate the presenter arm toward the front of the vehicle until it locks into place. To access the second row seats, rotate the arm back to its original position against the trim panel.

REDUCING FOG BUILDUP


Place the airflow selector in the or position.

REDUCING HUMIDITY BUILDUP

Do not drive with the airflow selector in the OFF (0) position or with recirculated air engaged.

6 REAR DEFROST AND DEFOGGING

Ensure that the ignition is turned ON. Press the

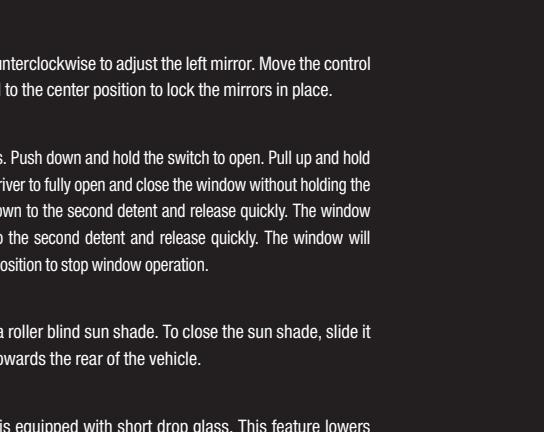

1 TEMPERATURE CONTROL

Rotate the knob to adjust the temperature of the airflow in the vehicle. The LED will illuminate. The rear defroster turns off automatically after 15 minutes or when the ignition is turned OFF. To manually turn off the rear defroster, push the control again.

2 MODE SELECTOR

Controls the source of airflow into the vehicle. You can choose floor , instrument panel or windshield defroster air vents, or combinations of these.

3 FAN SPEED

Rotate the knob to adjust the volume of air circulated in the vehicle.

4 MAX/A/C


Distributes recirculated air through the instrument panel vents to cool the vehicle. This re-cooling of the interior air is more economical and efficient. Set the temperature knob to full cold position. Set to highest fan speed initially, then adjust to maintain comfort.

5 A/C

Press to activate/deactivate air conditioning. Use with recirculated air to improve cooling performance. Engages automatically in MAX A/C, and .

6 REAR DEFROST AND DEFOGGING

Ensure that the ignition is turned ON. Press the

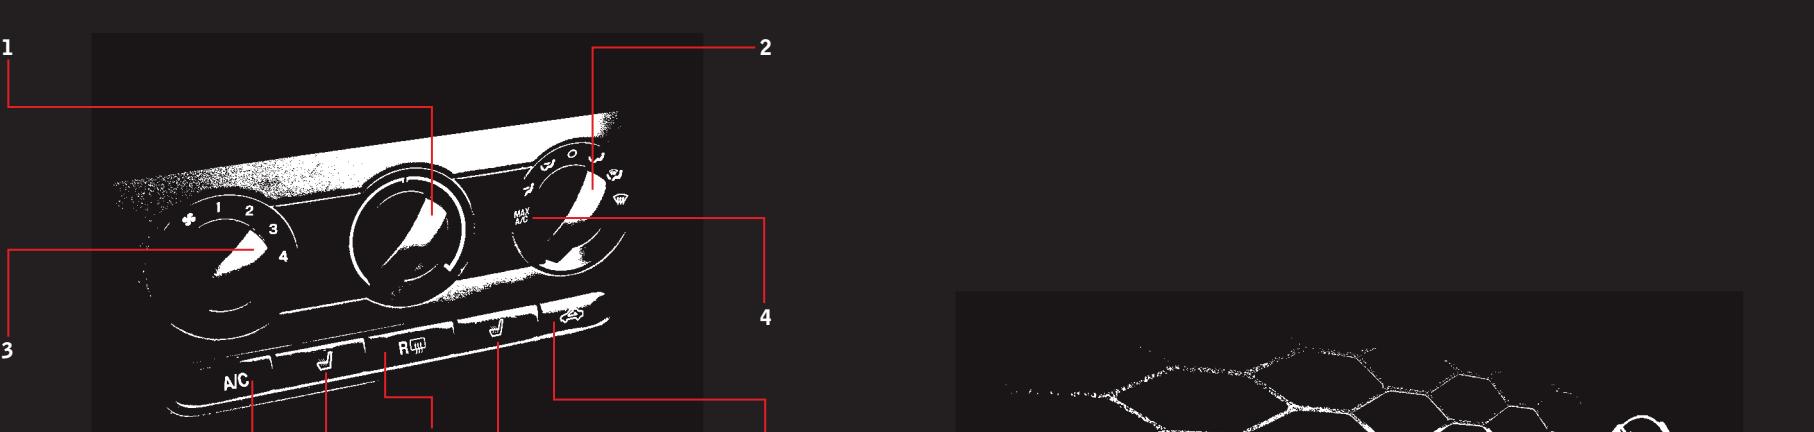

POWER SIDE VIEW MIRRORS

Rotate the control clockwise to adjust the right mirror or counter-clockwise to adjust the left mirror. Move the control in the direction you wish to tilt the mirror. Return the control to the center position to lock the mirrors in place.

POWER WINDOWS

Push or pull the rocker switches to open or close your windows. Push down and hold the switch to open. Pull up and hold the switch to close. Express Down and Express Up allows the driver to fully open and close the window without holding the control down. **Express Down:** Push the switch completely down to the second detent and release quickly. The window will open fully. **Express Up:** Pull the switch completely up to the second detent and release quickly. The window will automatically fully close. Momentarily press the switch to any position to stop window operation.

GLASS ROOF AND SUN SHADE (IF EQUIPPED)

Your vehicle may be equipped with a glass roof as well as a roller blind sun shade. To close the sun shade, slide it towards the front of the vehicle. To open, slide the shade towards the rear of the vehicle.

SHORT DROP GLASS (FRONT WINDOWS ONLY)

In order to improve door efforts and sealing, your vehicle is equipped with short drop glass. This feature lowers the glass when either door is opened. The glass returns to its closed position when the door is closed. For more detailed information, please refer to your Owner's Guide.

REMOTE ENTRY SYSTEM

This feature allows you to lock or unlock the vehicle's doors without a key. It also allows you to release the trunk lid, activate a personal alarm, and arm or disarm the active anti-theft alarm system (if equipped). **NOTE** The Panic function will only operate when the ignition is turned off and the trunk lid release function only operates when the vehicle speed is less than 3 mph (5 km/h). Up to six remote transmitters can be programmed to your vehicle.

TO LOWER THE CONVERTIBLE TOP

1 Stop the vehicle completely. Turn the key to the ON position. Recommended: Run the vehicle's engine when lowering or raising the top to prevent draining the battery. 2 Ensure the convertible top stowage compartment behind the rear seat is empty and ready to receive the top. Ensure the convertible top outer surface is free of leaves and debris. 3 Unclamp the top from the windshield header at both the right and left sides by pulling each handle down and rearward until the handle clears the windshield header. **NOTE** If the top has not been lowered for a while and sticks to the windshield header, push the front of the top up slightly with your hand to loosen it. 4 Push the convertible top switch on the overhead console and hold until the windows are completely down and the top is completely stored.

TO RAISE THE CONVERTIBLE TOP

1 Stop the vehicle completely. Turn the key to the ON position. Recommended: Run the vehicle's engine when raising or lowering the top to prevent draining the battery. 2 Push and hold the convertible top switch until the windows lower completely and the top unfolds and moves forward toward the windshield header. 3 Open both handles before the top meets the windshield header. 4 Continue to use the convertible top switch to raise the top until it has reached the fully closed position flush to the header. The two pins under the forward edge of the top should seat in the matching holes in the header. 5 To fasten both handles securely, rotate the handles into the header on the top until they reach the full forward position and push up on the handle to the stowed position. Pulling down on the header at the center grip while closing the handles may assist in fastening the top. 6 Raise the rear windows first and then raise the front windows.

COMBINATION LAP AND SHOULDER BELTS

For easier access to the front safety belt for the front seat occupant, rotate the presenter arm toward the front of the vehicle until it locks into place. To access the second row seats, rotate the arm back to its original position against the trim panel.

REDUCING FOG BUILDUP


Place the airflow selector in the or position.

REDUCING HUMIDITY BUILDUP

Do not drive with the airflow selector in the OFF (0) position or with recirculated air engaged.

6 REAR DEFROST AND DEFOGGING

Ensure that the ignition is turned ON. Press the

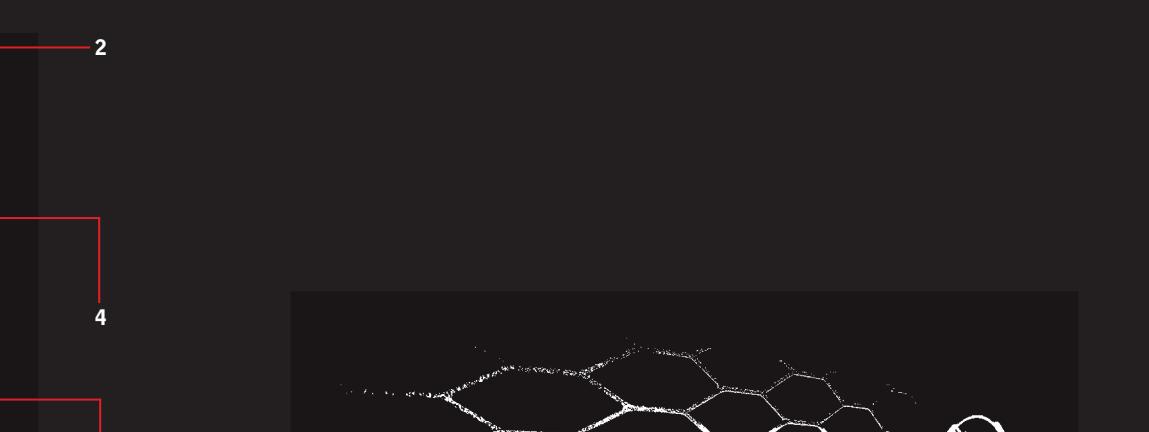


MUSTANG QUICK REFERENCE GUIDE 2009

15th Anniversary

How does it feel to own an American Icon?
Your 2009 Mustang is the newest member of a proud family of legendary road machines.
45 years of refinement and innovation have made your new Mustang one of the most exciting, comfortable, safest and smartest cars to ever roam the American road. This Quick Reference Guide was designed to help you get to know your new Mustang. It will allow you to familiarize yourself with many of your new Mustang's features and functions. For the most detailed information and important safety information refer to your Owner's Guide.
Use extreme caution when using any device or feature that may take your attention off the road. Your primary responsibility is the safe operation of the vehicle. Only use non-essential features and devices when it is safe to do so.

MUSTANG QUICK REFERENCE GUIDE 2009

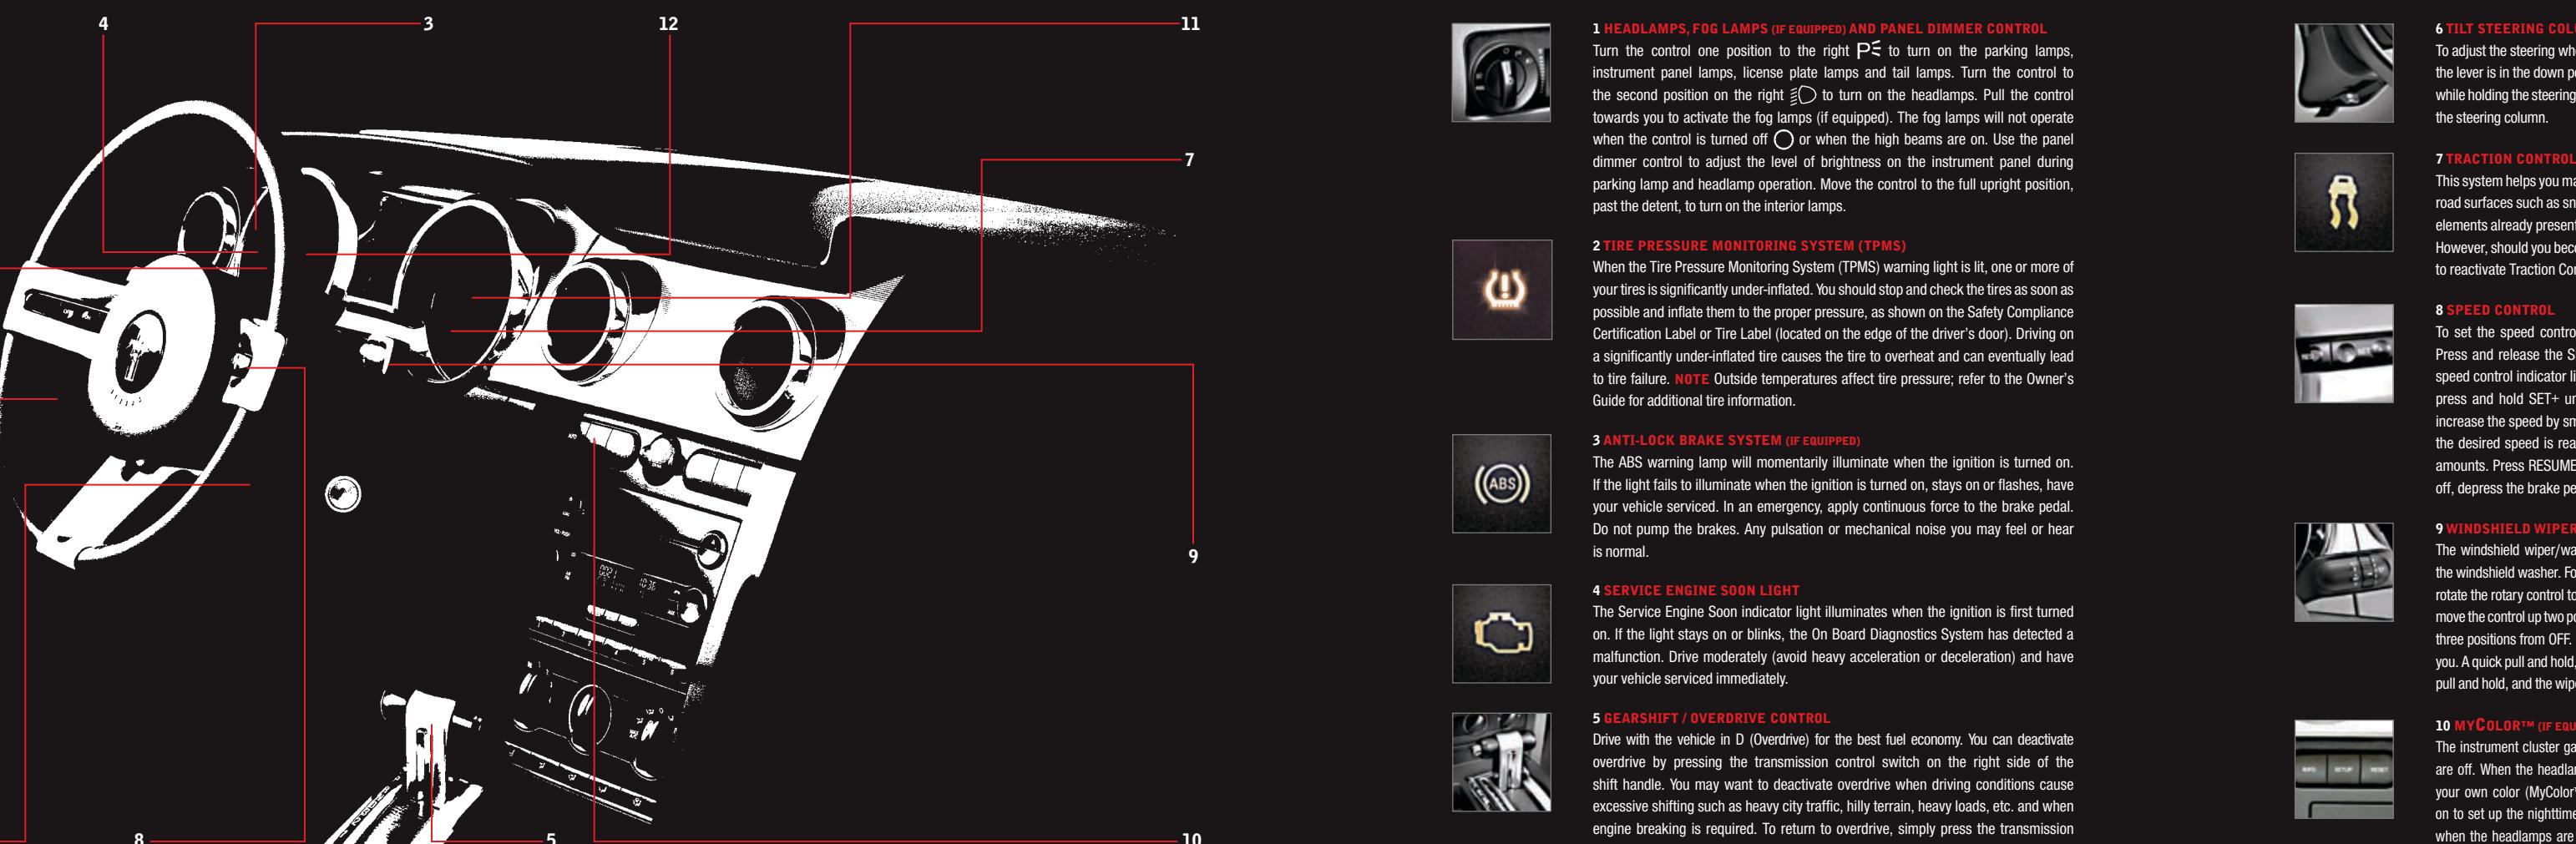

11

12

7

9

5

10

1

2

3

4

6

8

12

11

10

9

7

5

3

2

1

4

6

8

10

9

7

5

3

2

1

4

6

8

10

9

7

5

3

2

1

4

6

8

10

9

7

5

3

2

1

4

6

8

10

9

7

5

3

2

1

4

6

8

10

9

7

5

3

2

1

4

6

8

10

9

7

5

3

2

1

4

6

8

10

9

7

5

3

2

1

4

6

8

10

9

7

5

3

2

1

4

6

8

10

9

7

5

3

2

1

4

6

8

10

9

7

5

3

2

1

4

6

8

10

9

7

5

3

2

1

4

6

8

10

9

7

5

3

2

1

4

6

8

10

9

7

5

3

2

1

4

6

8

10

9

7

5

3

2

1

4

6

8

10

9

7

5

3

2

1

4

6

8

10

9

7

5

3

2

1

4

6

8

10

9

7

5

3

2

1

4

6

8

10

9

7

5

3

2

1

4

6

8

10

9

7

5

3

2

1

4

6