2009 Model Year Scheduled Maintenance Guide

	Vehic	le Id	entif	icatio	n N	umbe	er (V	/IN):							
Owner Name:															
Address:															
															_

All rights reserved. Reproduction by any means, electronic or mechanical including photocopying, recording or by any information storage and retrieval system or translation in whole or part is not permitted without written authorization from Ford Motor Company. Ford may change the contents without notice and without incurring obligation.

Copyright © 2008 Ford Motor Company

FIND YOUR WAY



Today's vehicles are more sophisticated than ever and need to be properly maintained to help ensure they operate at the highest level.

Additional Information Available on the Web

For lots of helpful tips and information on operating, maintaining, and servicing your Ford, Lincoln, or Mercury vehicle, visit www.genuineservice.com. You'll also find the Ask Ford online expert available 24/7 to answer questions, important warranty information, and resources to record your vehicle's service history online, register with us for important updates and specials, and find out what to do if you need roadside assistance. Again, that website is: www.genuineservice.com.

FIND YOUR WAY

Table of Contents	
General Owner's Information	General Owner's Information
Keep It Genuine	Keep It Genuine
Normal Schedule Trucks, Fullsize Vans & SUVs	Normal Schedule Trucks, Fullsize Vans & SUVs
Normal Schedule Cars & CUVs	Normal Schedule Cars & CUVs
Special Operating Conditions	Special Operating Conditions & Exceptions

GENERAL MAINTENANCE INFORMATION

Get the most from your vehicle with routine maintenance

Routine maintenance is the best way to help ensure you get the performance, dependability, long life and resale value you expect from your vehicle. This is exactly why we've put together the Scheduled Maintenance Guide. It outlines the services required to properly maintain your vehicle and when they should be performed. The focus is on maintaining your vehicle while it's running great, which goes a long way toward preventing major repairs and expenses later.

Here are a few suggestions to help you get started on the road to routine maintenance:

- Familiarize yourself with your vehicle by going through your Owner's Guide
- Take a few minutes to review this handy Scheduled Maintenance Guide
- Make it a habit to use this guide to record scheduled maintenance
- Consider your Ford and Lincoln Mercury Dealership for all your vehicle's needs

Protect your warranty!

Routine maintenance is not only the best way to help keep your vehicle running great, it's also the best way to protect your warranty. While maintenance and repair services may be performed by you or by any automotive service provider you choose, it is your responsibility to see that all scheduled maintenance is performed and that the materials used meet Ford Engineering specifications. Failure to perform scheduled maintenance specified in this guide will invalidate warranty coverage on parts affected by the lack of maintenance. We can't stress enough how important it is to keep records of all maintenance. This guide will help you do just that. Ford Motor Company will not deny a warranty claim simply because there is no documentation. However, damage or failures due to neglect or a lack of proper maintenance are not covered under warranty.

Keeping maintenance records is easy with the Scheduled Maintenance Guide

It's important to document the maintenance of your vehicle. Every time you bring your vehicle in for scheduled maintenance, be sure to present this guide and certify the work. Also record the date of service, mileage at the time of service, and attach your receipt. This will make record keeping easy and, should your vehicle ever require warranty coverage, you will have all the documentation to show you've properly maintained it.

Maintenance Interval

Ford Motor Company establishes recommended maintenance intervals based upon engineering testing to determine the most appropriate mileage to perform the various maintenance services. This protects your vehicle at the lowest overall cost to you. Ford Motor Company recommends that you not deviate from the maintenance schedules presented in this Scheduled Maintenance Guide.

Maxi	mvm	Oil (Chang	je In	terval

- ☐ Normal Schedule: 7,500 miles or 6 months, whichever occurs first.
- Special Operating Conditions: 5,000 miles, 6 months, or 200 hours of engine operation, whichever occurs first see appropriate schedule on page 42.

Motorcraft Premium Gold Engine Coolant

- 6 years or 105,000 miles change Premium Gold coolant (whichever comes first)
- 🗖 After initial change change Premium Gold coolant every 3 years or 45,000 miles (see page 48)

Determine which maintenance schedule to follow

It's important to follow the maintenance schedule that most closely mirrors your driving habits and the conditions under which you drive. For this reason, the Scheduled Maintenance Guide is divided into two basic maintenance schedules: the Normal Schedule (further segmented into Trucks, Fullsize Vans & SUVs and Cars & CUVs) and Special Operating Conditions

Determining which maintenance schedule is right for you is easy. For the most part, do you drive your Ford, Lincoln or Mercury vehicle under typical, everyday conditions? If so, follow the Normal Schedule Trucks, Fullsize Vans & SUVs, or Normal Schedule Cars & CUVs.

Special Operating Conditions

However, if one or more of the Special Operating Conditions outlined below better describes how you typically operate your vehicle, you will need to perform some maintenance services more often than the Normal Schedule recommends.

- Towing a trailer or carrying heavy loads
- Extensive idling and/or driving at low-speeds for long distances
- Driving in dusty conditions
- Off-road operation
- Use of E85 fuel 50% of the time or greater (flex fuel vehicles only)

Important: For further details and information regarding these Special Operating Conditions see page 42.

GENERAL MAINTENANCE INFORMATION

Exceptions

Some exceptions for specific vehicles and special applications are outlined below. In addition, you will find further information under *Exceptions* on page 47.

 Engine oil and Motorcraft Premium Gold Engine Coolant - time and mileage based interval

If you're unsure which maintenance schedule to follow, ask your Ford and Lincoln Mercury Dealership, or visit the Maintenance area of www.genuineservice.com.

Oils, Fluids and Flushing

In many cases, fluid discoloration is a normal operating characteristic and, by itself, does not necessarily indicate a concern or that the fluid needs to be changed. However, discolored fluids that also show signs of overheating and/or foreign material contamination should be inspected immediately by a qualified expert such as the factory-trained technicians at your Ford or Lincoln Mercury Dealership. Your vehicle's oils and fluids should be changed at the specified intervals or in conjunction with a repair. Flushing is a viable way to change fluid for many vehicle sub-systems during scheduled maintenance. It is critical that systems are flushed only with new fluid that is the same as that required to fill and operate the system, or using a Ford-approved flushing chemical.

Chemicals and Additives

Non-Ford approved chemicals or additives are not required for factory recommended maintenance. In fact, Ford Motor Company recommends against the use of such additive products unless specifically recommended by Ford for a particular application.

Your vehicle is very sophisticated and built with multiple complex performance systems. Every manufacturer develops these systems using different specifications and performance features. That's why it's important to rely on your Ford or Lincoln Mercury dealership to properly diagnose and repair your vehicle.



When planning your maintenance services, consider your Ford or Lincoln Mercury dealership for all your vehicle's needs.

Get the most from your service and maintenance visits

There are a lot of reasons why visiting your Ford or Lincoln Mercury Dealership for all your service needs is a great way to help keep your vehicle running great.

GENERAL MAINTENANCE INFORMATION

Convenience

Many Dealerships have extended evening and Saturday hours to make your service visit more convenient. How's that for quality service?

Factory-trained Technicians

Ford and Lincoln Mercury service technicians participate in extensive factory-sponsored certification training to help them become experts on the operation of your vehicle. Ask your Dealership about the training and certification their technicians have received.

Genuine Ford and Motorcraft Replacement Parts

Ford and Lincoln Mercury Dealerships use Ford and Motorcraft branded replacement parts. These parts meet or exceed Ford Motor Company's specifications, and we stand behind them. Maintenance parts installed at your Ford or Lincoln Mercury dealership carry a nationwide, 12-month, 12,000-mile parts and labor limited warranty. Your dealer can give you details.

Value Shopping for Your Vehicle's Maintenance Needs

Your dealership recognizes the competitive landscape of maintenance and light repair automotive services. With factory-trained technicians and one-stop service for everything from routine maintenance like oil changes and tire rotations to your most complex needs, Ford and Lincoln Mercury Dealerships offer outstanding value

General Owner's Information

OWNER CHECKS AND SERVICES

It is recommended that the following basic maintenance checks and inspections be performed at the designated time intervals. See your "Owner's Guide" for more information.

Check every month for all vehicles
 ☐ Check function of all interior and exterior lights. ☐ Check tires for wear and proper air pressure, including spare. ☐ Check engine oil fluid level.
Check windshield washer fluid level.
Check every six months for all vehicles
Check lap/shoulder belts and seat latches for wear and proper operation. Check that externally mounted spare tire is properly stowed (tight) (see your Owner's Guide). Check power steering fluid level. Check washer spray, wiper operation, and clean all wiper blades (replace blades as necessary). Check parking brake for proper operation. Check and lubricate all hinges, latches, door check straps (see dealer) and outside locks. Check and lubricate upper and lower sliding door tracks, if equipped. Check and clean sliding door contact switches, if equipped. Check and lubricate door rubber weatherstrips. Check and lubricate door rubber weatherstrips. Check and clean body and door drain holes. Check safety warning lamps (brake, ABS, air bag, safety belt) for operation. Check battery connections and clean if necessary. Check clutch fluid level, if equipped.
But have been been and
Retightening lug nuts
On vehicles equipped with dual rear wheels, retighten the wheel lug nuts to the specified torque at 100 miles (160 km), and again at 500 miles (800 km) of new vehicle operation and after any wheel disturbance (tire rotation, changing a flat tire, wheel removal, etc.).
Refer to Wheel Lug Nut Torque Specification in your Owner's Guide for the proper lug nut torque specification.

Factory Authorized Systems Checks

In the event your vehicle experiences a component related concern, please contact your Ford, Lincoln or Mercury dealership. The Ford Motor Company Trained Technicians who work at Ford, Lincoln or Mercury dealerships are specifically trained to understand your vehicle.

A proper repair begins with a thorough system check. Factory Authorized Systems Checks can ONLY be found at a Ford or Lincoln Mercury dealership. In some circumstances, the Technician may need to request your authorization to perform additional operations to determine the final diagnosis. The Technician's goal is to ensure that your vehicle is fixed right the first time, at the best value to you.

The following list represents several of the Factory Authorized Systems Checks available at participating Ford and Lincoln Mercury Dealerships:

- Climate Control
- Service Engine Soon Light
- All-Wheel Drive/Four-Wheel Drive
- Automatic Transmission
- Engine Cooling/Cabin Heating
- Suspension/Steering
- Charge/Start/Battery
- Wheel Alignment
- Brakes





And when your vehicle needs replacement parts, insist that only parts meeting Ford Motor Company's specifications are used. Genuine Ford and Motorcraft branded parts meet these specifications. You can find them at your Ford and Lincoln Mercury Dealership. Look for the following brand logos to ensure the parts installed on your vehicle meet Ford Motor Company Specifications.

KEEP IT GENUINE

Tires



Proper tire maintenance and replacement are critical to your vehicle's performance and helps keep you and your passengers safe. Only use replacement tires and wheels that are the same size, load index, speed rating and type (such as P-metric versus LT-metric or all-season versus all-terrain) as those originally provided by Ford. The recommended tire and wheel size may be found on either the Safety Compliance Certification Label or the Tire Label which is located on the B-Pillar or edge of the driver's door. If this information is not found on these labels then you should consult your Ford Dealer. Use of any tire or wheel not recommended by Ford can affect the safety and performance of your vehicle, which could result in an increased risk of loss of vehicle control, vehicle rollover, personal injury and death. Additionally the use of non-recommended tires and wheels could cause steering, suspension, axle or transfer case/power transfer unit failure. If you have questions regarding tire replacement, see an authorized dealer. When you need to replace your tires, please visit your Ford or Lincoln Mercury Dealership for name-brand tires and people who know your vehicle.

Batteries



The technicians at your Ford or Lincoln Mercury dealership can determine the health of your vehicle's battery during any service visit. The Motorcraft Tested Tough Max Series with its "long-life" design outlasted other long-life batteries by up to 200%. That's one reason why we stand behind this battery with a national, 3-year, free replacement warranty and prorated-cost replacement thereafter for up to 100 months and unlimited mileage. Should your battery need to be replaced, please consider a Motorcraft brand battery that meets your vehicle's Ford Motor Company specifications.

Brakes



Your Ford or Lincoln Mercury Dealership has the right brake parts for your vehicle and their factory-trained technicians know exactly how to install them. Ford Original Equipment and Motorcraft replacement brake pads, shoes, rotors and drums meet the stringent standards of Ford Motor Company engineers, and they're also Federal Motor Vehicle Safety Standard (FMVSS) compliant. In addition, all Ford Original Equipment replacement brake pads, shoes, rotors, and drums are vehicle tested for durability and noise suppression. The right brake parts and installation are essential to proper brake system operation.

KEEP IT GENUINE

Oil & Lubricants



It is important to follow a regular maintenance schedule for changing your vehicle's oil and lubricants. Motorcraft Oils and Lubricants meet the stringent standards set by Ford Motor Company. Motorcraft Oils are formulated to reduce engine friction, improve fuel economy, and protect against deposits and wear. The American Petroleum Industry certifies them, so you know Motorcraft oil stands up to the tests of both Ford and independent engineers.

Collision

An accident is an upsetting experience and collision repair is often complicated and confusing. Here are a few pointers to help you better understand the collision repair process and make sure your vehicle is properly repaired with the right parts. Properly repairing your vehicle will help maintain its value.

Your rights as a consumer

As a consumer, you are within your rights to insist on original equipment replacement parts. These genuine parts are made by the manufacturer to meet stringent criteria for fit, finish, structural integrity, corrosion protection and dent resistance, just like the parts that were originally on your vehicle. Insist on genuine Ford replacement parts.

The collision shop

Many Ford and Lincoln Mercury Dealerships offer collision repair services. Ask your selling dealership about their capabilities to help with collision repair.

MULTI-POINT INSPECTION

Parts

Genuine Ford Collision Parts are designed, engineered, and warranted by Ford Motor Company. See your dealer for limited warranty details. They are manufactured to the same specifications as those on your vehicle when it was built. The right replacement parts will help maintain the value of your vehicle.




Ford recommended scheduled maintenance — In order to keep your vehicle running right, it is important to have the systems on your vehicle checked regularly. This can help identify potential issues and prevent major problems. Ford Motor Company recommends the following multi-point inspection be performed at every scheduled maintenance interval to help ensure your vehicle keeps running great.

	MULTI-POINT INSPECTION - Recommended at every visit
	Check and top up fluid levels: brake, coolant recovery reservoir, manual and automatic transmission (if equipped with an underhood dipstick), power steering and window washer Inspect tires for wear and check air pressure, including spare. Check exhaust system for leaks, damage, loose parts and foreign material. Check battery performance. Check operation of horn, exterior lamps, turn signals and hazard warning lights. Check radiator, coolers, heater and air conditioning hoses.
	Inspect windshield washer spray and wiper operation.
	Check windshield for cracks, chips and pitting.
	Inspect for oil and fluid leaks. Inspect engine air filter.
	Inspect engine an inter. Inspect half shaft dust boots, if equipped. Check shocks and struts and other suspension components for leaks and damage.
1000	Inspect steering and linkage. Inspect accessory drive belt(s). Inspect clutch operation, if equipped.

MULTI-POINT INSPECTION

Be sure to ask your Ford or Lincoln Mercury Dealership Service Advisor or Technician about the multi-point vehicle inspection. It's a comprehensive way to perform a thorough inspection of your vehicle. It's your checklist that gives you immediate feedback on the overall condition of your vehicle. You'll know what's been checked, what's okay, as well as those things that may require future or immediate attention. The multi-point vehicle inspection is one more way to keep your vehicle running great!

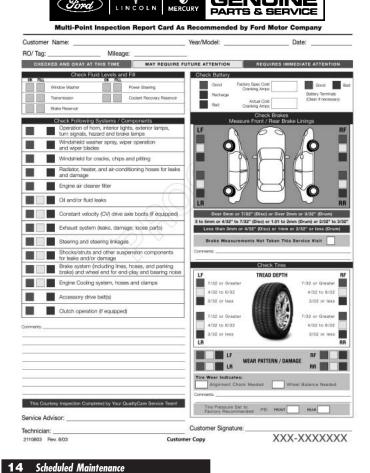

2009 Scheduled Maintenance Guide (smg) **Scheduled Maintenance Guide USA** (fus)

	7,500			
	Change engine oil and replace oil filter Rotate tires, inspect tires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended)		Dealer Validation:	
		RO#:	P&A Code: MILEAGE:	
		DATE:	WIILEAGE:	
	15.00	0 miles		
000 00 000	Change engine oil and replace oil filter Replace cabin air filter (if equipped) Inspect steering linkage, ball joints, suspension, tie rod ends, driveshaft, and U-joints (lubricate if equipped with Zerk fittings) Inspect engine cooling system and hoses Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system. Inspect half shaft boots (if equipped) Inspect exhaust system and heat shields Inspect automatic transmission fluid level (if		DEALER VALIDATION:	Normal Sche Trucks, Full Vans & SU
	equipped with an underhood dipstick) Inspect and lubricate 4x4 front axle U-joints	RO#:	P&A Code:	dule size Vs
	Rotate tires, inspect tires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended)	D ате:	MILEAGE:	

Normal Schedule Trucks, Fullsize Vans & SUVs

Tires

When your tires need to be replaced, consider visiting your Ford or Lincoln Mercury dealership for name-brand tires and people who know your vehicle. And if your Ford or Lincoln Mercury dealership sells the name-brand tire, they can also honor the tire manufacturer's warranty.



22,500 miles						
□ Change engine oil and replace oil filter □ Rotate tires, inspect tires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) □ Inspect the wheels and related components for abnormal noise, wear, looseness, or drag □ Perform multi-point inspection (recommended)		Dealer Validation:				
	RO#:	P&A Code:				
	DATE:	Mileage:				

Change engine oil and replace oil filter Inspect automatic transmission/transaxle fluid level on vehicles if equipped with dipstick. Consult your dealer for particular requirements. Replace cabin air filter (if equipped) Replace climate-controlled seat filter (if equipped) Replace engine air filter Replace fuel filter (except Escape, Mariner, F-Series [non Super Duty], Expedition/Navigator [short wheel base only], E-Series) Inspect steering linkage, ball joints, suspension, tie rod ends, driveshaft, and U-joints (lubricate if equipped with Zerk fittings) Inspect engine cooling system and hoses Inspect prake pads, shoes, rotors, drums, brake lines and hoses and parking brake system. Inspect half shaft boots (if equipped) Inspect and lubricate 4x4 front axle U-joints Rotate tires, inspect tires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for	DEALER VALIDATION: RO#: P&A Code: Date: Mileage:	Normal Sched Trucks, Fulls Vans & SU
should only rotate if unusual wear is noted)		Schedule Fullsize & SUVs
	0 miles	
 ☐ Change engine oil and replace oil filter ☐ Rotate fires, inspect fires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) ☐ Inspect the wheels and related components for abnormal noise, wear, looseness, or drag ☐ Perform multi-point inspection (recommended) 	Dealer Validation:	
	RO#: P&A Code: Date: Mileage:	

Oil & Lubricants

It is important to stick to a regular maintenance schedule for changing your vehicle's oil and lubricants. Motorcraft Oils and Lubricants meet the stringent standards set by Ford Motor Company. Motorcraft Oils are formulated to reduce engine friction, improve fuel economy, and protect against deposits and wear. The American Petroleum Industry certifies them, so you know Motorcraft oil stands up to the tests of both Ford and independent engineers.



Normal Schedule Trucks, Fullsize Vans & SUVs

Batteries

The technicians at your Ford and Lincoln Mercury dealership can determine the health of your vehicle's battery during any service visit. The Motorcraft Tested Tough Max Series with its "long-life" design outlasted other long-life batteries by up to 200%. That's one reason why we stand behind this battery with a national 3 year, free-replacement and prorated-cost thereafter up to 100 months with unlimited mileage. Should your battery need to be replaced, consider any one of the batteries that bear the Motorcraft name.



45,00	0 miles	
Change engine oil and replace oil filter Replace cabin air filter (if equipped) Inspect steering linkage, boll joints, suspension, tie rod ends, driveshaft, and U-joints (lubricate if equipped with Zerk fittings) Inspect engine cooling system and hoses Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system. Inspect half shaft boots (if equipped) Inspect automatic transmission fluid level (if equipped with an underhood dipstick) Inspect and lubricate 4x4 front axle U-joints Rotate tires, inspect tires for wear and measure	RO#:	Dealer Validation: P&A Code: Mileage:
tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended)		

Normal Schedule Trucks, Fullsize Vans & SUVs

52,50	00 miles	
 ☐ Change engine oil and replace oil filter ☐ Rotate tires, inspect tires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) ☐ Inspect the wheels and related components for abnormal noise, wear, looseness, or drag ☐ Perform multi-point inspection (recommended) 	RO#: Date:	DEALER VALIDATION: P&A CODE: MILEAGE:
60,00	00 miles	
Change engine oil and replace oil filter Change automatic transmission fluid on all vehicles equipped with the TorqShift transmission. Consult your dealer for your particular requirements. Replace cabin air filter (if equipped) Replace climate-controlled seat filter (if equipped) Replace engine air filter Replace fuel filter (except Escape, Mariner, F-Series [non Super Duty], Expedition/Navigator [short wheel base only], E-Series) Replace wheel bearing grease and grease seals on 4x2 front wheel bearings (if non-sealed bearings) Inspect steering linkage, ball joints, suspension, tie rod ends, driveshaft, and U-joints (lubricate if equipped with Zerk fittings) Inspect engine cooling system and hoses Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system. Inspect half shaft boots (if equipped) Inspect exhaust system and heat shields Inspect exhaust system for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended)	RO#: Date:	Dealer Validation: P&A Code: Mileage:

Brakes

Technicians at your Ford or Lincoln Mercury dealer can install the right brake parts for your vehicle. Ford Original Equipment and Motorcraft replacement brake pads, shoes, rotors, and drums meet the stringent standards of Ford Motor Company engineers.

In addition, all Ford Original Equipment replacement brake pads, shoes, rotors, and drums are vehicle tested for durability and noise suppression while being Federal Motor Vehicle Safety Standard (FMVSS) compliant. The right brake parts and repair work are essential to ensure your brake system operates as it should.



67,500 miles							
Change engine oil and replace oil filter Rotate fires, inspect tires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended)		Dealer Validation:					
, ,	RO#:	P&A Code:					
	DATE:	MILEAGE:					

Normal Schedul Trucks, Fullsize Vans & SUVs

Normal Schedule Trucks, Fullsize Vans & SUVs

75,00	75,000 miles						
Change engine oil and replace oil filter Replace cabin air filter (if equipped) Inspect steering linkage, ball joints, suspension, tie rod ends, driveshaft, and U-joints (lubricate if equipped with Zerk fittings) Inspect engine cooling system and hoses Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system. Inspect half shaft boots (if equipped)		Dealer Validation:					
Inspect exhaust system and heat shields Inspect automatic transmission fluid level (if equipped with an underhood dipstick) Inspect and lubricate 4x4 front axle U-joints Rotate tires, inspect tires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended)	RO#: Date:	P&A Code: Mileage:					
82,50	0 miles						
Change engine oil and replace oil filter Rotate tires, inspect tires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended)		Dealer Validation:					
	RO#: Date:	P&A Code: Mileage:					

90,00	00 miles
Change engine oil and replace oil filter Inspect automatic transmission/transaxle fluid level on vehicles if equipped with dipstick. Consult your dealer for your particular requirements. Replace cobin air filter (if equipped) Replace climate-controlled seat filter (if equipped) Replace engine air filter Replace fuel filter (except Escape, Mariner, F-Series [non Super Duty], Expedition/Navigator [short wheel base only],	Dealer Validation:
E-Series) Replace spark plugs Inspect steering linkage, ball joints, suspension, tie rod ends, driveshaft, and U-joints (lubricate if equipped with Zerk fittings) Inspect engine cooling system and hoses Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system. Inspect half shaft boots (if equipped) Inspect exhaust system and heat shields Inspect accessory drive belts Inspect and lubricate 4x4 front axle U-joints Rotate tires, inspect tires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended)	RO#: P&A Code: Date: Mileage:

Normal Schedule Trucks, Fullsize Vans & SUVs

Perform multi-point inspection (recommended)

Proposed in the service of the wheels and related components for abnormal noise, wear, looseness, or drag

Perform multi-point inspection (recommended)

Proposed in the service of the s

Normal Schedule Trucks, Fullsize Vans & SUVs

Change engine oil and replace oil filter Change manual transmission fluid (except Escape) Replace cobin air filter (if equipped) Replace PCV valve on all light trucks under 6,000 lbs. Gross Vehicle Weight (GVW) (except 3V engines) Change rear axle fluid only on vehicles equipped with DANA axles (see Special Operating Conditions on page 42 and Exceptions on page 47) Change Motorcraft Premium Gold Engine Coolant (see Exceptions on page 47 and Premium Gold Coolant Change Record on page 48) Inspect steering linkage, boll joints, suspension, tie rod ends, driveshaft, and U-joints (lubricate fequipped) Inspect broke pads, shoes, rotors, drums, broke lines and hoses and parking brake system. Inspect holf shaft boots (if equipped) Inspect exhaust system and hear shields Inspect exhaust system and hear shields Inspect automatic transmission fluid level (if equipped with an underhood dipstick) Inspect and lubricate 4x4 front axle U-joints Rotate fries, inspect tires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended) 112,500 miles DEALER VALIDATION: DEALER VALIDATION: DEALER VALIDATION:		105,0	00 miles	
Change Motorcraft Premium Gold Engine Coolant (see Exceptions on page 47 and Premium Gold Coolant Change Record on page 48) Inspect steering linkage, ball joints, suspension, tie rod ends, driveshaft, and U-joints (lubricate if equipped with Zerk fittings) Inspect engine cooling system and hoses Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system. Inspect half shaft boots (if equipped) Inspect exhaust system and heat shields Inspect automatic transmission fluid level (if equipped with an underhood dipstick) Inspect and lubricate 4x4 front axle U-joints Rotate tires, inspect fires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended) 112,500 miles The Alex Validation: Dealer Validation: Change engine oil and replace oil filter Rotate tires, inspect tires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Inspect the wheels and related components for abnormal noise, wear, looseness, or drag		Change manual transmission fluid (except Escape) Replace cabin air filter (if equipped) Replace PCV valve on all light trucks under 6,000 lbs. Gross Vehicle Weight (GVW) (except 3V engines) Change rear axle fluid only on vehicles equipped with DANA axles (see Special Operating Conditions on page 42 and Exceptions on page		
Coolant Change Record on page 48) Inspect steering linkage, ball joints, suspension, tie rod ends, driveshaft, and U-joints (lubricate if equipped with Zerk fittings) Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system. Inspect half shaft boots (if equipped) Inspect exhaust system and heat shields Inspect automatic transmission fluid level (if equipped with an underhood dipstick) Inspect and lubricate 4x4 front axle U-joints Rotate fires, inspect tires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended) 112,500 miles The Aler Validation: Dealer Validation: Dealer Validation:		Change Motorcraft Premium Gold Engine Coolant		Dealer Validation:
Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system. Inspect half shaft boots (if equipped) Inspect exhaust system and heat shields Inspect automatic transmission fluid level (if equipped with an underhood dipstick) Inspect and lubricate 4x4 front axle U-joints Rotate fires, inspect tires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended) 112,500 miles Change engine oil and replace oil filter Rotate fires, inspect tires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for abnormal noise, wear, looseness, or drag		Coolant Change Record on page 48) Inspect steering linkage, ball joints, suspension, tie rod ends, driveshaft, and U-joints (lubricate if equipped with Zerk fittings)		
Inspect half shaft boots (if equipped) Inspect exhaust system and heat shields Inspect automatic transmission fluid level (if equipped with an underhood dipstick) Inspect and lubricate 4x4 front axle U-joints Rotate fires, inspect fires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended) 112,500 miles Change engine oil and replace oil filter Rotate fires, inspect fires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for abnormal noise, wear, looseness, or drag		Inspect brake pads, shoes, rotors, drums, brake	RO#:	P&A Code:
Inspect automatic transmission fluid level (if equipped with an underhood dipstick) Inspect and lubricate 4x4 front axle U-joints Rotate fires, inspect fires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended) 112,500 miles Change engine oil and replace oil filter Rotate fires, inspect fires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for abnormal noise, wear, looseness, or drag			DATE:	MILEAGE:
equipped with an underhood dipstick) Inspect and lubricate 4x4 front axle U-joints Rotate fires, inspect fires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended) 112,500 miles Change engine oil and replace oil filter Rotate fires, inspect fires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for abnormal noise, wear, looseness, or drag				
Change engine oil and replace oil filter Rotate fires, inspect fires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for abnormal noise, wear, looseness, or drag	00 0	equipped with an underhood dipstick) Inspect and lubricate 4x4 front axle U-joints Rotate tires, inspect tires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for abnormal noise, wear, looseness, or drag		
Change engine oil and replace oil filter Rotate fires, inspect fires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for abnormal noise, wear, looseness, or drag				
		Change engine oil and replace oil filter Rotate tires, inspect tires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) Inspect the wheels and related components for		
RO#: P&A Code:				
Date: Mileage:			DATE:	MILEAGE:

	120,000 miles				
000	Change engine oil and replace oil filter Replace cabin air filter (if equipped) Replace climate-controlled seat filters (if				
	equipped) Replace engine air filter Replace fuel filter (except Escape, Mariner, F-Series [non Super Duty], Expedition/Navigator [short wheel base only], E-Series)				
	Replace PCV valve on all light trucks over 6,000 lbs. Gross Vehicle Weight (GVW) (except 3V engines)				
	Change automatic transmission fluid on all vehicles equipped with the TorqShift transmission. Consult your dealer for your		Dealer Validation:		
۵	particular requirements. Replace wheel bearing grease and grease seals on 4x2 front wheel bearings (if non-sealed bearings)		DEALER VALIDATION.		
	Inspect steering linkage, ball joints, suspension, tie rod ends, driveshoft, and U-joints (lubricate if equipped with Zerk fittings)	RO#:	P&A Code:		
	Inspect engine cooling system and hoses Inspect brake pads, shoes, rotors, drums, brake	DATE:	MILEAGE:		
_	lines and hoses and parking brake system.				
	Inspect half shaft boots (if equipped) Inspect exhaust system and heat shields				
	Inspect accessory drive belts Inspect automatic transmission fluid level (if				
_	equipped with an underhood dipstick) Inspect and lubricate 4x4 front axle U-joints				
]	Rotate tires, inspect tires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted)				
	Inspect the wheels and related components for				
	abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended)				

Normal Schedule Trucks, Fullsize Vans & SUVs

Normal Schedule Trucks, Fullsize Vans & SUVs

127,5	00 miles	
 ☐ Change engine oil and replace oil filter ☐ Rotate tires, inspect tires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) ☐ Inspect the wheels and related components for abnormal noise, wear, looseness, or drag ☐ Perform multi-point inspection (recommended) 	RO#: Date:	DEALER VALIDATION: P&A Code: Mileage:
Change engine oil and replace oil filter Replace cobin air filter (if equipped) Inspect steering linkage, ball joints, suspension, tie rod ends, driveshaft, and U-joints (lubricate if equipped with Zerk fittings)	00 miles	
☐ Inspect engine cooling system and hoses ☐ Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system. ☐ Inspect half shaft boots (if equipped) ☐ Inspect exhaust system and heat shields ☐ Inspect automatic transmission fluid level (if equipped with an underhood dipstick) ☐ Inspect and lubricate 4x4 front axle U-joints	RO#:	Dealer Validation: P&A Code:
□ Rotate tires, inspect tires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) □ Inspect the wheels and related components for abnormal noise, wear, looseness, or drag □ Perform multi-point inspection (recommended)	D ате:	Mileage:

142,500 miles				
 ☐ Change engine oil and replace oil filter ☐ Rotate tires, inspect tires for wear and measure tread depth (vehicles with dual rear wheels should only rotate if unusual wear is noted) ☐ Inspect the wheels and related components for abnormal noise, wear, looseness, or drag ☐ Perform multi-point inspection (recommended) 		Dealer Validation:		
	RO#:	P&A Code:		
	DATE:	Mileage:		

Tires

When your tires need to be replaced, consider visiting your Ford or Lincoln Mercury dealership for name-brand tires and people who know your vehicle. And if your Ford or Lincoln Mercury dealership sells the name-brand tire, they can also honor the tire manufacturer's warranty.



Normal Schedule Trucks, Fullsize Vans & SUVs

Normal Schedule Trucks, Fullsize Vans & SUVs

	150,00	00 miles	
	Change engine oil and replace oil filter Change Motorcraft Premium Gold Engine Coolant (see Exceptions on page 47 and Premium Gold		
	Coolant Change Record on page 48) Replace cabin air filter (if equipped) Replace climate-controlled seat filter (if equipped) Replace engine air filter Replace fuel filter (except Escape, Mariner, F-Series [non Super Duty], Expedition/Navigator [short wheel base only], E-Series)		
	Change automatic transmission/transaxle fluid and filter (filter not required on 6F35). (Except vehicles equipped with the TorqShift transmission).		
	Change manual transmission fluid (Escape) Change rear axle lubricant on all rear wheel drive (RWD) vehicles (see pages 42 and 47).		Dealer Validation:
	Change transfer case fluid (4x4 only) Change front differential fluid (4x4 only) Replace wheel bearings (if non-sealed bearings) Replace accessory drive belt(s) if not		
_	replaced in the last 100,000 miles (160,000 km)	RO#:	P&A Code:
	Inspect steering linkage, ball joints, suspension, tie rod ends, driveshaft, and U-joints (lubricate if	DATE:	Mileage:
	equipped with Zerk fittings)		
	Inspect engine cooling system and hoses Inspect brake pads, shoes, rotors, drums, brake		
_	lines and hoses and parking brake system.		
	Inspect half shaft boots (if equipped) Inspect exhaust system and heat shields		
1	Inspect PCV valve for flow (3V engines)		
	Inspect and lubricate 4x4 front axle U-joints		
	Rotate tires, inspect tires for wear and measure tread depth (vehicles with dual rear wheels		
	should only rotate if unusual wear is noted)		
	Inspect the wheels and related components for		
	abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended)		

Brakes

Technicians at your Ford or Lincoln Mercury dealer can install the right brake parts for your vehicle. Ford Original Equipment and Motorcraft replacement brake pads, shoes, rotors, and drums meet the stringent standards of Ford Motor Company engineers.

In addition, all Ford Original Equipment replacement brake pads, shoes, rotors, and drums are vehicle tested for durability and noise suppression while being Federal Motor Vehicle Safety Standard (FMVSS) compliant. The right brake parts and repair work are essential to ensure your brake system operates as it should.



7,500 miles				
 ☐ Change engine oil and replace oil filter ☐ Rotate tires, inspect tires for wear and measure tread depth ☐ Inspect the wheels and related components for abnormal noise, wear, looseness, or drag ☐ Perform multi-point inspection (recommended) 		Dealer Validation:		
	RO#:	P&A Code:		
	DATE:	Mileage:		

Normal Schedule
Cars & CUVs

15,00	0 miles	
☐ Change engine oil and replace oil filter ☐ Replace cabin air filter (if equipped) ☐ Inspect and lubricate steering linkage, ball joints, suspension, tie rod ends, driveshaft and U-joints		
(lubricate if equipped with Zerk fittings) Inspect engine cooling system and hoses Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system. Inspect half shaft boots (if equipped) Inspect exhaust system and heat shields Inspect automatic transmission fluid level (if		Dealer Validation:
equipped with an underhood dipstick)	RO#:	P&A Code:
☐ Rotate tires, inspect tires for wear and measure	DATE:	Mileage:
tread depth Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended)		

Tires

When your tires need to be replaced, consider visiting your Ford or Lincoln Mercury dealership for name-brand tires and people who know your vehicle. And if your Ford or Lincoln Mercury dealership sells the name-brand tire, they can also honor the tire manufacturer's warranty.



	22,50	0 miles		
00 0 0	Change engine oil and replace oil filter Rotate tires, inspect tires for wear and measure tread depth Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended)		DEALER VALIDATION:	
		RO#:	P&A CODE:	
		DATE:	MILEAGE:	
	30,00	0 miles		
	Change engine oil and replace oil filter Replace cabin air filter (if equipped) Replace climate-controlled seat filter (if equipped) Replace engine air filter (except Focus with PZEV engine) Replace fuel filter (Crown Victoria, Grand Marquis, Town Car and Mustang) Inspect and Iubricate steering linkage, ball joints, suspension, tie rod ends, driveshaft and U-joints (lubricate if equipped with Zerk fittings) Inspect engine cooling system and hoses Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system. Inspect half shaft boots (if equipped)	BO#:	DEALER VALIDATION: P&A Code:	
	Inspect exhaust system and heat shields	DATE:	MILEAGE:	Z
	Inspect transmission fluid level (if equipped with	DATE:	IVIILEAGE:	C Pr
	an underhood dipstick). Rotate tires, inspect tires for wear and measure			Normal Schedul Cars & CUVs
	tread depth			Sch Sch
	Inspect the wheels and related components for			edu
l_{\Box}	abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended)			S <u>u</u>

37.50	0 miles	
 □ Change engine oil and replace oil filter □ Rotate tires, inspect tires for wear and measure tread depth □ Inspect the wheels and related components for abnormal noise, wear, looseness, or drag □ Perform multi-point inspection (recommended) 		Dealer Validation:
	RO#:	P&A Code:
	DATE:	Mileage:
45,00	0 miles	
Change engine oil and replace oil filter Replace cabin air filter (if equipped) Inspect and lubricate steering linkage, ball joints, suspension, tie rod ends, driveshaft and U-joints		
(lubricate if equipped with Zerk fittings) Inspect engine cooling system and hoses Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system.		Dealer Validation:
☐ Inspect half shaft boots (if equipped) ☐ Inspect exhaust system and heat shields ☐ Inspect automatic transmission fluid level (if		
equipped with an underhood dipstick)	RO#:	P&A Code:
Rotate tires, inspect tires for wear and measure tread depth	DATE:	MILEAGE:
☐ Inspect the wheels and related components for		
abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended)		

Batteries

The technicians at your Ford and Lincoln Mercury dealership can determine the health of your vehicle's battery during any service visit. The Motorcraft Tested Tough Max Series with its "long-life" design outlasted other long-life batteries by up to 200%. That's one reason why we stand behind this battery with a national 3 year, free-replacement and prorated-cost thereafter up to 100 months with unlimited mileage. Should your battery need to be replaced, consider any one of the batteries that bear the Motorcraft name.



52,500 miles				
 ☐ Change engine oil and replace oil filter ☐ Rotate tires, inspect tires for wear and measure tread depth ☐ Inspect the wheels and related components for abnormal noise, wear, looseness, or drag ☐ Perform multi-point inspection (recommended) 		DEALER VALIDATION:		
	RO#: Date:	P&A Code: Mileage:		

Normal Schedule
Cars & CUVs

60,00	0 miles
Change engine oil and replace oil filter Replace climate-controlled seat filter (if equipped) Replace cabin air filter (if equipped) Replace engine air filter (except Focus with PZEV engine) Replace fuel filter (Crown Victoria, Grand Marquis, Town Car and Mustang) Inspect and lubricate steering linkage, ball joints, suspension, tie rod ends, driveshaft and U-joints (lubricate if equipped with Zerk fittings) Inspect engine cooling system and hoses Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system. Inspect brake pads, shoes (if equipped) Inspect exhaust system and heat shields Inspect transmission fluid level (if equipped with an underhood dipstick). Rotate fires, inspect fires for wear and measure tread depth Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended)	DEALER VALIDATION: RO#: P&A Code: Date: Mileage:
67.50	00 miles
 □ Change engine oil and replace oil filter □ Rotate tires, inspect tires for wear and measure tread depth □ Inspect the wheels and related components for abnormal noise, wear, looseness, or drag □ Perform multi-point inspection (recommended) 	Dealer Validation:
	RO#: P&A Code: Date: Mileage:

75,000 miles						
	Change engine oil and replace oil filter Replace cabin air filter (if equipped) Inspect and lubricate steering linkage, ball joints, suspension, tie rod ends, driveshaft and U-joints					
00 000	(lubricate if equipped with Zerk fittings) Inspect engine cooling system and hoses Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system. Inspect half shaft boots (if equipped) Inspect exhaust system and heat shields Inspect transmission fluid level (if equipped with		Dealer Validation:			
-	an underhood dipstick)	RO#:	P&A Code:			
	Rotate tires, inspect tires for wear and measure tread depth	DATE:	Mileage:			
	Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended)					

82,500 miles					
 Change engine oil and replace oil filter Rotate tires, inspect tires for wear and measure tread depth Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended) 		Dealer Validation:			
	RO#:	P&A Code:			
	DATE:	MILEAGE:			

Normal Schedul

90,000 miles							
Change engine oil and replace oil filter Replace climate-controlled seat filter (if equipped) Replace engine air filter (except Focus with PZEV engine) Replace cabin air filter (if equipped) Replace fuel filter (Crown Victoria, Grand Marquis, Town Car and Mustang) Replace spark plugs Inspect and lubricate steering linkage, ball joints, suspension, tie rod ends, driveshaft and U-joints (lubricate if equipped with Zerk fittings) Inspect engine cooling system and hoses Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system. Inspect half shaft boots (if equipped) Inspect drive belt(s) Inspect transmission fluid level (if equipped with an underhood dipstick). Rotate tires, inspect tires for wear and measure tread depth Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended)	RO#: Date:	DEALER VALIDATION: P&A CODE: MILEAGE:					
97,500 miles							
 ☐ Change engine oil and replace oil filter ☐ Rotate tires, inspect tires for wear and measure tread depth ☐ Inspect the wheels and related components for abnormal noise, wear, looseness, or drag ☐ Perform multi-point inspection (recommended) 		Dealer Validation:					
	RO#:	P&A Code:					
	DATE:	IVIILEAGE:					

	105,0	00 miles		
00 00	Change engine oil and replace oil filter Change Motorcraft Premium Gold Engine Coolant (see Exceptions on page 47 and Premium Gold Coolant Change Record on page 48) Replace cabin air filter (if equipped) Replace PCV valve (except 3V engines)			
	Inspect and lubricate steering linkage, ball joints, suspension, tie rod ends, driveshaft and U-joints (lubricate if equipped with Zerk fittings) Inspect engine cooling system and hoses Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system.		Dealer Validation:	
	Inspect half shaft boots (if equipped) Inspect exhaust system and heat shields	RO#:	P&A Code:	
ă	Inspect transmission fluid level (if equipped with	DATE:	Mileage:	
	an underhood dipstick) Rotate tires, inspect tires for wear and measure			
_	tread depth			
	Inspect the wheels and related components for			
	abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended)			
	112,5	00 miles		
	Change engine oil and replace oil filter Rotate tires, inspect tires for wear and measure tread depth		Dealer Validation:	

Change engine oil and replace oil filter
Rotate tires, inspect tires for wear and measure tread depth
Inspect the wheels and related components for abnormal noise, wear, looseness, or drag
Perform multi-point inspection (recommended)

RO#: P&A Code:
Date: Milleage:

Normal Schedule
Cars & CUVs

120,000 miles						
Change engine oil and replace oil filter Replace climate-controlled seat filter (if equipped) Replace engine air filter (except Focus with PZEV engine) Replace cabin air filter (if equipped) Replace fuel filter (Crown Victoria, Grand Marquis, Town Car and Mustang)						
Inspect and lubricate steering linkage, ball joints, suspension, tie rod ends, driveshaft and U-joints (lubricate if equipped with Zerk fittings) Inspect engine cooling system and hoses Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system. Inspect half shaft boots (if equipped)		Dealer Validation:				
☐ Inspect exhaust system and heat shields	RO#:	P&A Code:				
Inspect drive belt(s)	DATE:	Mileage:				
Inspect transmission fluid level (if equipped with an underhood dipstick).						
Rotate tires, inspect tires for wear and measure tread depth						
Inspect the wheels and related components for abnormal noise, wear, looseness, or drag						
Perform multi-point inspection (recommended)						

Oil & Lubricants

It is important to stick to a regular maintenance schedule for changing your vehicle's oil and lubricants. Motorcraft Oils and Lubricants meet the stringent standards set by Ford Motor Company. Motorcraft Oils are formulated to reduce engine friction, improve fuel economy, and protect against deposits and wear. The American Petroleum Industry certifies them, so you know Motorcraft oil stands up to the tests of both Ford and independent engineers.



Change engine oil and replace oil filter Rotate fires, inspect tires for wear and measure tread depth Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended) RO#: P&A Code: Date: MILEAGE:

Normal Schedule
Cars & CUVs

135.0	00 miles						
Change engine oil and replace oil filter Replace cabin air filter (if equipped) Inspect and lubricate steering linkage, ball joints, suspension, tie rod ends, driveshaft and U-joints (lubricate if equipped with Zerk fittings) Inspect engine cooling system and hoses Inspect brake pads, shoes, rotors, drums, brake lines and hoses and parking brake system. Inspect half shaft boots (if equipped) Inspect exhaust system and heat shields Inspect transmission fluid level (if equipped with an underhood dipstick) Rotate tires, inspect tires for wear and measure tread depth Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended)	DEALER VALIDATION: RO#: P&A Code: Date: Mileage:						
142,500 miles							
Change engine oil and replace oil filter Rotate tires, inspect tires for wear and measure tread depth Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended)		Dealer Validation:					
	RO#:	P&A CODE:					
	DATE:	Mileage:					

150,000 miles							
	Change engine oil and replace oil filter Change Motorcraft Premium Gold Engine Coolant (see Exceptions on page 47 and Premium Gold						
	Coolant Change Record on page 48) Change automatic transmission fluid Replace automatic transmission fluid filter (except 6F50, AWF-21 and FNR5 transaxles) Change manual transmission fluid Replace rear axle lubricant on all rear wheel drive (RWD) vehicles (see pages 42 and 47).						
	Replace climate-controlled seat filter (if equipped) Replace engine air filter (except Focus with PZEV engine)		Dealer Validation:				
	Replace cabin air filter (if equipped) Replace fuel filter (Crown Victoria, Grand Marquis, Town Car and Mustang)						
	Replace drive belt(s) if not replaced in the last 100,000 miles (160,000 km)	RO#:	P&A Code:				
	Inspect and lubricate steering linkage, ball joints, suspension, tie rod ends, driveshaft and U-joints (lubricate if equipped with Zerk fittings)	DATE:	MILEAGE:				
	Inspect engine cooling system and hoses Inspect brake pads, shoes, rotors, drums, brake						
	lines and hoses and parking brake system. Inspect half shaft boots (if equipped) Inspect exhaust system and heat shields Rotate tires, inspect tires for wear and measure						
	tread depth Inspect the wheels and related components for abnormal noise, wear, looseness, or drag Perform multi-point inspection (recommended)						

Normal Schedul

Items Needing Special Attention

If you operate your Ford/Lincoln/Mercury **primarily** in one of the more demanding **Special Operating Conditions** listed below, you will need to have some items maintained more frequently. If you only **occasionally** operate your vehicle under these conditions, it is not necessary to perform the additional maintenance. For specific recommendations, see your Ford or Lincoln Mercury Dealership Service Advisor or Technician.

Towing a trailer or using a camper or car-top carrier

Every 5,000 miles Rotate tires, inspect tires for wear and measure tread

depth

Inspect the wheels and related components for

abnormal noise, wear, looseness, or drag

Every 5,000 miles or 6 months Change engine oil and replace oil filter

Inspect and lubricate U-joints

Every 30,000 miles Change automatic transmission/transaxle fluid (not

required on 6R60/6R75/TorqŚhift transmissions) Replace wheel bearing grease and grease seals on 4x2 front wheel bearings (if non-sealed bearings)

Every 60,000 miles Change transfer case fluid

Change manual transmission fluid

As required Inspect and Jubricate U-joints

See Rear Axle Towing under Exceptions.

Extensive idling and/or low-speed driving for long distances as in heavy commercial use such as delivery, taxi, patrol car or livery

Every 5,000 miles Inspect brake system

Rotate tires, inspect tires for wear and measure tread

Inspect the wheels and related components for abnormal noise, wear, looseness, or drag

Lubricate control arm and steering ball joints (if

equipped with zerk fittings)

Every 5,000 miles or 6 months Inspect and lubricate U-joints Every 5,000 miles, 6 months or Change engine oil and replace oil filter 200 hours of engine operation

Every 15,000 miles Replace fuel filter (Crown Vic, Grand Marquis, Town Car, Mustang, Ranger, F-Super Duty, Expedition EL

and Navigator EL)

Every 30,000 miles Change automatic transmission/transaxle fluid (not required on 6R60/6R75/TorqShift transmissions) Replace wheel bearing grease and grease seals on 4x2 front wheel bearings (if non-sealed bearings)

Every 60,000 miles Replace spark plugs

Change transfer case fluid

As required Replace cabin air filter

Operating in dusty conditions such as unpaved or dusty roads

Every 5,000 miles Rotate tires, inspect tires for wear and measure tread

depth

Inspect the wheels and related components for

abnormal noise, wear, looseness, or drag

Every 5,000 miles or 6 months Change engine oil and replace oil filter

Inspect and lubricate U-joints

Every 15,000 miles Replace fuel filter (Crown Vic, Grand Marquis, Town Car, Mustang, Ranger, F-Super Duty, Expedition EL

and Navigator EL)

Every 30,000 miles Change automatic transmission/transaxle fluid (not

required on 6R6O/6R75/TorqShift transmissions)
Replace wheel bearing grease and grease seals on
4x2 front wheel bearings (if non-sealed bearings)

Every 50,000 miles Change manual transmission fluid

Change rear axle lubricant (E-450 and F-450/550

only)

Every 60,000 miles Change transfer case fluid

As required Replace engine air filter

Replace cabin air filter (if equipped)

Off-road operation

Every 5,000 miles or 6 months Change engine oil and replace oil filter

Rotate tires, inspect tires for wear and measure tread

Inspect the wheels and related components for abnormal noise, wear, looseness, or drag

Every 30,000 miles Change automatic transmission/transaxle fluid (not required on 6R60/6R75/TorqShift transmissions) Replace wheel bearing grease and grease seals on

4x2 front wheel bearings (if non-sealed bearings)

Every 50,000 miles Change manual transmission fluid

Change rear axle lubricant (E-450 and F-450/550

Every 60,000 miles Change transfer case fluid

As required Replace cabin air filter (if equipped)

Inspect and lubricate steering linkage ball joints and U-joints (if equipped with zerk fittings)

Use of E85 50% of the time or greater (flex fuel vehicles only)

Every 5,000 miles Rotate tires, inspect tires for wear and measure tread depth

> Inspect the wheels and related components for abnormal noise, wear, looseness, or drag

Every 3,000 miles Fill fuel tank with a full tank of regular unleaded fuel

Every 5,000 miles or 6 months Change engine oil and replace oil filter

Special Operating Conditions Log

	Dealer Validation:		Dealer Validation:
RO#:	P&A Code:	RO#:	P&A Code:
DATE:	MILEAGE:	DATE:	Mileage:
	DEALER VALIDATION:		Dealer Validation:
RO#:	P&A Code:	RO#:	P&A Code:
DATE:	MILEAGE:	DATE:	MILEAGE:
	Dealer Validation:		Dealer Validation:
RO#:	P&A Code:	RO#:	P&A Code:
DATE:	MILEAGE:	DATE:	Mileage:
	Dealer Validation:		Dealer Validation:
RO#:	P&A Code:	RO#:	P&A Code:
DATE:	MILEAGE:	DATE:	MILEAGE:
	Dealer Validation:		Dealer Validation:
RO#:	P&A Code:	RO#:	P&A Code:
DATE:	MILEAGE:	DATE:	Mileage:

In addition, there are several exceptions to the Normal Schedule. They are listed below:

Normal Vehicle Axle Maintenance

Rear axles and power take off (PTO) units containing synthetic lubricant and light duty trucks equipped with Ford-design axles are lubricated for life. These lubricants are not to be checked or changed unless a leak is suspected, service is required or the axle assembly has been submerged in water. The axle and PTO lubricant should be changed anytime the axle and PTO have been submerged in water. During extended trailer tow operation above 70°F ambient and wide open throttle for extended periods above 45 mph, non-synthetic rear axle lubricants should be replaced every 3,000 miles or 3 months, whichever occurs first. The 3,000 mile lube change interval may be waived if the axle was filled with 75W140 synthetic gear lubricant meeting Ford specification WSL-M2C192-A, part number F1TZ-19580-B or equivalent. Add friction modifier C8AZ-19B546-A (EST-M2C118-A) or equivalent for complete refill of Traction-Lok rear axles (see Owner's Guide for quantity). The axle lubricant should be changed anytime an axle has been submerged in water.

Police/Taxi/Livery Vehicle Axle Maintenance

Replace rear axle lubricant every 100,000 miles. Rear axle lubricant change may be waived if the axle was filled with 75W140 synthetic gear lubricant meeting Ford specification WSL-M2C192-A, part number FITZ-19580-B or equivalent. Add four ounces of additive friction modifier C8AZ-198546-A (EST-M2C118-A) or equivalent for complete refill of Traction-Lok rear axles. The axle lubricant should be changed anytime the axle has been submerged in water.

E-450 and F-450/550 Axle Maintenance

Replace rear axle lubricant every 100,000 miles under normal driving conditions on all E-450 and F-450/550 applications. For E-450 and F-450/550 vehicles operated at or near maximum Gross Vehicle Weights, the rear axle lubricant should be replaced every 50,000 miles. In addition, this 50,000 mile schedule should be observed when the vehicles are operated under the Special Operating Conditions, where noted, on page 42.

California Fuel Filter Replacement

If vehicle is registered in California, the California Air Resources Board has determined that the failure to perform this maintenance item will not nullify the emission warranty or limit recall liability prior to the completion of the vehicle's useful life. Ford Motor Company, however, urges you to have all recommended maintenance services performed at the specified intervals and to record all vehicle service.

Class A Motorhome

	Every	two	years	-	Change	brake	fluid	
--	-------	-----	-------	---	--------	-------	-------	--

Every 60,000 miles - Change automatic transmission fluid

ecial Operating Conditions & Exceptions

PREMIUM GOLD COOLANT CHANGE RECORD

Current mileage goes here =>
Add 45,000 miles to the current miles
Next change due at this mileage =>
Or
Today's date goes here =>
Add 3 years + 00 / 00 / 03
Date of next change =>
whichever comes first

Dealer Stamp

P & A CODE
R.O.#