


Preparation

1. Measure and mark the center of the opening for the third brake light. Cut out about ½" around the center
2. Add tape to the center of the third brake light, and mark it
3. Clean the trunk area with alcohol
4. Measure from the top of the wide stripe up to the edge of the paper backing to insure the width is even across the length of the decal. If it not, mark and cut it to size.
5. With the backing still on, tape it into place on the car. Adjust it so the spacing from the top of the trunk lid is the same width all the way across the trunk. This will be approximately ½" from the top of the trunk lid to the top of the wide stripe. Align the marks on the center of the decal with the marks on the third brake light.
6. Double tape the center of the decal on the top and the bottom.
7. Fill a spray bottle with about 2-3 drops of joy dishwashing liquid (without lotion) to 8 ounces of water.

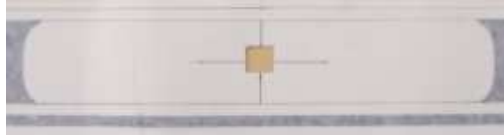

Installation

1. Gently fold back the left side of the decal (don't crease it) and tape to the decal paper on the right side.
2. Remove the rear backing from the left side of the decal starting from the left edge in a zero degree plain from the right to the left, and cut it off.
3. Spray the decal and the car sparingly with the soapy water solution. This will allow you to position the decal in the location that it was dry fitted in.
4. With a squeegee, using up and down motions across the decal; work your way from the third brake light to the driver's side of the vehicle.
5. After reaching the driver's side, swing the right side of the decal over the finished area, and remove the backing in the same manner. Spray with soapy solution and squeegee down in the same manner as before.
6. Leave the transfer tape in place until the decal has dried, putting the decal in the sun may hasten this step. After the drying process is complete, Peel the transfer tape from the left to the right in a zero degree plain, do not pull out or up, but keep the portion that you peel off flat against the remaining transfer tape.
7. With a razor blade, either cut the decal in the gap and fold into the trunk, or score the decal with a straight edge on each side of the gap and remove it.

