


## A-Pillar Trim Panel

**NOTE:** Convertible shown, coupe similar.

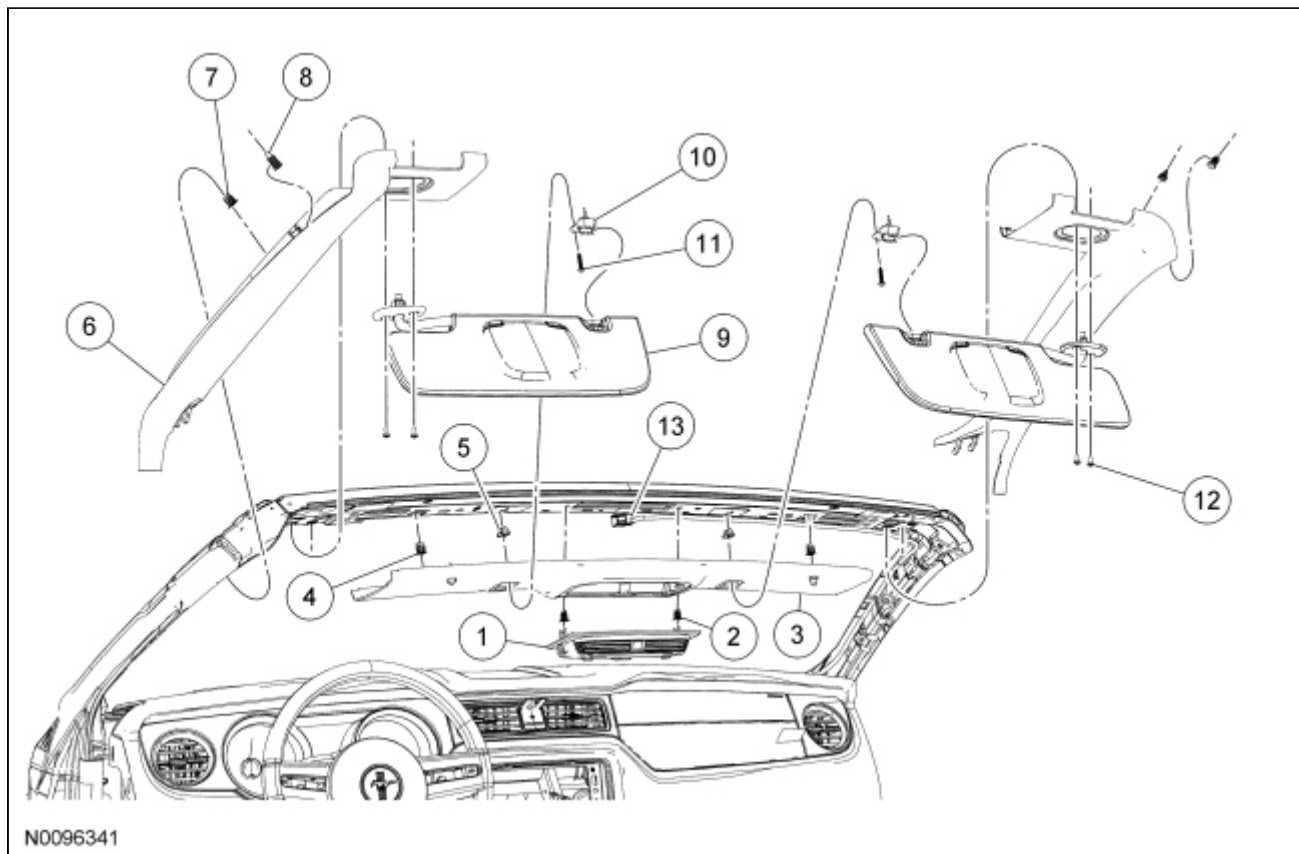

N0096341

Item	Part Number	Description
1	6351A58	Overhead console
2	W704021	Overhead console retainer (2 required)
3	760387	Header trim panel
4	W704021	Header trim panel retainer (2 required)
5	1704100	Sun visor clip insert (2 required)
6	7603599 LH/ 7603598 RH	A-pillar trim panel
7	W704021	A-pillar trim panel retaining clip
8	7603598	A-pillar trim panel pushpin
9	6304105 LH/ 6304104 RH	Sun visor
10	N806664	Sun visor clip screw
11	6304132	Sun visor clip
12	N806664	Sun visor screw (2 required)
13	14334	Overhead console wiring harness

### Removal and Installation

1. Remove the 2 sun visor screws and set the sun visor aside.
2. Pull outward on the A-pillar trim to release the retaining clip and the pushpin from the body.

3. Pull slightly down and straight back on the A-pillar to unhook the front lower portions of the A-pillar trim panel.
4. **NOTE:** To avoid any damage to the A-pillar trim panel, remove any clips from the body and attach them to the A-pillar trim panel.

To install, reverse the removal procedure.

---