


Sunshade

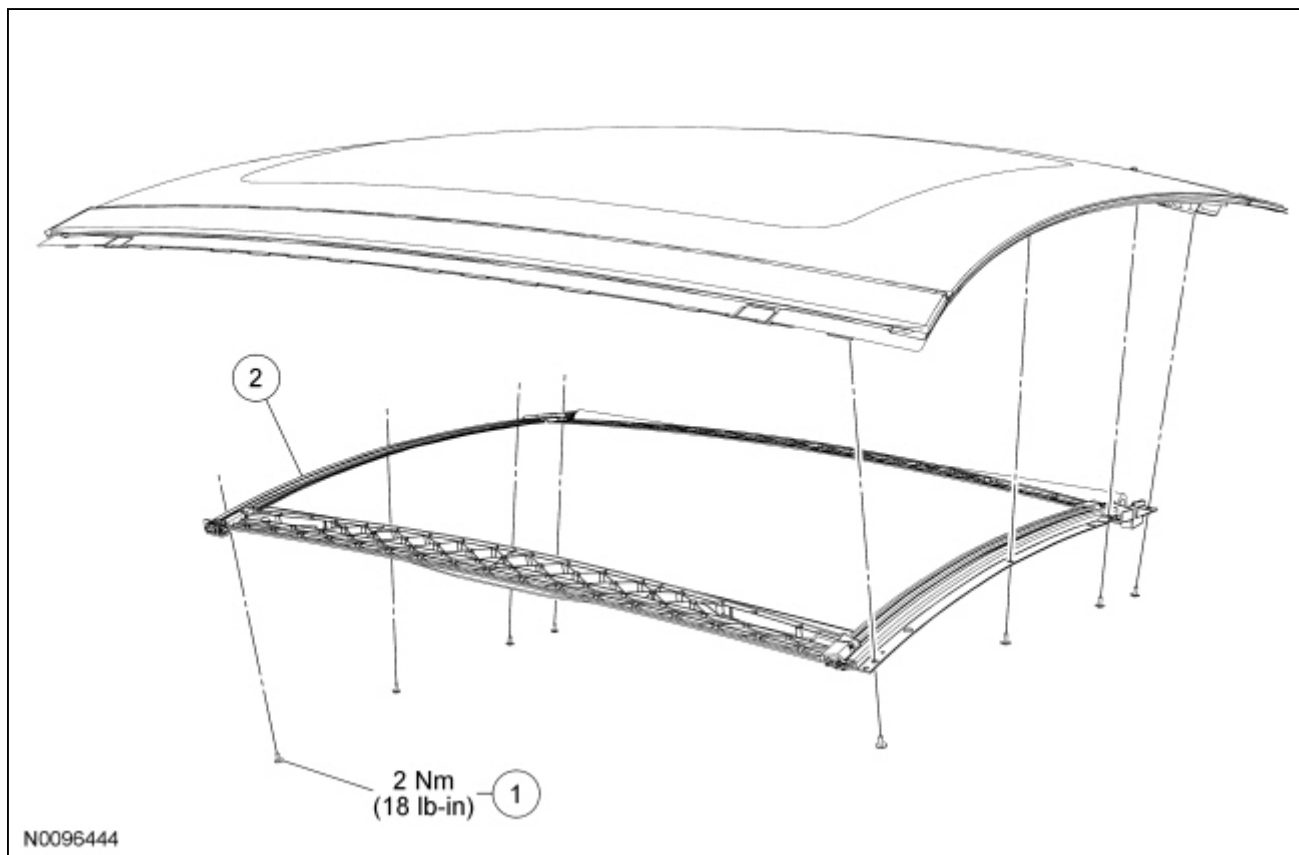

Item	Part Number	Description
1	W790159-S	Sunshade screw (8 required)
2	63502F74	Sunshade

Removal and Installation

1. Remove the headliner. For additional information, refer to [Headliner](#) in this section.
2. Remove the 8 sunshade screws.
 - To install, tighten to 2 Nm (18 lb-in).
3. To install, reverse the removal procedure.

