

**CARPET REMOVE AND REPLACE****TSB 06-26-2**

**FORD:**  
2005-2007 Mustang

**ISSUE**

Some 2005-2007 Mustang vehicles may need to have the carpet replaced for various issues. The following procedure will allow the carpet to be removed and replaced without removing the heater / air conditioning plenum, instrument panel, or restraints control module (RCM).

**ACTION**

Follow the Service Procedure to remove and install the carpet without removing the heater / air conditioning plenum or the RCM.

**SERVICE PROCEDURE****Removal**

1. Remove front and rear seats per Workshop Manual (WSM), Section 501-10.
2. Remove center console per WSM, Section 501-12.
3. Remove interior quarter trim panels per WSM, Section 501-05.
4. Remove door opening scuff plates per WSM, Section 501-05.
5. Remove front A pillar lower trim panels (kick panels) per WSM, Section 501-05.
6. Remove seat belt lower attachments (anchor bolts) per WSM, Section 501-20A.
7. Disconnect the carpet "J" channel retainers at the door openings.
8. Where carpet goes underneath the RCM on the center console and heater / air conditioning plenum assembly, use a sharp knife or scissors and cut the carpeting to allow the carpet to be pulled from underneath the components.
9. Remove carpet from vehicle.

**Installation**

1. Using scissors, cut the new carpeting in the areas shown. (Figure 1 and Figure 2)

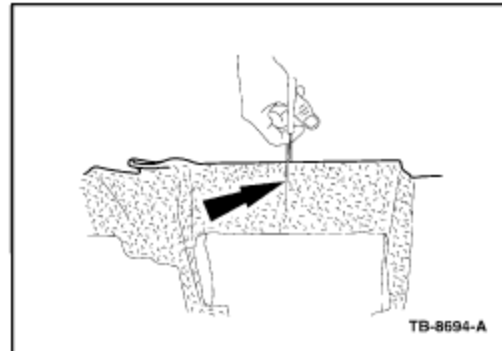


Figure 1 - Article 06-26-2

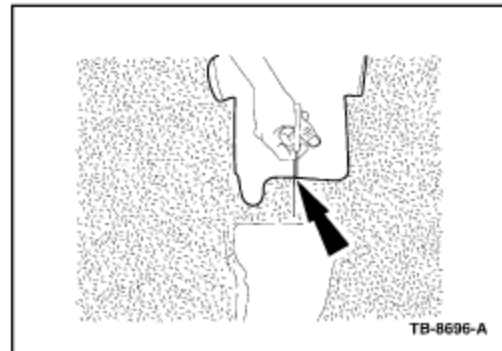


Figure 2 - Article 06-26-2

2. Clean the area using an alcohol swab or rag and then apply a thin layer of Motorcraft Trim and Weatherstrip Adhesive on the carpet backing. (Figure 3 and Figure 4) Allow to dry for 5 minutes.

**NOTE:** The information in Technical Service Bulletins is intended for use by trained, professional technicians with the knowledge, tools, and equipment to do the job properly and safely. It informs these technicians of conditions that may occur on some vehicles, or provides information that could assist in proper vehicle service. The procedures should not be performed by "do-it-yourselfers". Do not assume that a condition described affects your car or truck. Contact a Ford, Lincoln, or Mercury dealership to determine whether the Bulletin applies to your vehicle. Warranty Policy and Extended Service Plan documentation determine Warranty and/or Extended Service Plan coverage unless stated otherwise in the TSB article. The information in this Technical Service Bulletin (TSB) was current at the time of printing. Ford Motor Company reserves the right to supersede this information with updates. The most recent information is available through Ford Motor Company's on-line technical resources.

**PAGE 1**

**TSB 06-26-2 (Continued)**

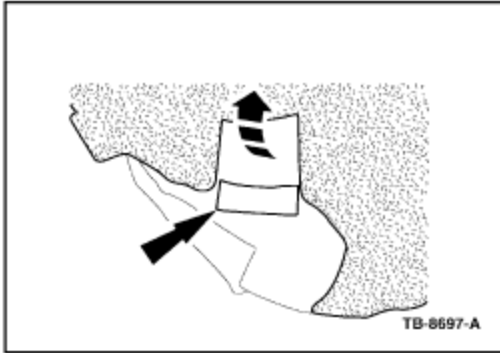


Figure 3 - Article 06-26-2

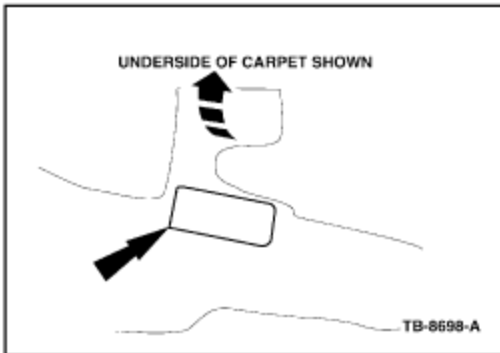


Figure 4 - Article 06-26-2

3. Apply a 3" by 1" strip of self adhesive Velcro (both halves-obtain locally) to the areas shown. (Figures 3 and 4)

4. Install carpeting into vehicle.
5. Remove the protective cover from the Velcro strip and carefully insert the carpet under the RCM. Press the Velcro into place.
6. Remove the protective cover from the Velcro strip and carefully insert the carpet under the heater/air conditioning plenum assembly. Press the Velcro into place.
7. Reinstall the seat belts, interior trim, and seats per WSM 501-20A.

PART NUMBER	PART NAME
TA-14-A	Trim and Weatherstrip Adhesive

**WARRANTY STATUS:** Eligible Under Provisions Of  
New Vehicle Limited  
Warranty Coverage

OPERATION	DESCRIPTION	TIME
062602A	2005-2007 Mustang: Replace Carpet Following The Service Procedure (Do Not Use With 13000A, 13000B, 04536A, 04536B, 61704A, 13208A)	1.9 Hrs.

**DEALER CODING**

BASIC PART NO.	CONDITION CODE
7013000	12