
Knock Sensor (KS) — 4.0L SOHC

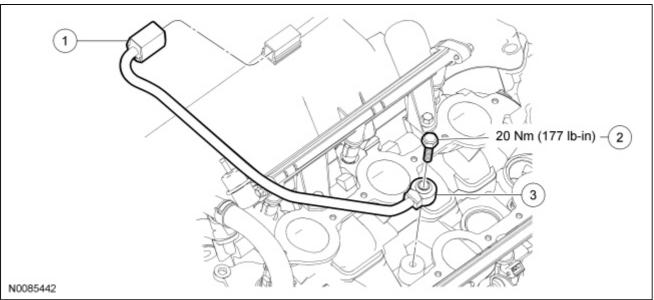

Item	Part Number	Description		
1	14A624	Knock Sensor (KS) electrical connector (part of 12B637)		
2	W500225	KS bolt		
3	12A699	<u>KS</u>		

Removal and Installation

- 1. Remove the intake manifold. For additional information, refer to Section 303-01A.
- 2. Disconnect the Knock Sensor (KS) electrical connector.
- 3. Remove the bolt and the KS.
 - To install, tighten to 20 Nm (177 lb-in).
- 4. To install, reverse the removal procedure.