
## **Speaker Enclosure**

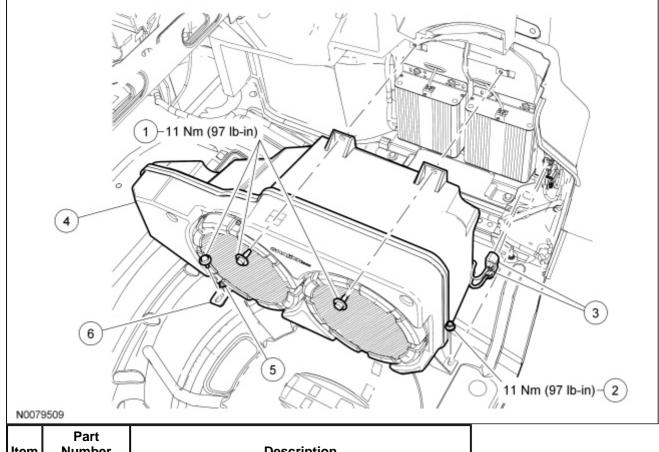

ltem	Number	Description
1	W505433	Speaker enclosure bolts (3 required)
2	W705047	Speaker enclosure nut
3	_	Speaker enclosure electrical connectors (part of 14N128)
4	19A067	Speaker enclosure
5	W505416	L-bracket screws (2 required)
6	19B187	L-bracket

## **Removal and Installation**

- 1. Remove the 3 speaker enclosure bolts.
  - To install, tighten to 11 Nm (97 lb-in).
- 2. Remove the nut and the speaker enclosure.
  - To install, tighten to 11 Nm (97 lb-in).
  - Disconnect the electrical connectors.
- 3. To install, reverse the removal procedure.