


Door

NOTE: Front door shown, rear door similar.

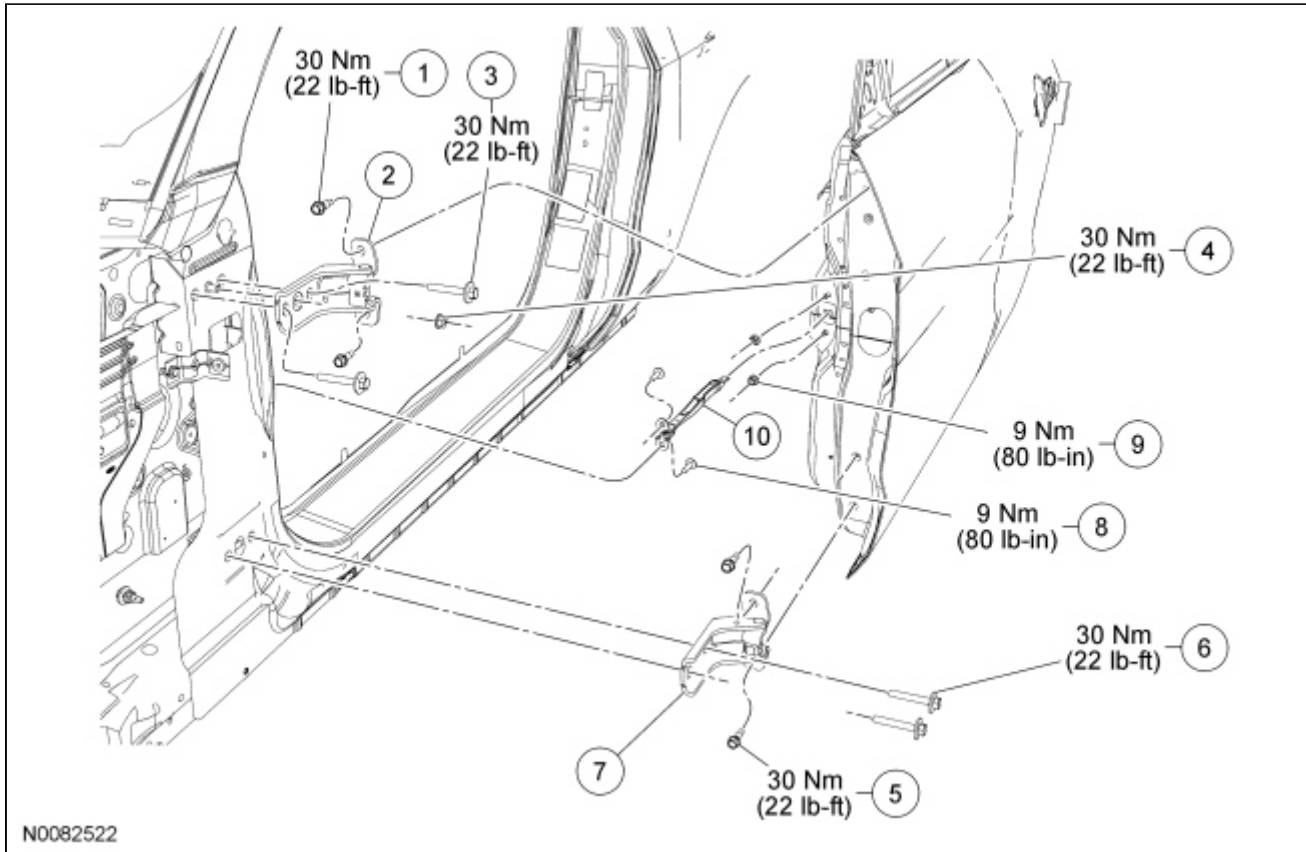

Item	Part Number	Description
1	W710941	Front door hinge-to-door bolt
2	6322800	Front door upper hinge
3	W706289	Front door hinge-to-body bolt
4	W520111	Front door hinge-to-body nut
5	W710941	Front door hinge-to-door bolt
6	W706289	Front door hinge-to-body bolt
7	6322810	Front door lower hinge
8	W706897	Door check arm bolt
9	W520111	Door check arm nut
10	6323552	Door check arm

Removal and Installation

- Remove the door check arm bolts.
 - To install, tighten to 9 Nm (80 lb-in).
- NOTICE:** To minimize the possibility of cross threading, hand start all fasteners during the installation.

NOTICE: To avoid damaging the door, this step requires the help of an assistant.

Mark the position of each hinge and remove the hinge-to-door bolts.

- To install, tighten to 30 Nm (22 lb-ft).
3. Disconnect the door electrical connector at the A-pillar.
 4. Remove the front door.
 5. To install, reverse the removal procedure.
 - If necessary, align the door. For additional information, refer to [Door Alignment](#) in this section.
-