
Window Glass Adjustment — Rear Quarter, Convertible

NOTE: Make sure the front door glass is adjusted correctly before adjusting the rear quarter glass. Window glass on convertible top vehicles needs to be aligned/adjusted as a system. The rear quarter glass must be correctly aligned to the front door glass and the convertible top for correct operation. For additional information, refer to <u>Window Glass Adjustment — Front Door</u> in this section.

- 1. Remove the rear quarter trim panel. For additional information, refer to Section 501-05.
- 2. With the convertible top in the CLOSED position, lower the front door and quarter window glass to the fully OPEN position.
- 3. Remove the rear side rail seal from the convertible top rear weatherstrip retainer channel.
- 4. Raise the front door and quarter glass to the fully CLOSED position.
- 5. **NOTE:** Make sure the front door glass is flush to the rear quarter glass seal (division bar) or outboard no more than 2 mm (0.08 in).


Check the quarter glass-to-convertible top weatherstrip retainer alignment. There should be a 4 to 5 mm (0.16 to 0.19 in) gap between the quarter glass and the weatherstrip retainer.

• If necessary, use one or more of the available quarter glass jackscrews. Loosen the lock nut, adjust the jackscrew to position the glass inboard/outboard and tighten the lock nut.

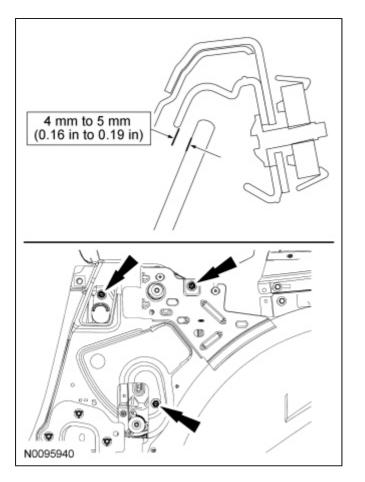

- 6. Loosen the 2 rear quarter window glass bolts just enough to allow some glass movement.
 - Adjust the quarter glass to be inset into the weatherstrip retainer 4 to 6 mm (0.16 to 0.24 in) while maintaining a constant 4 to 6 mm (0.16 to 0.24 in) gap between the rear quarter window glass seal (division bar) and the edge of the door glass.

• Tighten the 2 rear quarter window glass bolts to 10 Nm (89 lb-in).

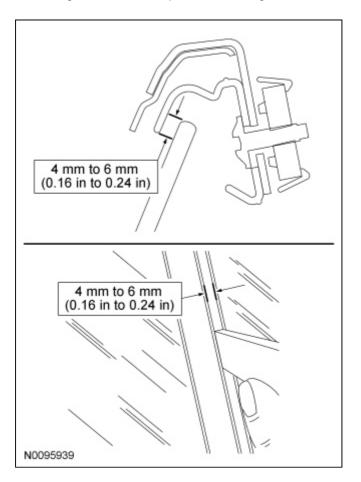

- 7. Lower the front door and quarter glass to the fully OPEN position.
- 8. Install the rear side rail seal into the convertible top rear weatherstrip retainer channel.
- 9. Install the rear quarter trim panel. For additional information, refer to Section 501-05.